




GoLabel On-line Help User's Manual

Contents

1.	Introduction.....	1
1.1	Startup.....	1
1.2	Main Display Screen.....	1
2.	Working Environment	2
2.1	General	2
2.2	Command Area.....	2
3.	GoLabel Tool Sets	3
3.1	Generic Toll Set.....	3
3.2	Object Tool Set	5
4.	General Operation.....	6
4.1	Creating First Label.....	6
4.2	Open an Existing File	7
4.3	Change Printer Setting	8
4.4	Setup Database Printing	9
4.5	Select Label Size and Media Type	11
4.6	Printer Interface Setup.....	14
4.7	Text Setup - Key in a Text into the Label	16
4.8	Using the Fonts Provided by Windows.....	19
4.9	Create a Barcode.....	21
4.10	Drawing Line, Rectangle and Circle	42
4.11	Create Graphic.....	49
4.12	Lock Object.....	51
5.	Advance Operation.....	52
5.1	Command Format.....	52
5.2	Using Serial Number.....	53
5.3	Using Variable.....	56
5.4	Date Time setting	59
5.5	Database Linkage.....	62
5.6	Printer with LAN Port	66
5.7	Download Graphic/Font/Label/DBF/Cmd.....	68
5.8	USB Disk Access Function.....	74
6.	Barcode Application	80
6.1	EAN-128 / GS1 Databar with AI.....	80
7.1	Printer Control	83
7.2	Virtual Terminal	84

1. Introduction

1.1 Startup

Click [Begin] on Windows Desk and select "GoLabel" software program to run it. Or, just click the Icon  on the Windows desk, and start to execute GoLabel program.

1.2 Main Display Screen


There are three tool sets and two working areas on GoLabel main display screen when it startup:

1) Tool Set:

- Either on the top tool set
- Object tool set on the left side

2) Working Area:

- Label Design area
- Command area

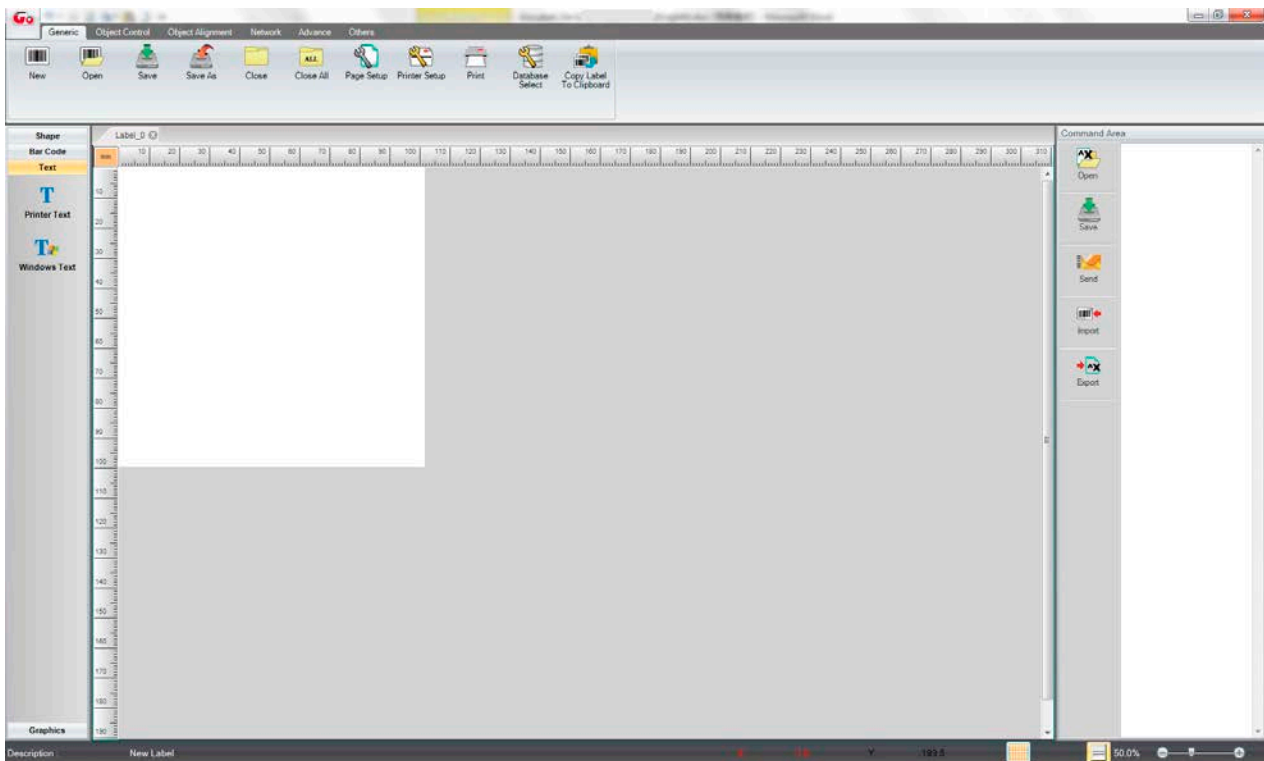

2. Working Environment


2.1 General

With the friendly design, user clicks the icon  to open a new file for label design and editing.

There are two working pads on the screen. The left pad is for label design area, right side of pad is for command area. In label design area, user can design, edit, delete and then save label as a file name with "ezpx" file type (GoLabel always save the file name with file type "ezpx"). In command area, user can export the label on the left working pad to the command area with the printer's command format (on the right working pad).

2.2 Command Area

The labels exported to the Command Area in "TEXT/ASCII" format and can be editing and saving as a "TEXT/ASCII" file on PC. Thus, in DOS mode, user may work on this file with DOS commands - COPY, PRINT, TYPE, etc. to manipulate this TEXT/ASCII file and then send/print it to the printer directly. Besides, the commands in the Command Area are exported direct from the Label Design Area. For certain high level application, GoLabel provides these quickly and convenient of operation tools for SI engineer and software designer.

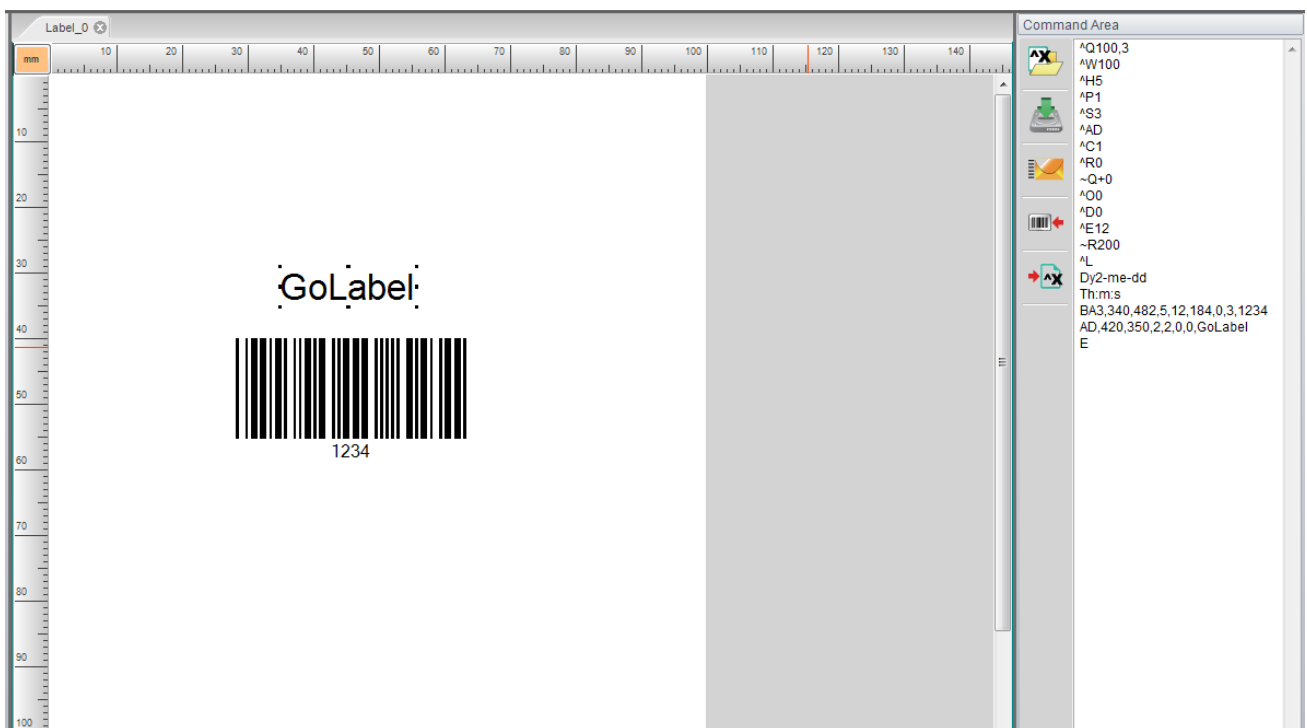









 



















3. GoLabel Tool Sets


















3.1 Generic Toll Set

Being user-friendly software, GoLabel provides following graphic icons in the Tool Sets that displays on the top of screen. User may click either icon of Tool Set to design labels and editing commands. The icons on Generic, Advance and Object Tool Set, and its functional description are itemized and shown as below for user reference.

Tool Set






















	New		Undo
	Open		Redo
	Save		Move To Front
	SaveAs		Send To back
	Close		Align Left
	CloseAll		Center
	Page Setup		Align Right
	Printer Setup		Select All
	Print		Unselect All
	Database Select		Align Left
	Copy Label To Clipboard		Align Horizontal Center
	Copy		Align Right
	Paste		Align Up
	Cut		Align Vertical Center

Tool Set

	Delete		Virtual Terminal
	Align Down		Calibration Sensor
	Distribute Horizontally		Printer Date/Time Setting
	Distribute Vertically		Download Object To Printer
	IP Setting		Delete Printer Object
	Set Alarm Parameters		Synchronize Printer And GoLabel Object Record
	Set Alert Message		Language
	Search Godex Printer		Style Settings
	Printer Control		Enable/Disable Cross Hair
	GoLabel On-line Help		

3.2 Object Tool Set

Object Tool Set

	Horizontal Line		Pdf 417
	Vertical Line		Maxicode
	Oblique Line		Data Matrix
	Box		QR Code
	Filled Rectangle		Micro PDF 417
	Ellipse		Aztec
	Rounded Rectangle		Composite
	Triangle		Text
	Diamond		Windows Text
	Bar Code		Graphics
	GS1 DataBar		

4. General Operation



4.1 Creating First Label


- Open and save a label file

- Open a new label file


Click the icons  in the Generic tool set


- Save a Label file

Click either icons "SAVE"  or "SAVE AS"  to save the label files to disk. It's required to key-in file name when a dialog of SAVE AS is popping up (Don't key-in, the file type "ezpx", which is added by GoLabel itself in automatically), after file name key-in, please click SAVE icon in the dialog to save the label file with the file name you key-in.


In case, who want to save label with "TEXT/ASCII" format, please click icon  to transform the label as TEXT/ASCII format to the command area. The "TEXT/ASCII" format in command area is able to editing manually by user.


If these labels have some unloaded objects, such as graphics, Fonts or non GoDEX EZPL printer's commands (such as spherical or round coner, GoLabel will reminding the total amount of illegal object unloading yet, marking white color on the fill-in columns and asking to user for key-in and download. Please follow instruction to key-in the appropriate object names then. (the names must be alphabetical and numbers only).

Please click the icon  in command area that will save the label in "TEXT/ASCII" format to PC.

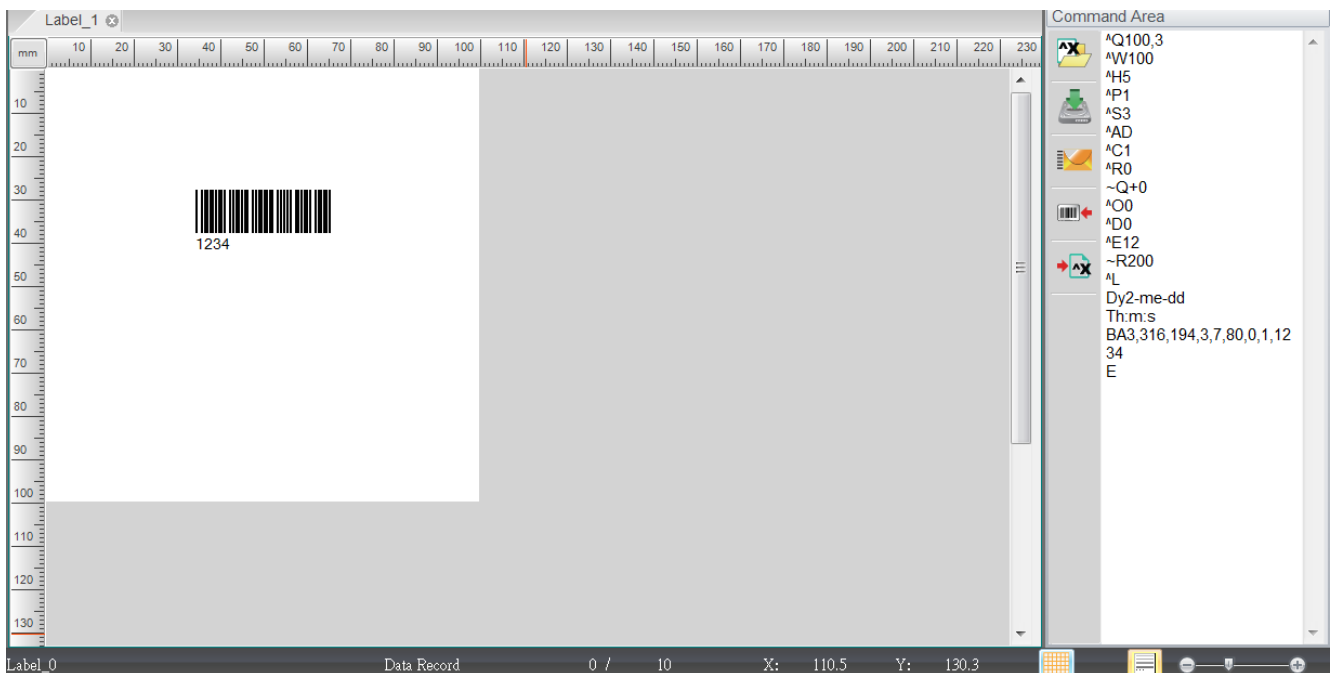

4.2 Open an Existing File

- Click the icon "Open"  on Generic Tool Set
- To open an existing file is able be previewing when cursor select to it, and click "Open" icon in the dialog to open it (or just double click the file name for instead). Only file type "ezpx" created by GoLabel is able be opened properly.
- Be noted 2: Only the "Text/ASCII" format of EZPL commands in the file type of "cmd" is retrievable by GoLabel but the inside of download objects (graphic, photo, picture and curvature shape) will be missed, that needs to recreate on GoLabel.

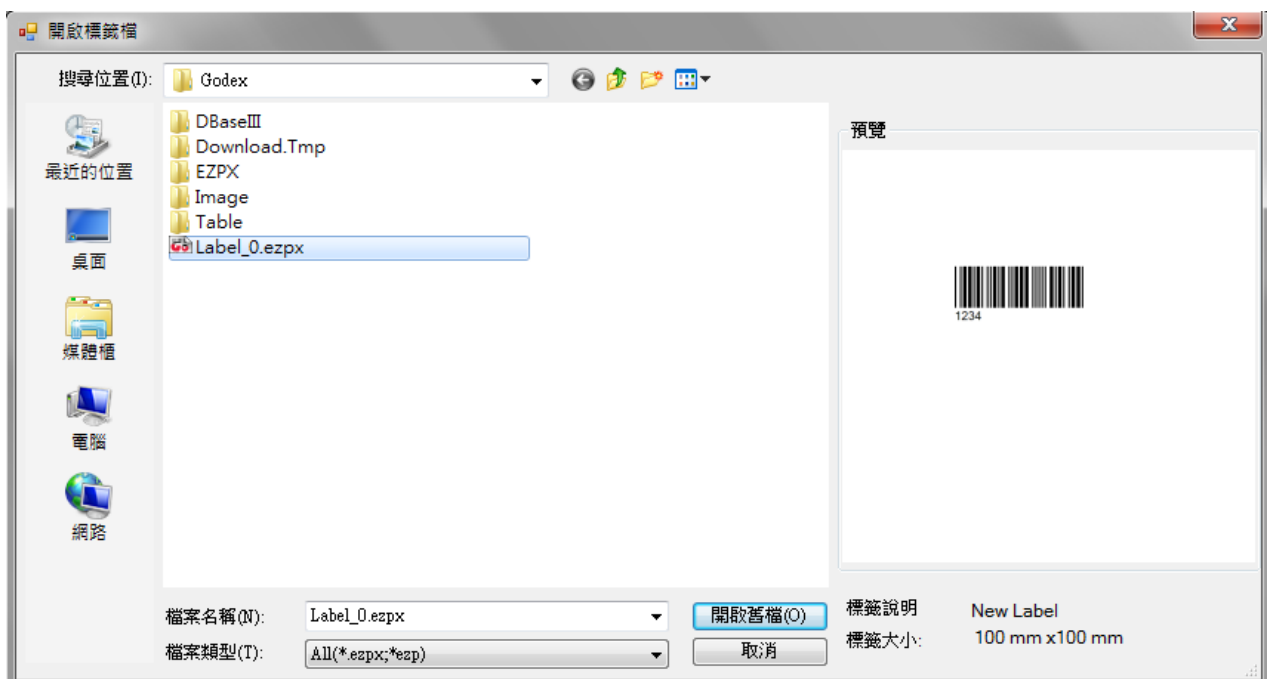

4.3 Change Printer Setting



Click the icon on the Generic Tool Set, or just click the right key of mouse on the "Label Design Area" and select "Printer Setup"

Key-in the relevant parameters in the "Printer Setup" dialog

- Please select the model name of GoDEX barcode printer in the dialog first. If you don't know it clearly, please check the model name to the printer's bottom side that stuck a label with sufficient information.
- All the items are able to be setting unless these items are not supported by this model of barcode printer
- Tear-off position: It's a printer stop position (after a label print out) that can be adjusting forth and back (+/- value, unit: mm). Key-in bigger adjusting value (number) in the dialog is meant that the next labels will move forward or backward longer. The setting value should not be large or equal to label high. Every model of barcode has an own setting value and limitation of Tear-off position, please refer to the description of the EZPL command (^E) that states in the user or programming manual.

Printer Setup

Printer Setup Printer Interface Miscellaneous

Printer Setup

Printer Model: RT730i

Resolution: 300

Darkness: 10

Speed: 5

Stripper: 0 (None)


Labels per Cut: 0

Printing Mode: Direct Thermal


Tear-off Position (mm): 12

Page Direction: Angle 0

☐ Rotate 180

 1 Copies of Label


☒ Fix Number 1 ☐ Database


 2 Number of Labels

☒ Fix Number 1 ☐ Database

Print Save Exit

4.4 Setup Database Printing

- click icon  on the Generic Tool Set, or just click the right key of mouse on the "Label Design Area" and then select "Printer Setup" → "Miscellaneous".
- Click the icon "Miscellaneous", and then user can using functional bar to set the printer.

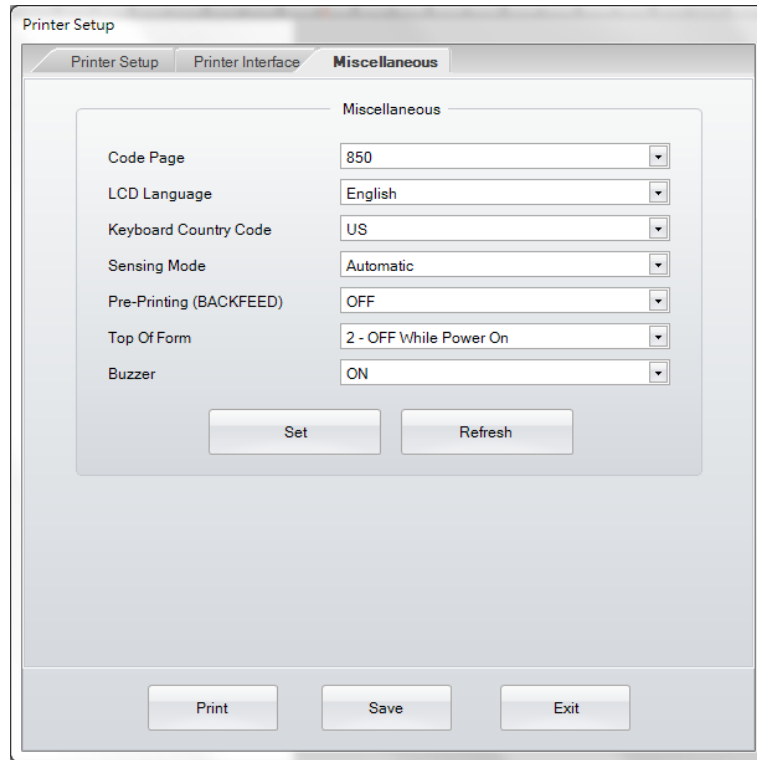

GoLabel On-line Help

- The value in the fields of “Copies of Label” and “Number of Labels” are selectable to print more labels with copy or counting number.

The screenshot shows the 'Printer Setup' dialog box with three tabs: 'Printer Setup', 'Printer Interface', and 'Miscellaneous'. The 'Printer Setup' tab is active. It contains the following settings:

- Printer Model: RT730i
- Resolution: 300
- Darkness: 10
- Speed: 5
- Stripper: 0 (None)
- Labels per Cut: 0
- Printing Mode: Direct Thermal
- Tear-off Position (mm): 12
- Page Direction: Angle 0


Below these settings, there is a red circular arrow icon with '180°' and a checkbox labeled 'Rotate 180'.


There are two sections for label printing:

- Copies of Label:** A section with a printer icon and a '1' indicating one copy. It has two options: 'Fix Number' (selected) with a value of 1, and 'Database' (unselected) with an empty dropdown menu.
- Number of Labels:** A section with a printer icon and a '2' indicating two labels. It has two options: 'Fix Number' (selected) with a value of 1, and 'Database' (unselected) with an empty dropdown menu.

At the bottom of the dialog box, there are three buttons: 'Print', 'Save', and 'Exit'.


4.5 Select Label Size and Media Type


- Click the icon  on the Generic Tool Set
- The label parameters are definable, included "page width", "Page Height", "Left/Right Margin" and "Top/Bottom Margin"
 - The label can be saved as a "self-defined label" by key-in the label name in the column field of "Description" and click "Save as Template" then. In next times when GoLabel startup, user can select the previous saved "self-defined label" in the pull down column field of "Template Page Form"
- User can be based on different unit to set up(mm/ cm/ dot/ inch).

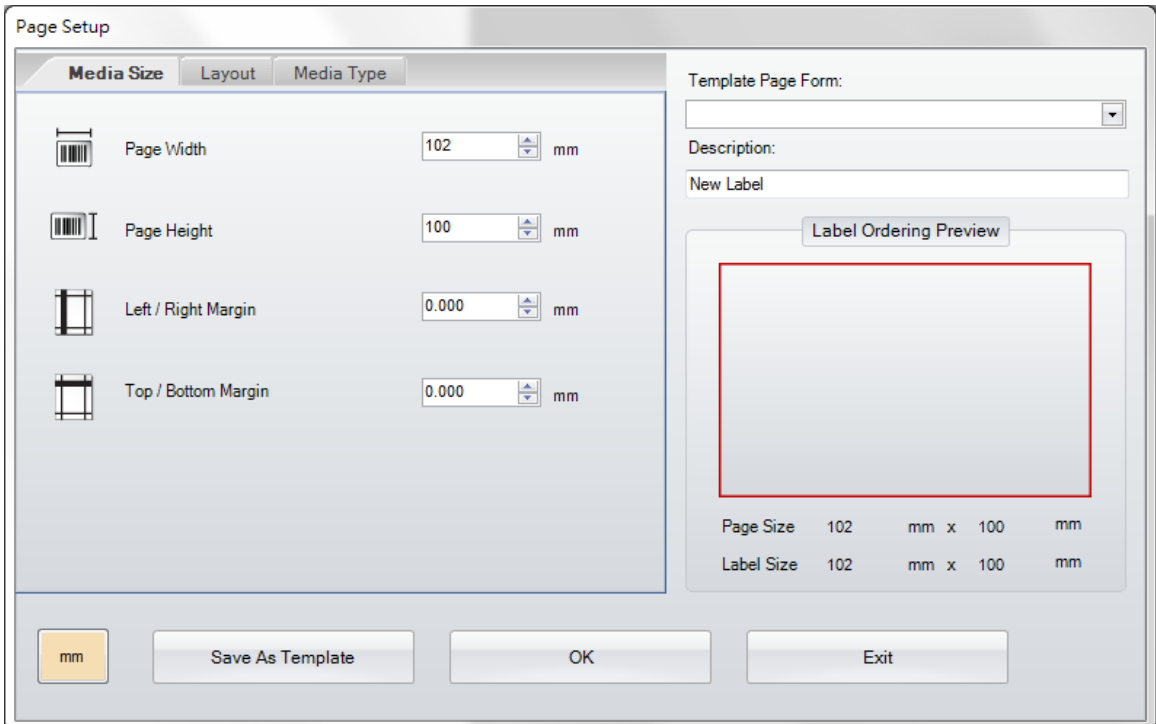



Page Setup

Media Size | Layout | Media Type

 Page Width: 102 mm

 Page Height: 100 mm

 Left / Right Margin: 0.000 mm

 Top / Bottom Margin: 0.000 mm



Template Page Form:
 Description:
 New Label

Label Ordering Preview

Page Size 102 mm x 100 mm
 Label Size 102 mm x 100 mm


mm Save As Template OK Exit

- Select Media Type
 - Label with gaps, a sticking label with liner, every label has a gap in between, called gap length.
 - Continuous, like a fax using paper roll. Due to its continuous, it must set a "Feed Paper Length" if who want has a printing gap in between label and label
 - Label with Mark: A label roller, it has a strip (or block) of black mark pre-printed on the back of liner. It needs setting the black mark's Width, Position and Zsign.

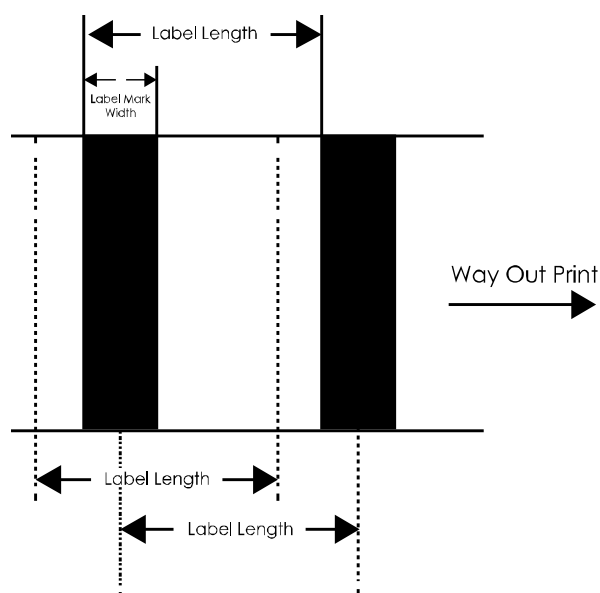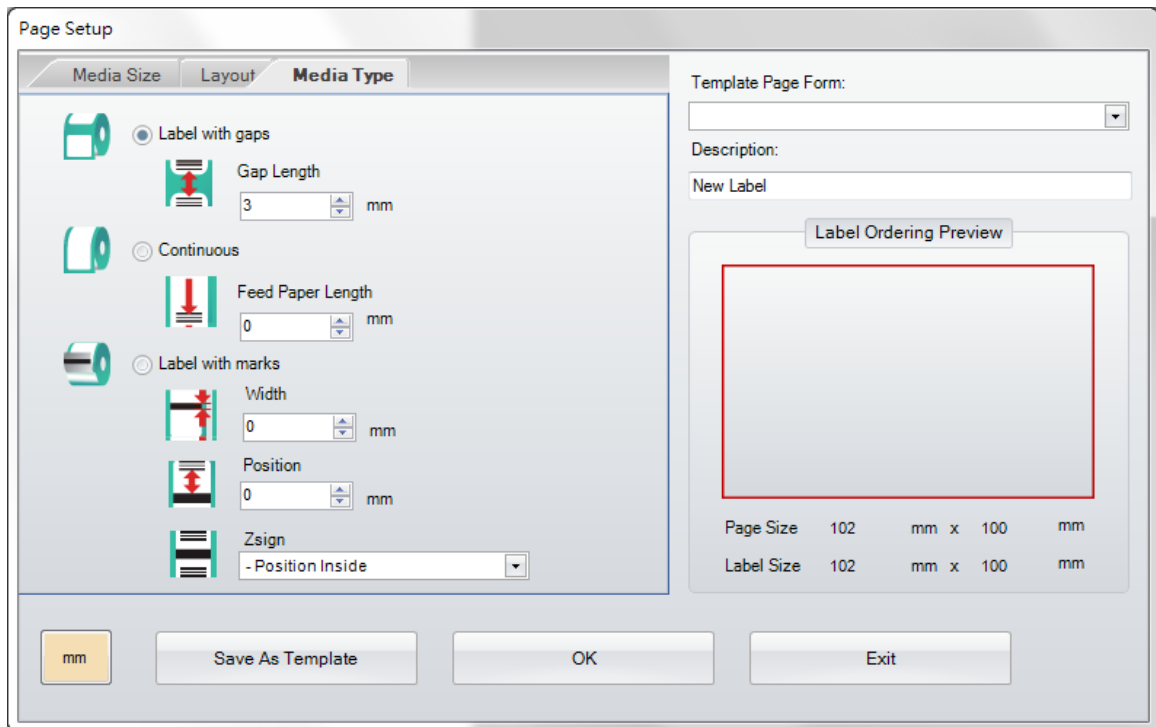



GoLabel On-line Help

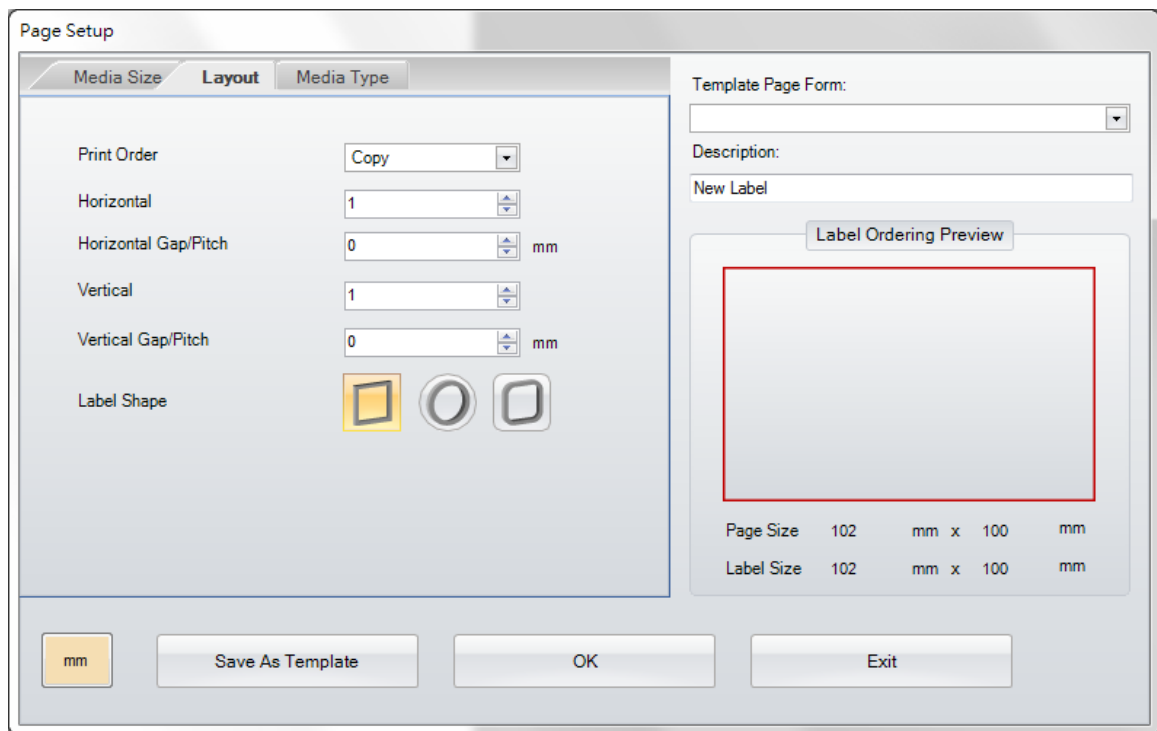
- Choose Media Layout
 - Print Order: Label Printing Order is selectable by Copy, Left to Right or Top to Bottom
 - Horizontal: Label is divided and making them in horizontal layout
 - Vertical: Label is divided and making them in vertical layout
 - Horizontal Gap/Pitch: to define the horizontal gap width between the labels
 - Vertical Gap/Pitch: to define the vertical gap width between the labels
 - Label Shape: Three Label outer shape is selectable
 - Move cursor to inside of "Label Ordering Preview" area and click it, then the label shape and order can be changed immediately for user preview one by one.




4.6 Printer Interface Setup

Printer interface: USB, LAN, LPT, Serial Ports and Driver Port are selectable as follow:

- Click the icon  on Generic Tool Set, or just click the right key of mouse on the "Label Design Area" and then select "Printer Setup" and Choose "Printer Interface"
- Please select the port and set the parameter where the printer connected, such as USB, LAN, LPT and Serial Port.
- User can select "Driver Port" and click the icon  for instead, this will automatic detect which model of printer is connected to those ports. Or, user who choose "Auto Detect Connected Printer on Startup" in the dialog, then GoLabel will always auto detect the connecting printer on next time when program re-startup.

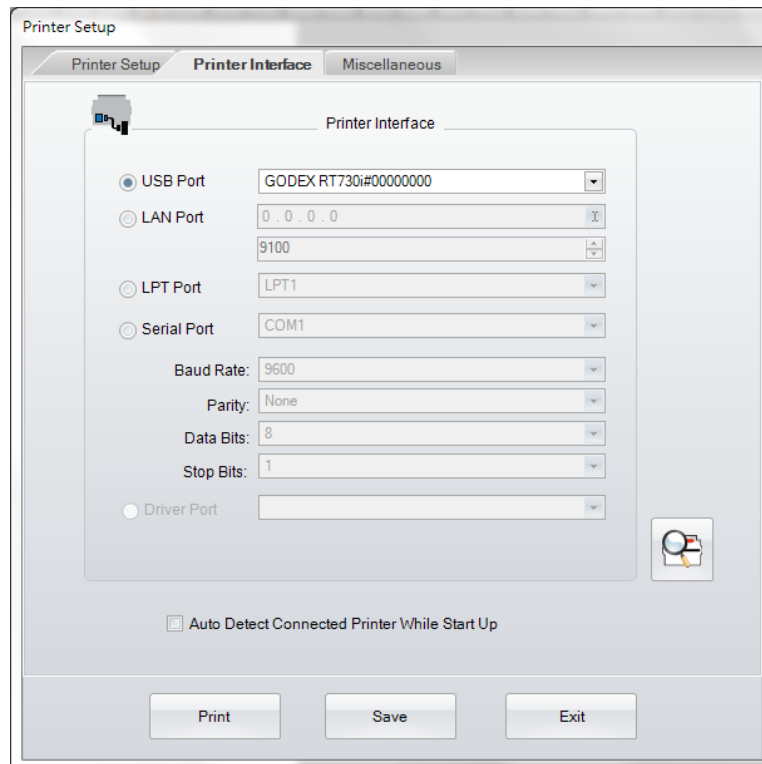


The "Printer Setup" dialog box has three tabs: "Printer Setup", "Printer Interface", and "Miscellaneous". The "Printer Interface" tab is active, showing a printer icon and the title "Printer Interface". It contains several radio buttons for selecting the interface type: "USB Port", "LAN Port", "LPT Port", "Serial Port", and "Driver Port". Each radio button is followed by a text field for configuration. The "USB Port" option is selected, and its field contains "GODEX RT730i#00000000". The "LAN Port" field contains "0 . 0 . 0 . 0" and "9100". The "LPT Port" field contains "LPT1". The "Serial Port" field contains "COM1". Below these are fields for "Baud Rate" (9600), "Parity" (None), "Data Bits" (8), and "Stop Bits" (1). The "Driver Port" field is empty. At the bottom, there is a checkbox labeled "Auto Detect Connected Printer While Start Up". At the very bottom are three buttons: "Print", "Save", and "Exit".

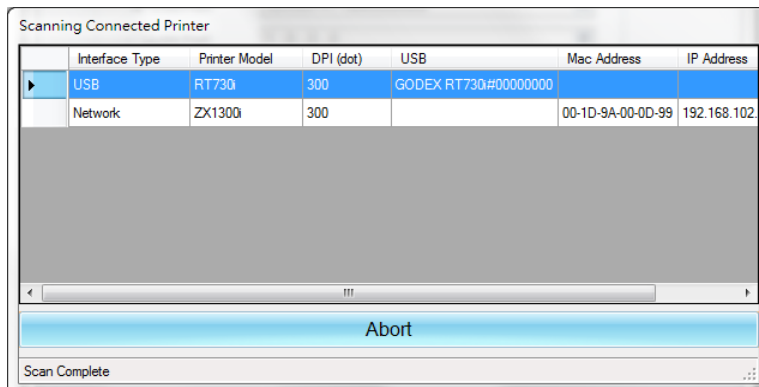


The "Scanning Connected Printer" dialog box displays a table of detected printers. The table has columns for Interface Type, Printer Model, DPI (dot), USB, Mac Address, and IP Address. The first row is highlighted in blue and shows a USB printer with model RT730i, 300 DPI, and ID GODEX RT730i#00000000. The second row shows a Network printer with model ZX1300i, 300 DPI, Mac Address 00-1D-9A-00-0D-99, and IP Address 192.168.102. Below the table is a large grey area, a scroll bar, and a blue "Abort" button. At the bottom, it says "Scan Complete".


Interface Type	Printer Model	DPI (dot)	USB	Mac Address	IP Address
USB	RT730i	300	GODEX RT730i#00000000		
Network	ZX1300i	300		00-1D-9A-00-0D-99	192.168.102

GoLabel On-line Help

- Click the icon  on Generic Tool Set, or just click the right key of mouse on the "Label Design Area" and then select "Printer Setup" and Choose model name of EZ2205i / EZ2350i / EZ-6200+ / EZ-6300+ series.

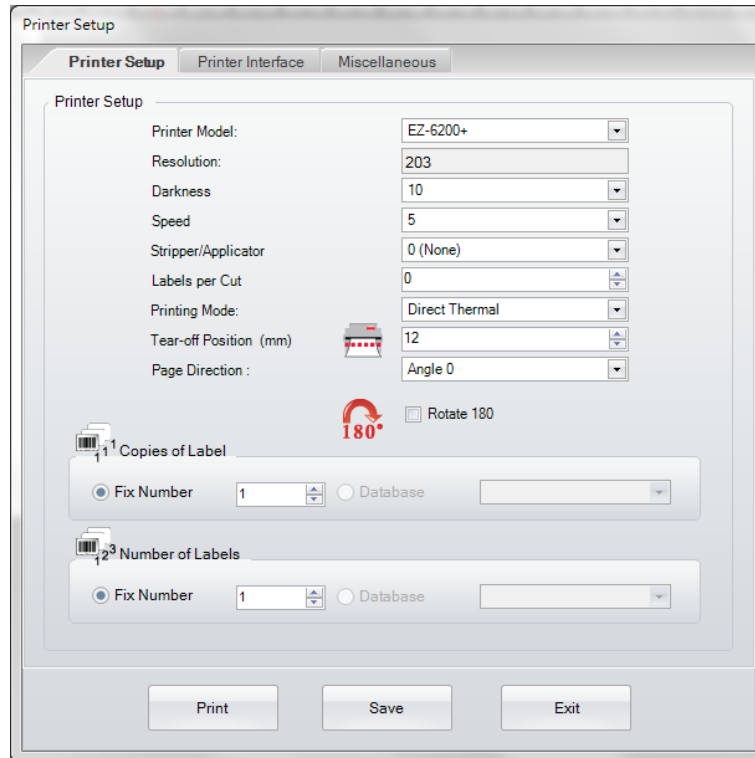


- Click "Advance" then click "Printer Control" to choose functional of "Internal Rewinder".

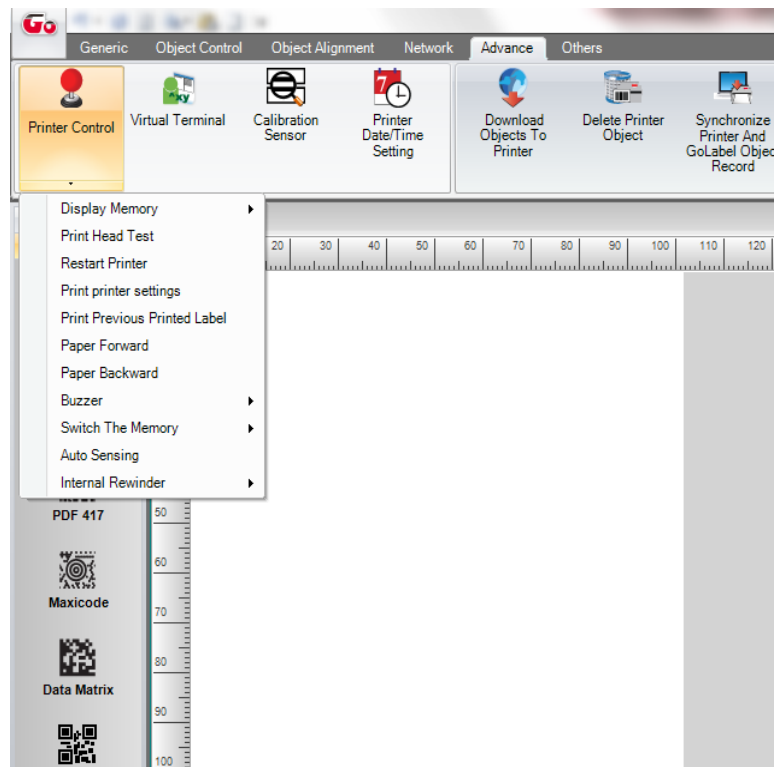


4.7 Text Setup - Key in a Text into the Label

The Fonts include internal font, download font, and external Font on CF card or USB Stick Memory


- Select "Text" in left side of screen, and then click the icon .
- Move cursor to where the text will be located and click left key again.


There are three icons showing on the "Text Setup" dialog, "Text", "Font Type", "Data Source"


- 1) In the sub-dialog "Text", the "Horizontal Expand" and "Vertical Expand" are definable by user.
 - In the right part, it has "Rotation" for Text angle selection, "Text Data" for text key-in and a Preview window.
 - If use "Lock Object" label object cannot be edited or moved in Label Design area.

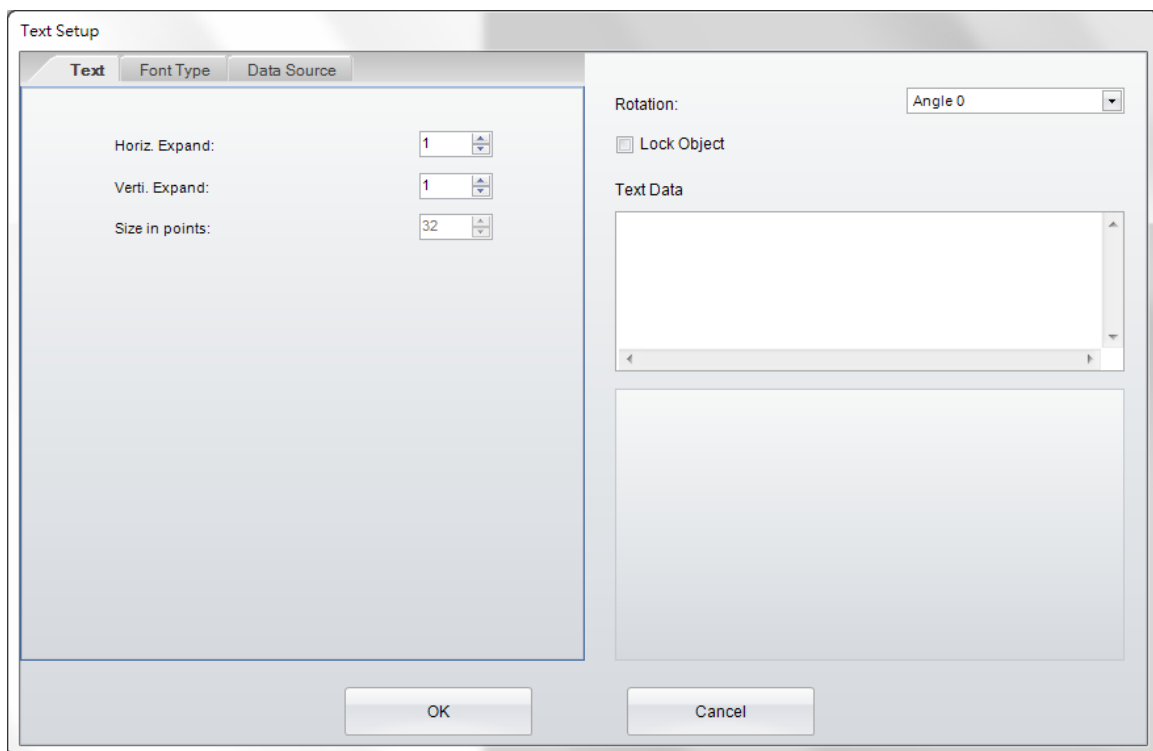

- 2) In the sub dialog "Font Type", user may choose and define the parameters for the "Internal Font", "Asian Font", "Soft Font", "True Type Fonts" and "Download Font"
- Internal Fonts are built-in on the printer's F/W, only alphabetical text and numbers are existed.
 - Asian Font, user can choose some Asian font and download it to the printer Flash or USB memory
 - True Type Font (TTF), provides for user to download True Type Font and to download True Type Table which can define its parameters, which also supports to Multi-Language.
 - Below dialogs will be popped up when select "True Type Font" and click "Download True Type Font"; then choose either of TTF file and download it to printer.
 - The detail of how to use "Download Font To UDisk(USB Disk)" in the chapters 5.8.2
 - In the right part, it has "Rotation" for selection, "Text Data" for text key-in and a Preview window.
 - If use "Lock Object" label object cannot be edited or moved in Label Design area.

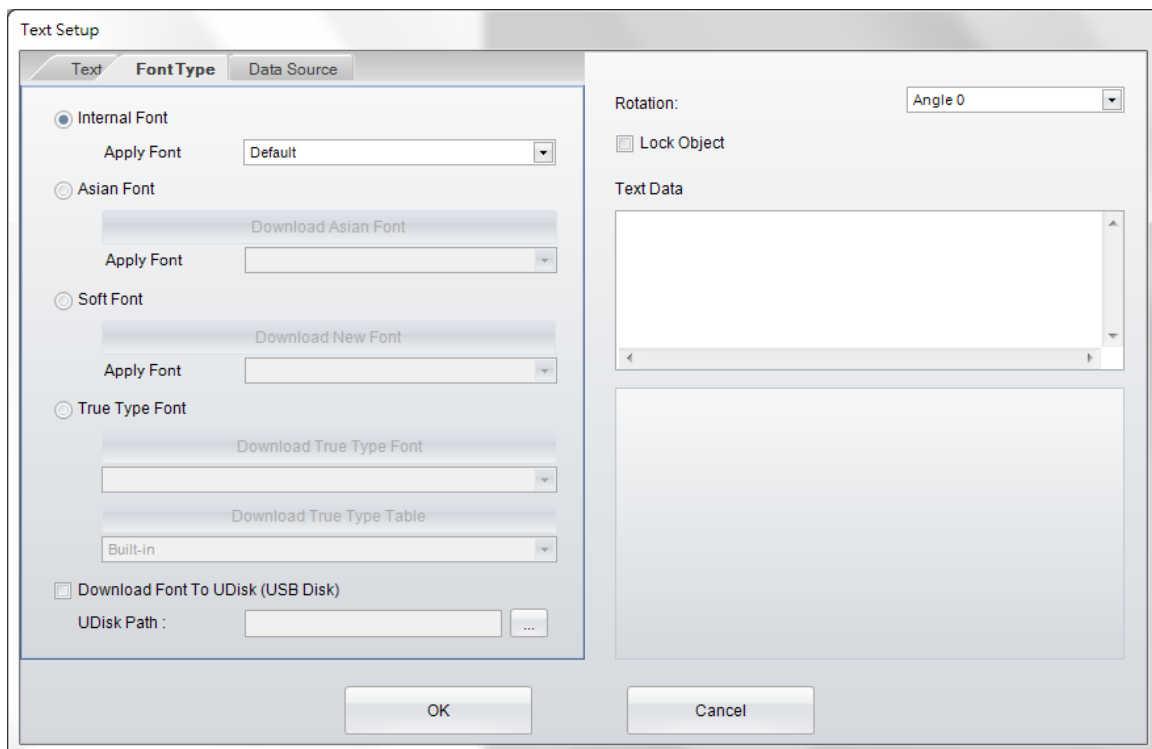


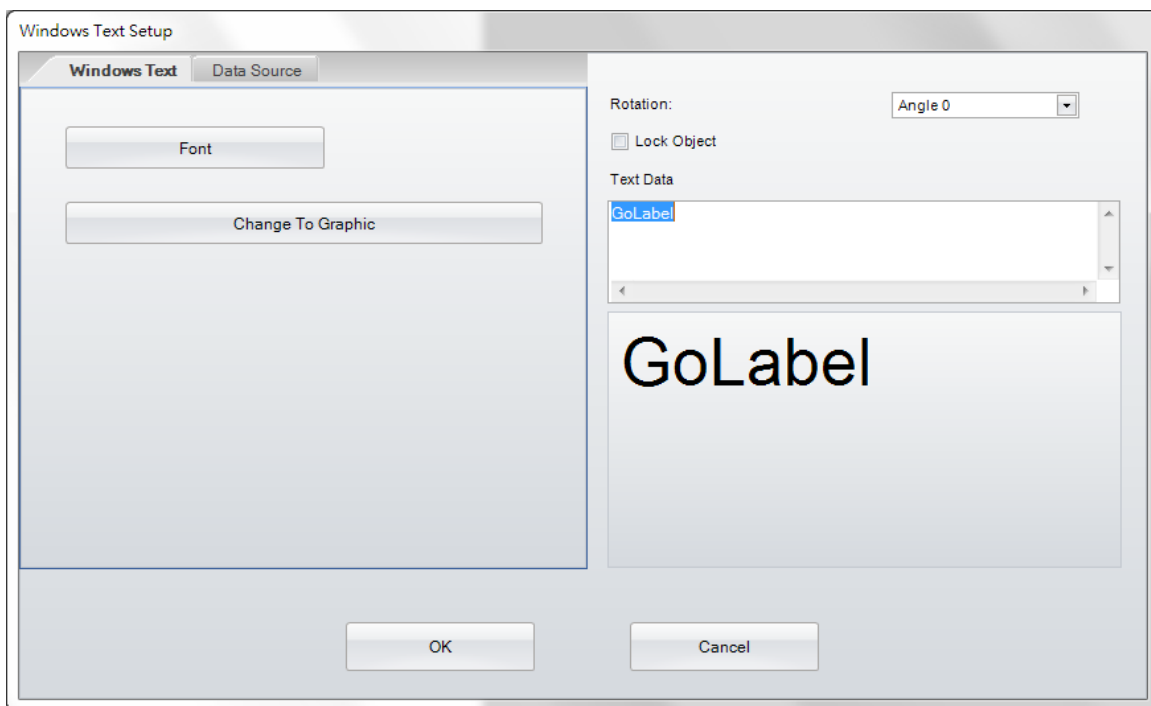
- 3) In the sub dialog "Data Source", user can select where the text data going to come from
- "General" or "Database"
 - General: it select data source of text is coming from a pop up "self-defining table" that user can setup the text stream with serial number, variable, data and time then.
 - Database: There are six databases (SQL, Access, Oracle, Excel, Txt, DBF) can be adopting when user selected database in "Data Source" sub-dialog. In fact, it also can be created by the icon  "Database Query" in "Generic Tool Set".
 - The detail of how to define serial number, variable and database, please refer to both paragraphs "Variable and Serial Number" and "Database" in the chapters 5.2 to 5.5

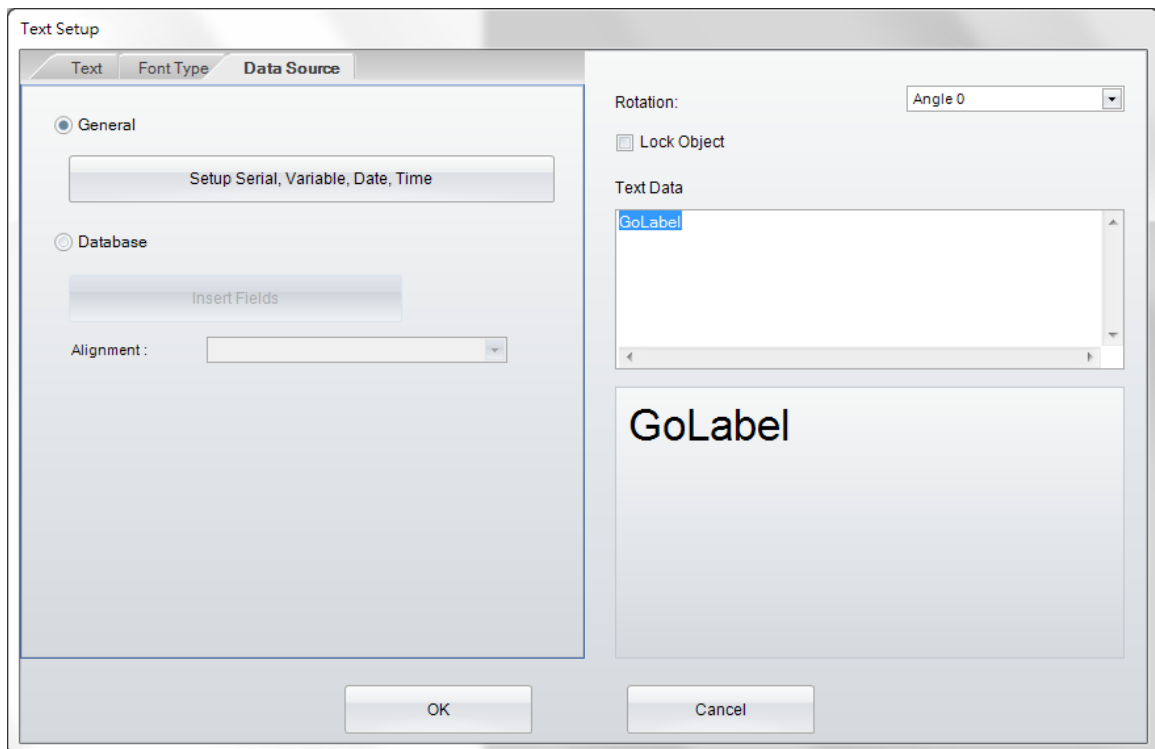


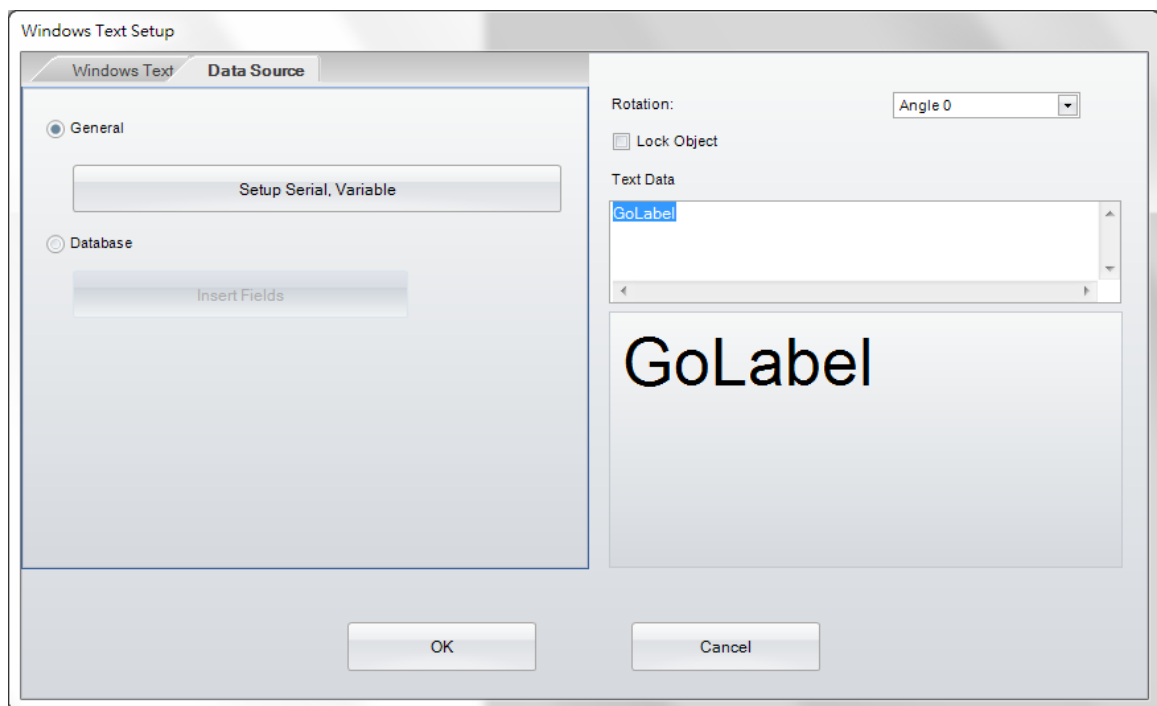
4.8 Using the Fonts Provided by Windows

GoLabel supports Windows Fonts but has some limitations due to these fonts is created truly by dot-matrix not like other fronts that built-in on printer.

- Select "Text" in left side of screen, and then click icon  in the "Object Too Set", move cursor to the location that "Window Text" will be located and click left key again.
- In the "Window Text Setup" dialog, click the "Font" it will pop up a sub-dialog for the font type and size selection. It also can be rotated, and changed (converted) to graphic.
- In case it "Changed to Graphic", then the text will convert to "Graphic Object" and then download to printer memory. This will helpful speed up the put-through-time, but it can't be editing anymore when it has been changed to Graphic.




- In the sub dialog “Data Source”, user can select where the text data going to come from
 - “General” or “Database”
- General: it select where the “Data Source” of text is coming from, which will pop up a “self-defining table” that user can define the text stream with serial number, variable, data and time.
- Database: There are six databases (SQL, Access, Oracle, Excel, Txt, DBF) can be adopting when user selected database in “Data Source” sub-dialog. In fact, it also can be created by the icon  “Database Query” in “Generic Tool Set”.
- The detail of how to define serial number, variable and database, please refer to both paragraphs “Variable and Serial Number” and “Database” in the chapters 5.2 to 5.5




4.9 Create a Barcode

4.9.1 Create 1D Barcode

1) Symbology


- Select "Barcode" in the left side of screen, and then click the icon  of the "Object Too Set", and move cursor to the location that "1D Barcode" will be located and click left key again.
- There are four sub-dialogs in the "Barcode Setup" – Symbology, Human Readable Style, Font and Data Source
- In the Symbology sub-dialog, choose barcode type first and then define its Height, Narrow, Width, and Width/Narrow Ratio. Be sure to design a corrective barcode for scanner reading.
- The barcode also can be rotated from 0, 90, 180- and 270 degree. A field of "Bar Code Data" may key-in by users themselves.
- After the completed of definition the Barcode, please click "Refresh Preview" to preview the designing Barcode, or press "Enter Key" while you key-in the data to the field of "Bar Code Data"
- There are many documents on the web or book story can be reference if someone is no idea how to design the 1D barcode.

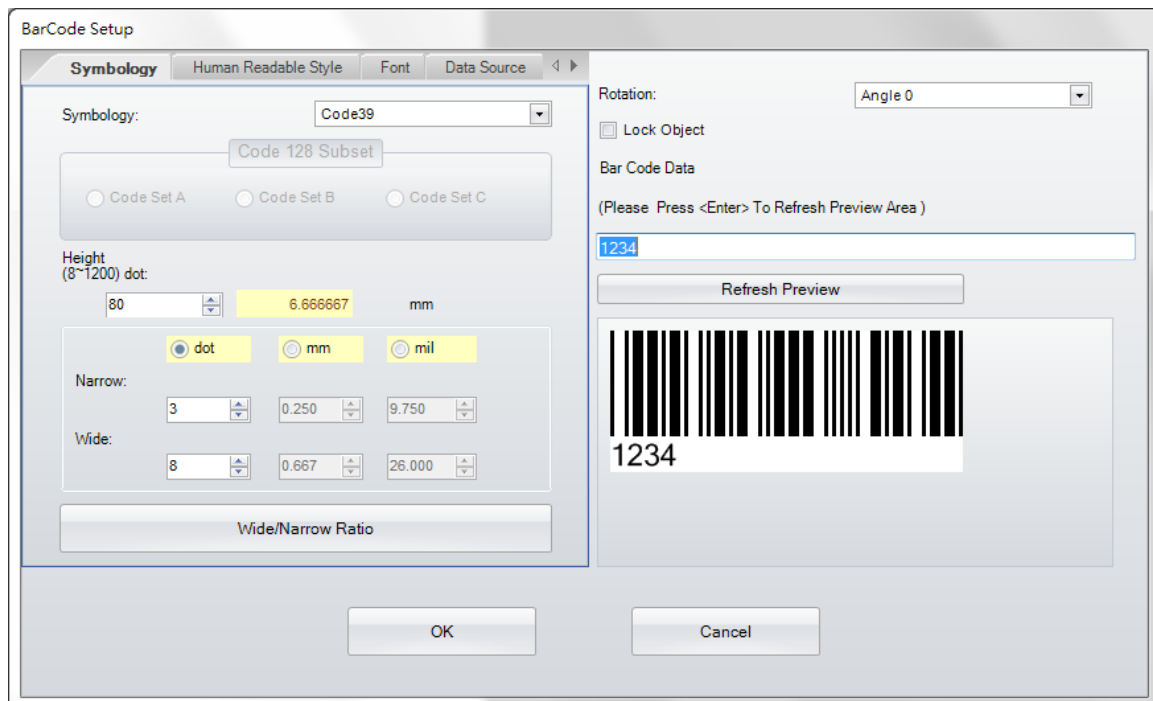

The screenshot shows the "BarCode Setup" dialog box with the "Symbology" tab selected. The "Symbology" dropdown is set to "Code39". Below it, the "Code 128 Subset" button is highlighted. There are three radio buttons for "Code Set A", "Code Set B", and "Code Set C". The "Height (8~1200) dot:" is set to 80, and the "mm" unit is selected. The "Narrow:" and "Wide:" dimensions are set to 3 and 8 respectively. The "Wide/Narrow Ratio" is set to 6.666667. The "Rotation:" is set to "Angle 0". The "Bar Code Data" field contains "1234". The "Refresh Preview" button is visible. A preview of the barcode is shown at the bottom right.


2) Human Readable Style

- Click and enter to sub-dialog "Human Readable Style", to select "Position Alignment" and "Offset" that decides where the position of "TEXT" to be alignment, which also will update the display on "Preview" window.

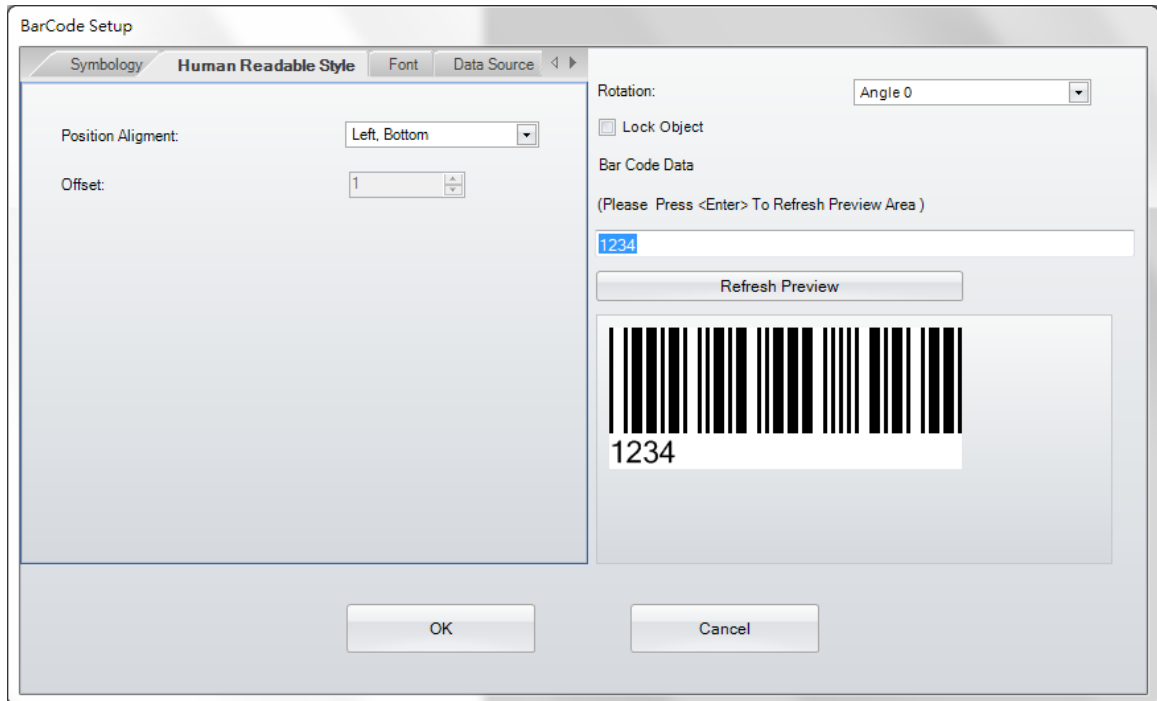


3) Font


Click and enter into sub-dialog "Font", if would like to change the font/ point size/ Bold or Italic need to choose "System Font".

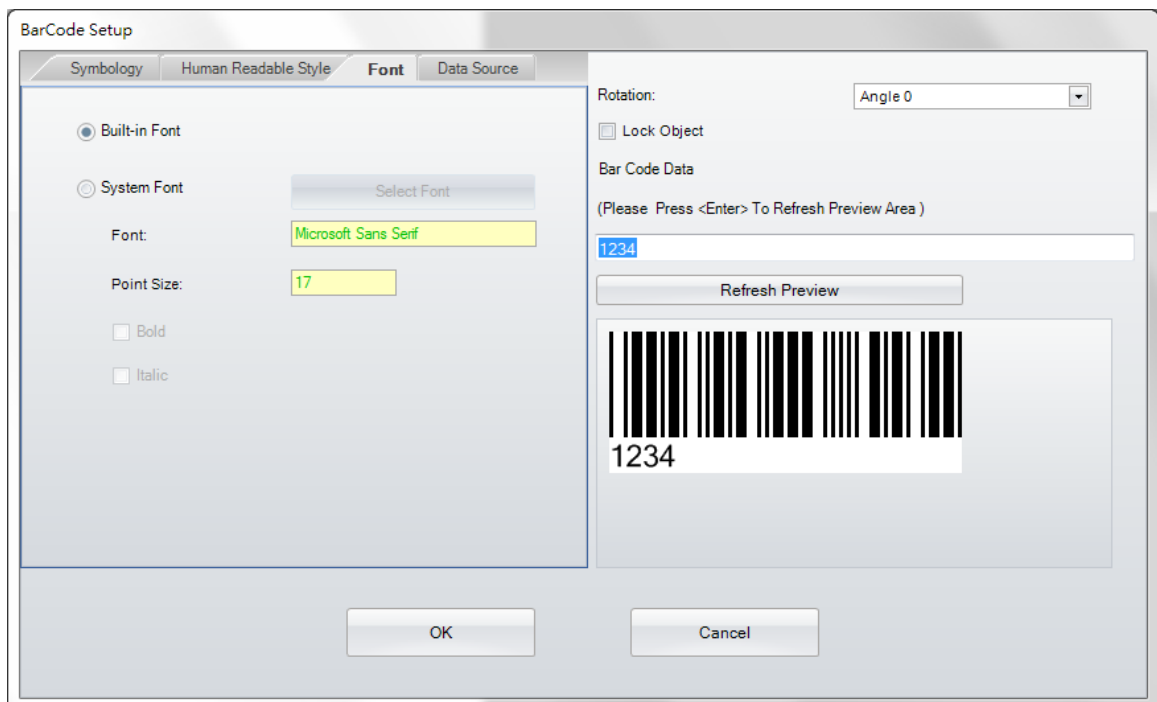

4) Data Source


In the sub dialog "Data Source", user can select where the data source will be linked to Barcode - "General" or "Database"


- General: it select where the "Data Source" of Barcode is coming from, which will pop up a "self-defining table" that user can define the text stream with serial number, variable, data and time.
- Database: There are six databases (SQL, Access, Oracle, Excel, Txt, DBF) can be adopting when user selected database in "Data Source" sub-dialog. In fact, it also can be created by the icon  "Database Query" in "Generic Tool Set".
- The detail of how to define serial number, variable and database, please refer to both paragraphs "Variable and Serial Number" and "Database" in the chapters 5.2 to 5.5

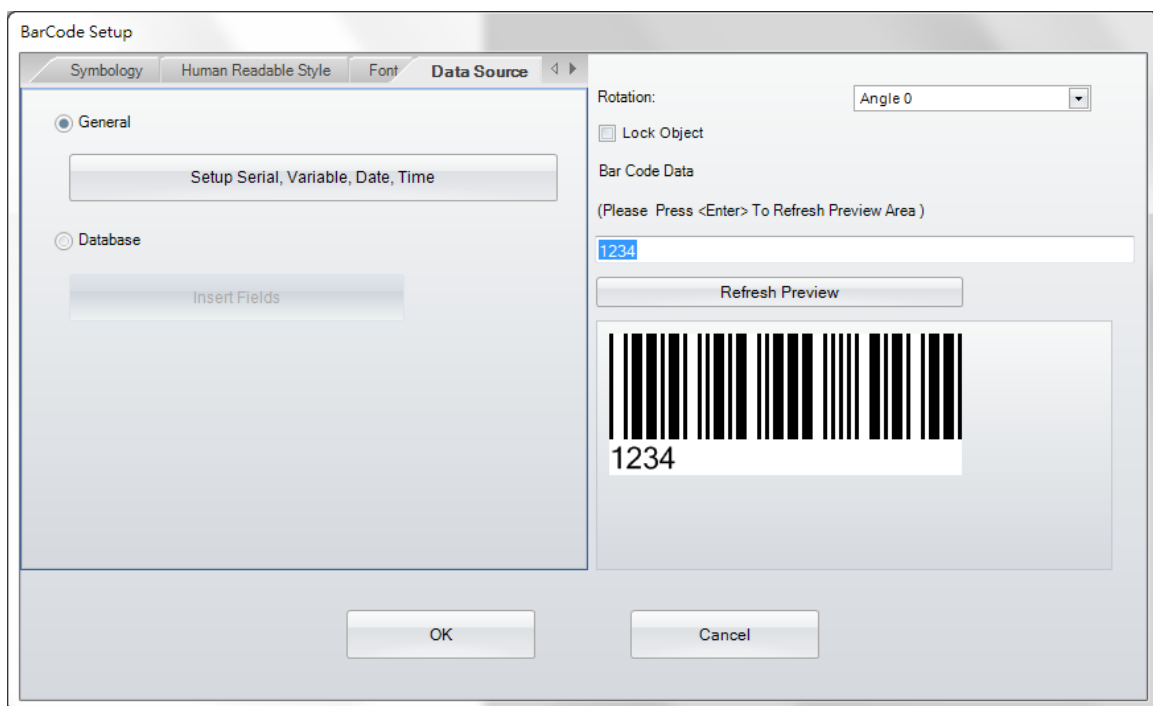

4.9.2 Create GS1 DataBar


1) Symbology

- Select "Barcode" in left side of screen, then click the icon  in the "Object Too Set", and move cursor to the location that "GS1 Databar" will be located and click left key again.
- There three sub-dialogs in the "GS1 Databar Setup" – Symbology, Human Readable Style and Data Source
- In the Symbology sub-dialog, choose the type of GS1 Databar first and then define its Height, Narrow and Segs/Row then. Be sure to design a corrective GS1 Databar for scanner reading.
- The GS1 Databar also can be rotated from 0, 90, 180- and 270 degree. A field of "Bar Code Data" may key-in by users themselves.
- After the completed of definition the GS1 Databar, please click "Refresh Preview" to preview the designing GS1 Databar, or press "Enter Key" while the data is completed key-in to the field of "Bar Code Data"
- There are many documents on the web or book story can be reference if someone is no idea how to design the GS1 Databar.

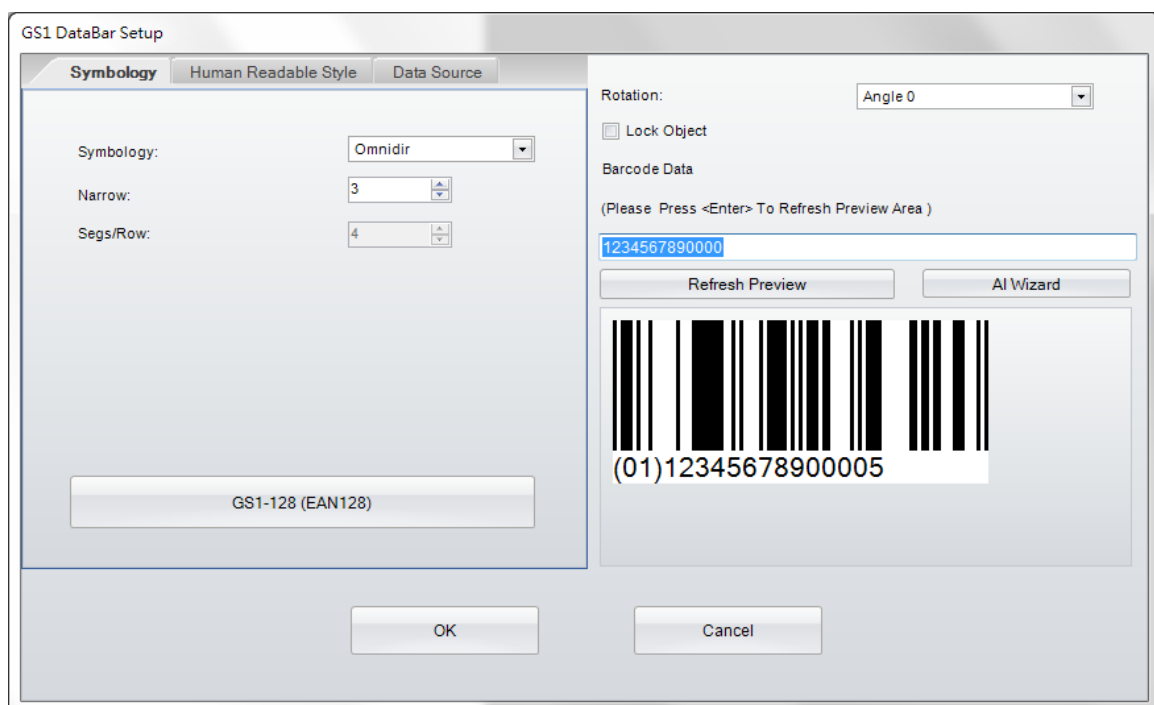


2) Human Readable Style


- Click and enter to sub-dialog “Human Readable Style”, to select “Position Alignment” that decides where the position of “TEXT” to be alignment, which also will update the display on “Preview” window.

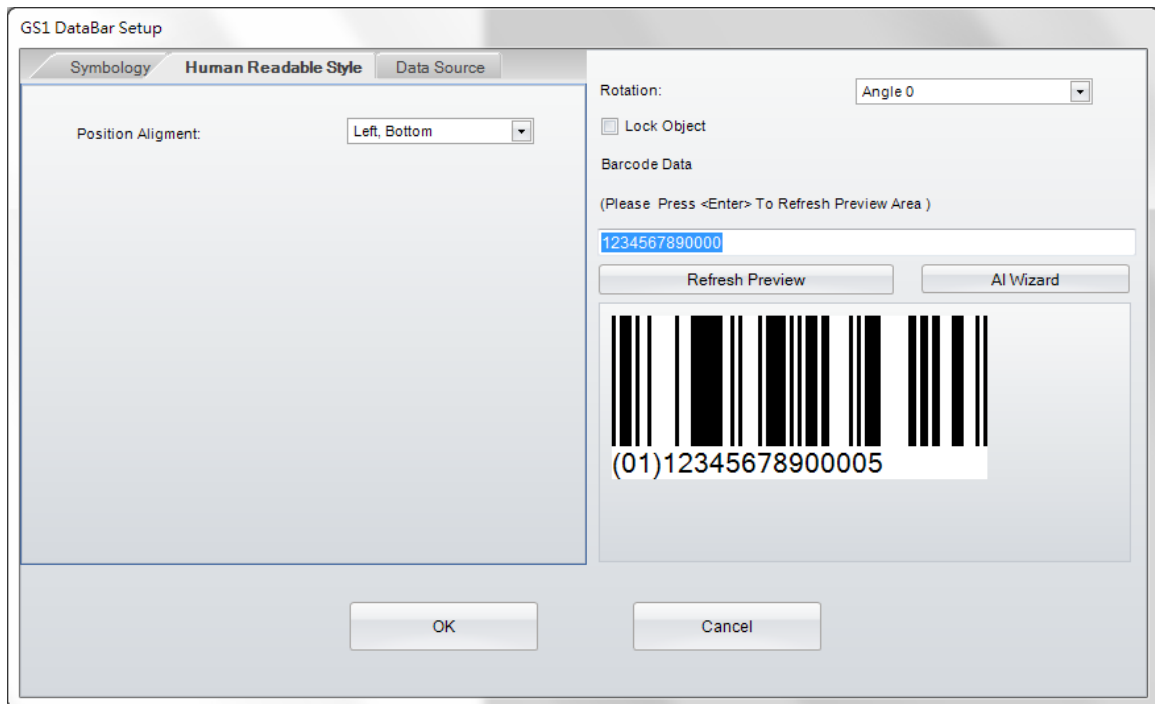


3) Data Source


In the sub dialog "Data Source", user can select where the GS1 Databar going to come from - "General" or "Database"

- General: it select where the "Data Source" of GS1 Databar is coming from, which will pop up a "self-defining table" that user can define the text stream with serial number, variable, data and time.
- Database: There are six databases (SQL, Access, Oracle, Excel, Txt, DBF) can be adopting when user selected database in "Data Source" sub-dialog. In fact, it also can be created by the icon  "Database Query" in "Generic Tool Set".
- The detail of how to define serial number, variable and database, please refer to both paragraphs "Variable and Serial Number" and "Database" in the chapters 5.2 to 5.5

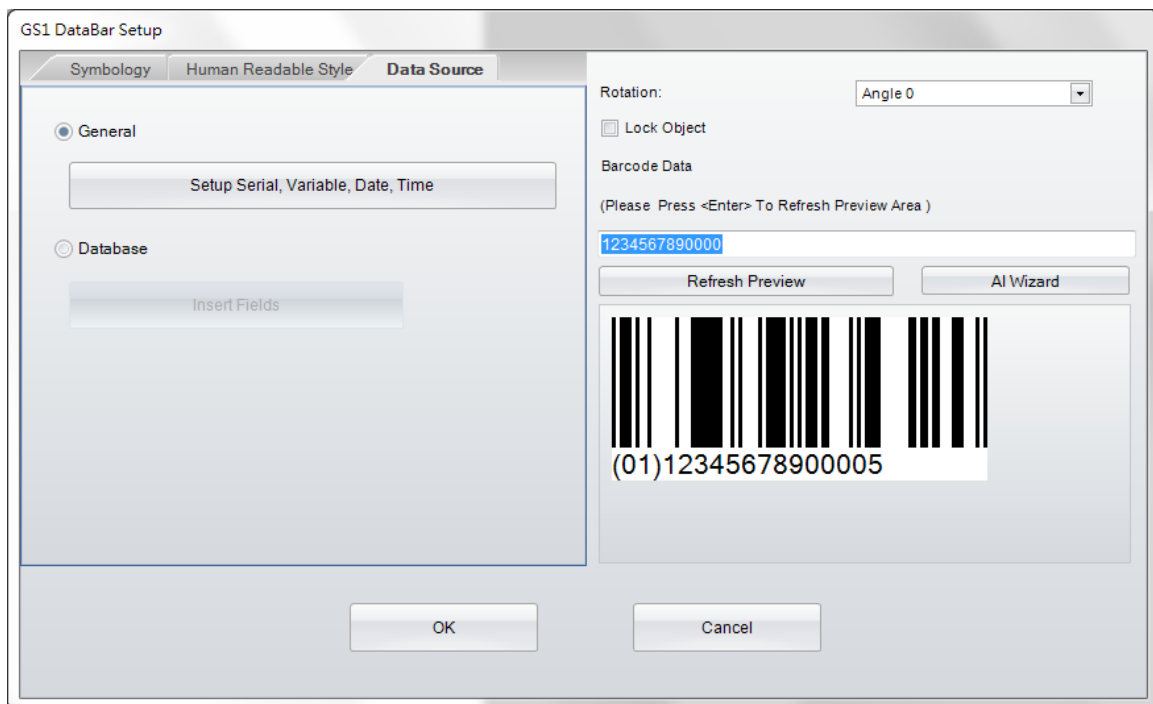

4.9.3 Drawing PDF417


- Select "Barcode" in left side of screen, then click the icon  for PDF417 creating
- Move cursor to the location where the PDF417 will be creating, and press left key of mouse then
- It will pop up a dialog below, please Key-in and select the parameters of PDF417

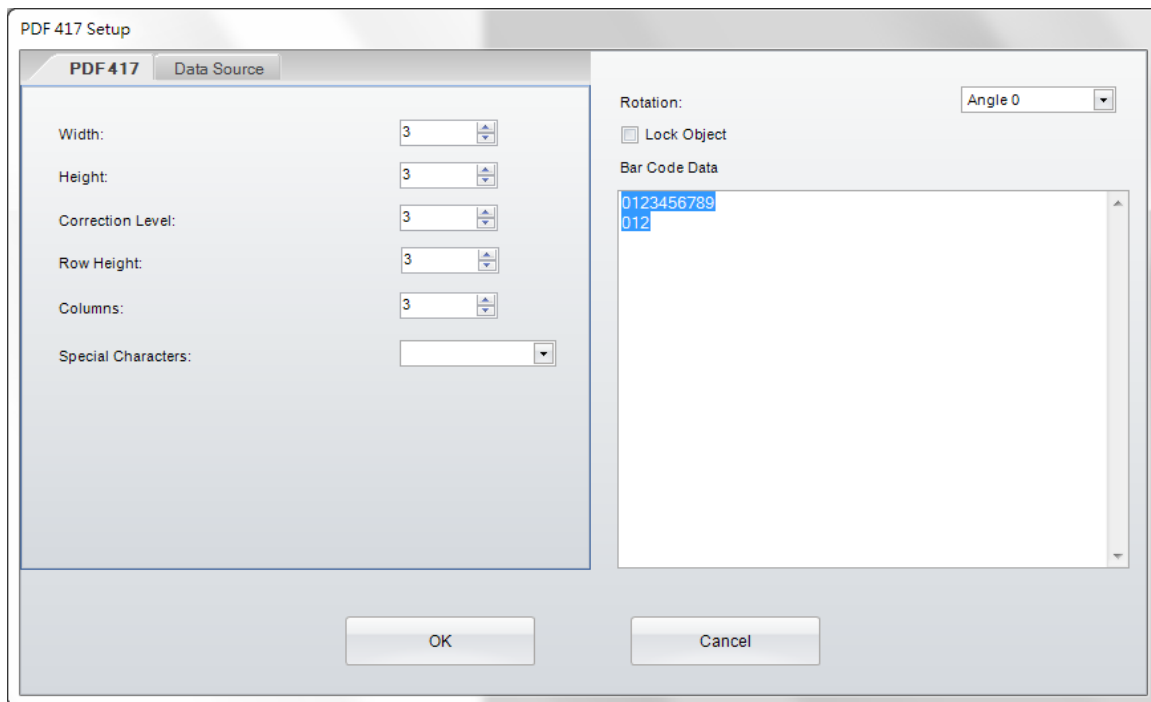


The image shows a "PDF417 Setup" dialog box with two tabs: "PDF 417" and "Data Source". The "PDF 417" tab is active. It contains several input fields for configuring the barcode: Width, Height, Correction Level, Row Height, and Columns, all set to 3. There is also a "Special Characters" dropdown menu. On the right side, there is a "Rotation" dropdown set to "Angle 0" and a "Lock Object" checkbox. Below these is a "Bar Code Data" text area containing the text "0123456789" and "012". At the bottom of the dialog are "OK" and "Cancel" buttons.


Parameter	Value
Width	3
Height	3
Correction Level	3
Row Height	3
Columns	3
Special Characters	
Rotation	Angle 0
Lock Object	<input type="checkbox"/>
Bar Code Data	0123456789 012


In the sub dialog "Data Source", user can select where the PDF417 going to come from - "General" or "Database"

- General: it select where the "Data Source" of PDF417 is coming from, which will pop up a "self-defining table" that user can define the text stream with serial number, variable, data and time.
- Database: There are six databases (SQL, Access, Oracle, Excel, Txt, DBF) can be adopting when user selected database in "Data Source" sub-dialog. In fact, it also can be created by the icon  "Database Query" in "Generic Tool Set".
- The detail of how to define serial number, variable and database, please refer to both paragraphs "Variable and Serial Number" and "Database" in the chapters 5.2 to 5.5

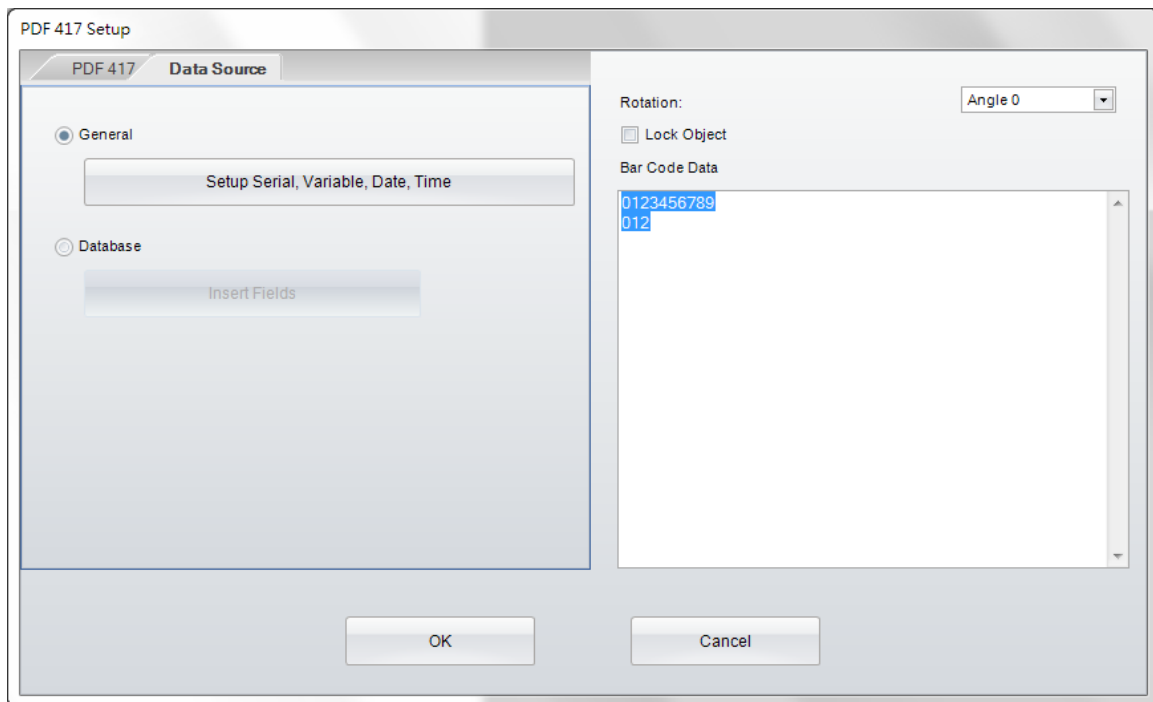

4.9.4 Create MaxiCode

- Select "Barcode" in left side of screen, then click the icon  for Maxicode creating
- Move cursor to the location where the Maxicode will be creating, and press left key of mouse then
- It will pop up a dialog below, please Key-in and select the parameters of Maxicode

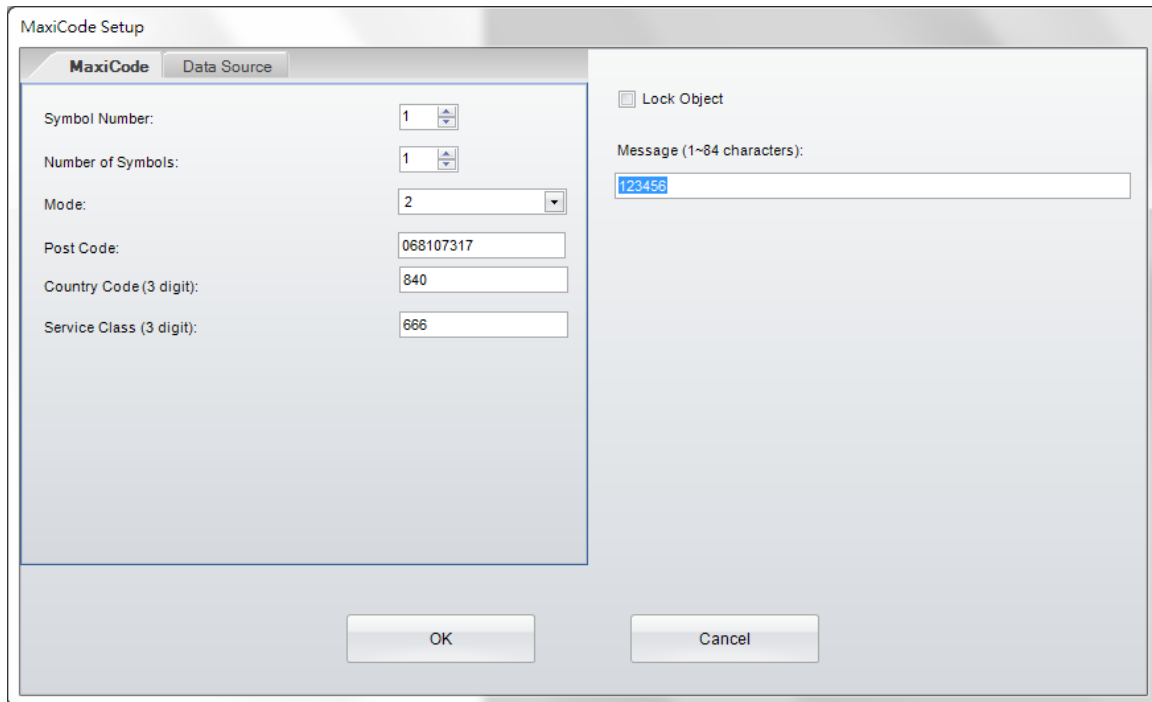


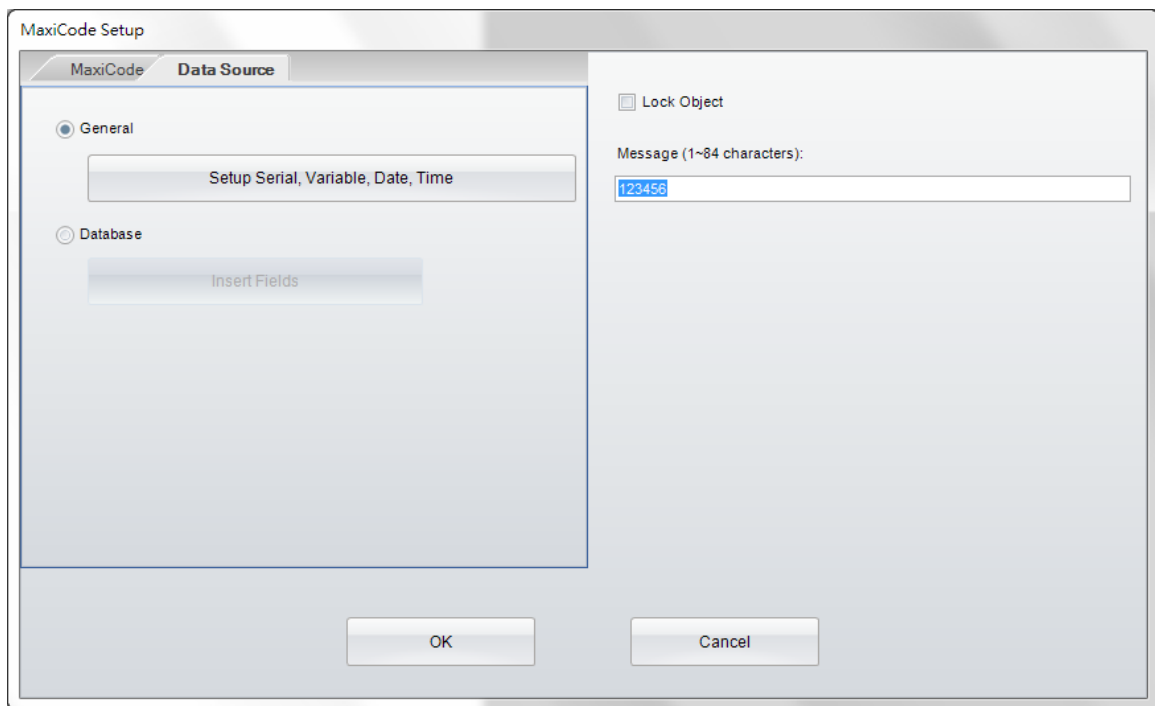
The image shows a "MaxiCode Setup" dialog box with two tabs: "MaxiCode" and "Data Source". The "MaxiCode" tab is active. It contains several input fields for configuring a MaxiCode:

- Symbol Number: 1
- Number of Symbols: 1
- Mode: 2
- Post Code: 068107317
- Country Code (3 digit): 840
- Service Class (3 digit): 666


On the right side of the dialog, there is a checkbox labeled "Lock Object" which is unchecked. Below it is a text field labeled "Message (1~84 characters):" containing the text "123456". At the bottom of the dialog are two buttons: "OK" and "Cancel".


In the sub dialog "Data Source", user can select where the Maxicode going to come from - "General" or "Database"

- General: it select where the "Data Source" of Maxicode is coming from, which will pop up a "self-defining table" that user can define the text stream with serial number, variable, data and time.
- Database: There are six databases (SQL, Access, Oracle, Excel, Txt, DBF) can be adopting when user selected database in "Data Source" sub-dialog. In fact, it also can be created by the icon  "Database Query" in "Generic Tool Set".
- The detail of how to define serial number, variable and database, please refer to both paragraphs "Variable and Serial Number" and "Database" in the chapters 5.2 to 5.5




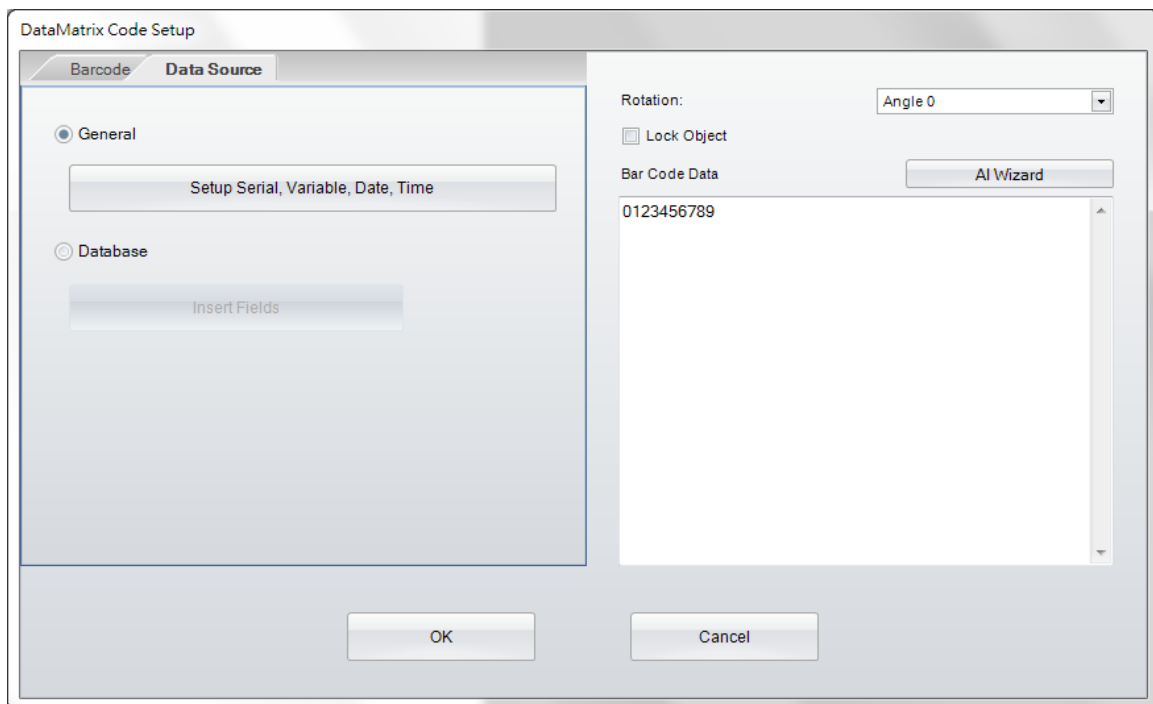
4.9.5 Create DataMatrix Code

- Select "Barcode" in left side of screen, then click the icon  for DataMatrix creating
- Move cursor to the location where the DataMatrix will be creating, and press left key of mouse then
- It will pop up a dialog below, please Key-in and select the parameters of DataMatrix

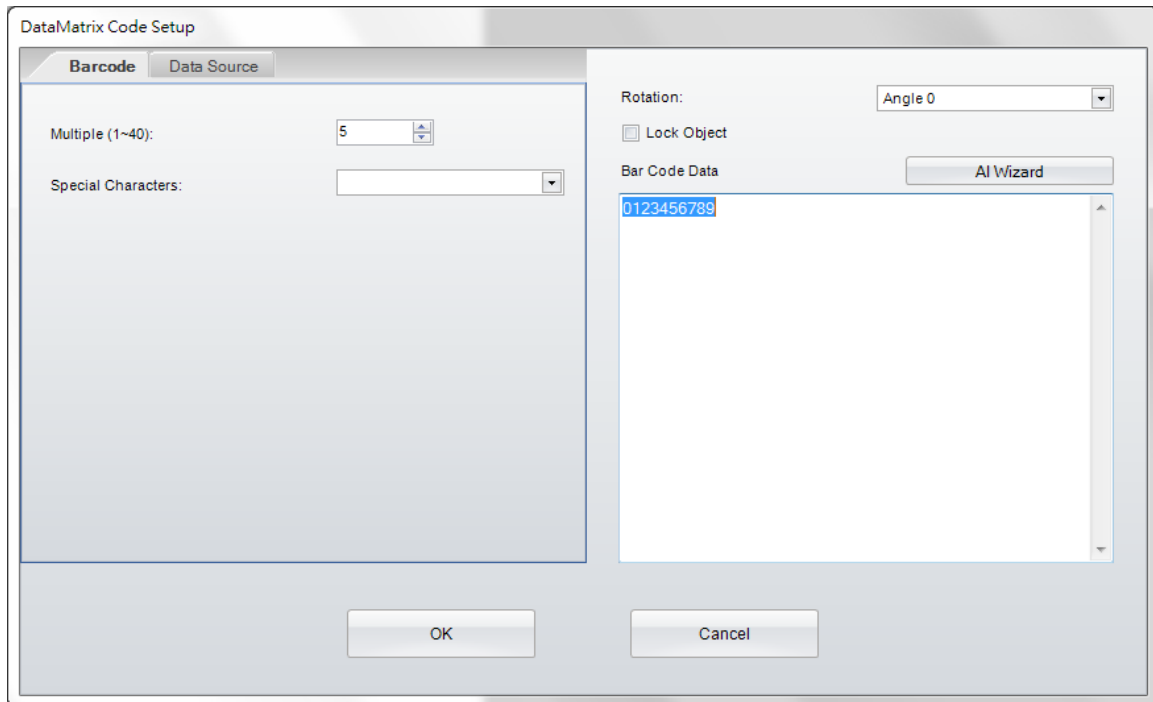

In the sub dialog "Data Source", user can select where the DataMatrix going to come from - "General" or "Database"


- General: it select where the "Data Source" of DataMatrix is coming from, which will pop up a "self-defining table" that user can define the text stream with serial number, variable, data and time.
- Database: There are six databases (SQL, Access, Oracle, Excel, Txt, DBF) can be adopting when user selected database in "Data Source" sub-dialog. In fact, it also can be created by the icon  "Database Query" in "Generic Tool Set".
- The detail of how to define serial number, variable and database, please refer to both paragraphs "Variable and Serial Number" and "Database" in the chapters 5.2 to 5.5



4.9.6 Create QRCode



- Select "Barcode" in left side of screen, then click the icon for QRCode creating
- Move cursor to the location where the QRCode will be creating, and press left key of mouse then
- It will pop up a dialog below, please Key-in and select the parameters of QRCode

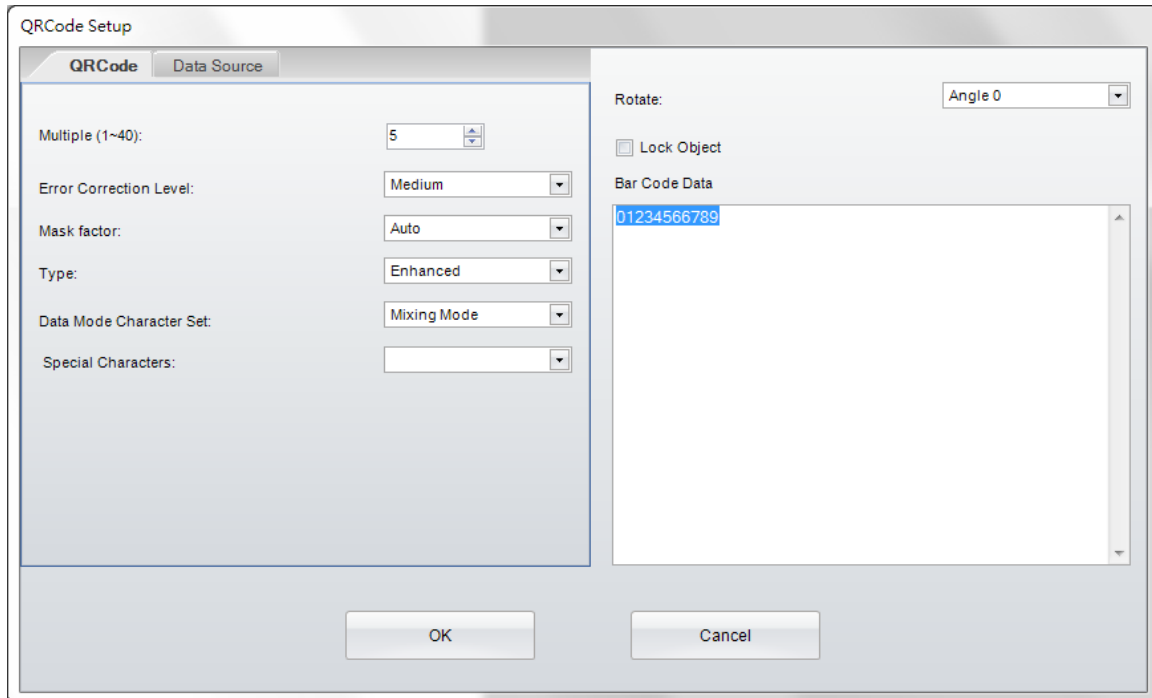A screenshot of the "QRCode Setup" dialog box. The dialog has two tabs: "QRCode" (selected) and "Data Source". The "QRCode" tab contains several settings: "Multiple (1~40):" with a value of 5; "Error Correction Level:" set to "Medium"; "Mask factor:" set to "Auto"; "Type:" set to "Enhanced"; "Data Mode Character Set:" set to "Mixing Mode"; and "Special Characters:" with an empty field. On the right side, there is a "Rotate:" section with a dropdown menu set to "Angle 0", a "Lock Object" checkbox, and a "Bar Code Data" text area containing the number "01234566789". At the bottom are "OK" and "Cancel" buttons.

QRCode Setup

QRCode Data Source

Multiple (1~40): 5

Error Correction Level: Medium

Mask factor: Auto

Type: Enhanced

Data Mode Character Set: Mixing Mode

Special Characters:

Rotate: Angle 0


☐ Lock Object


Bar Code Data

01234566789


OK Cancel


In the sub dialog "Data Source", user can select where the QRCode is going to come from - "General" or "Database"

- General: it select where the "Data Source" of QRCode is coming from, which will pop up a "self-defining table" that user can define the text stream with serial number, variable, data and time.
- Database: There are six databases (SQL, Access, Oracle, Excel, Txt, DBF) can be adopting when user selected database in "Data Source" sub-dialog. In fact, it also can be created by the icon  "Database Query" in "Generic Tool Set".
- The detail of how to define serial number, variable and database, please refer to both paragraphs "Variable and Serial Number" and "Database" in the chapters 5.2 to 5.5

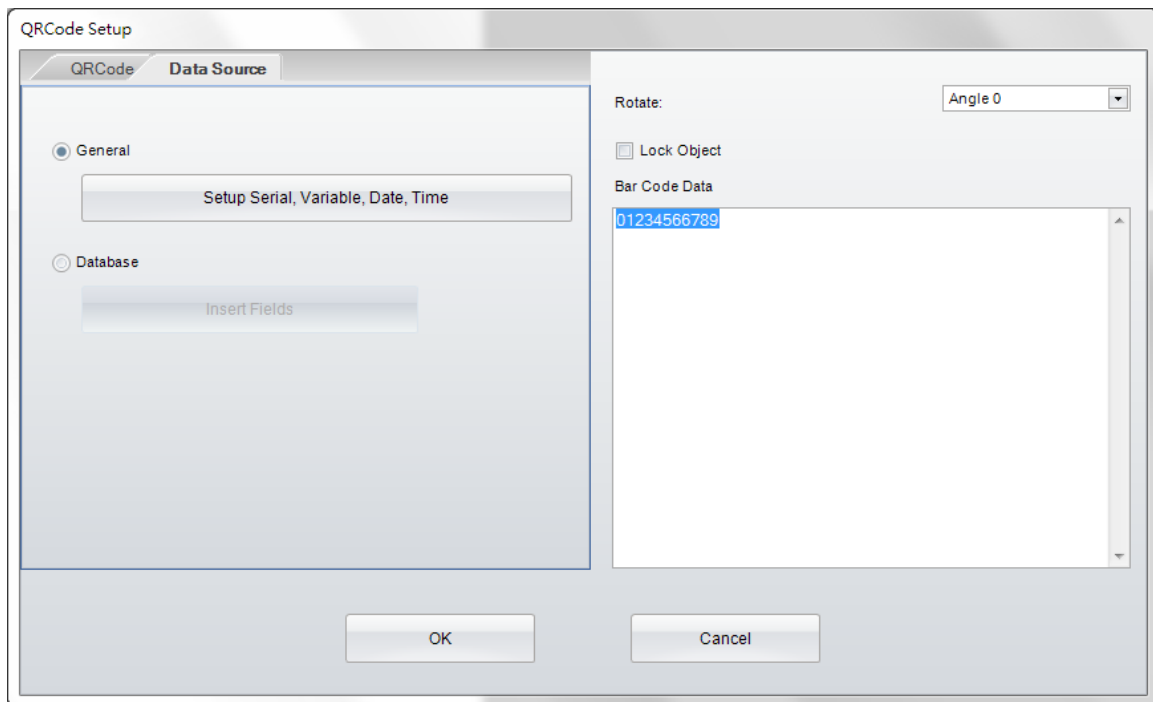


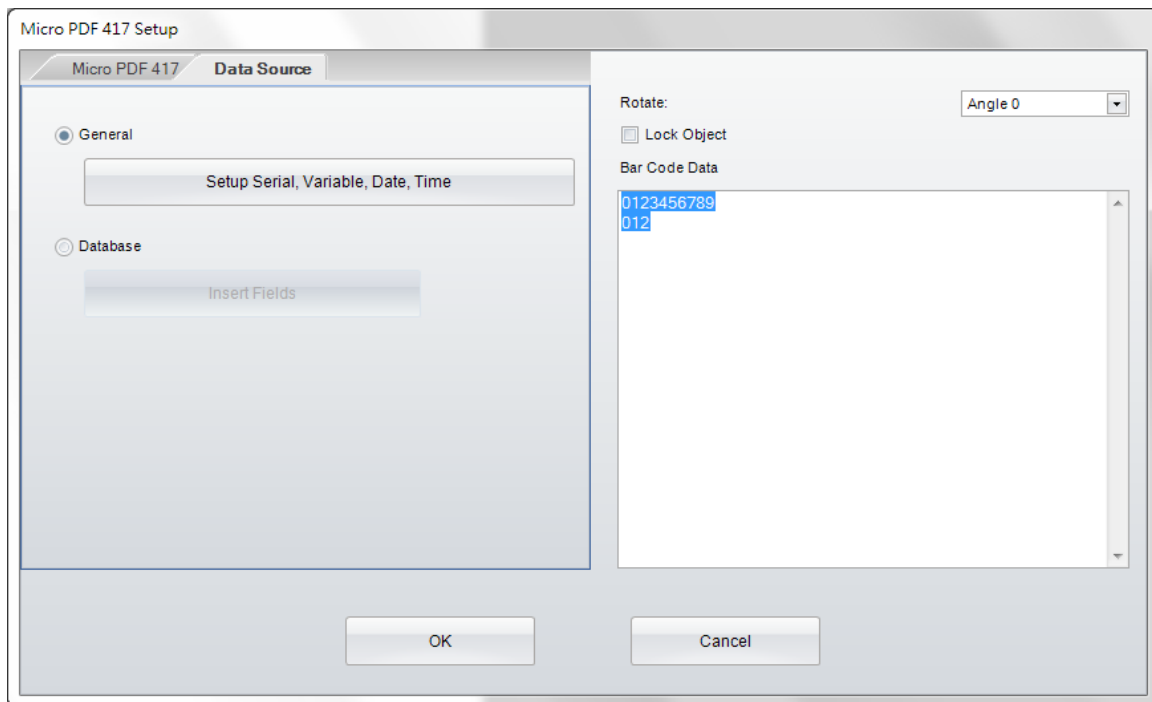
4.9.7 Create Micro PDF 417 Code

- Select "Barcode" in left side of screen, then click the icon  for Micro PDF 417 creating
- Move cursor to the location where the Micro PDF 417 will be creating, and press left key of mouse then
- It will pop up a dialog below, please Key-in and select the parameters of Micro PDF 417

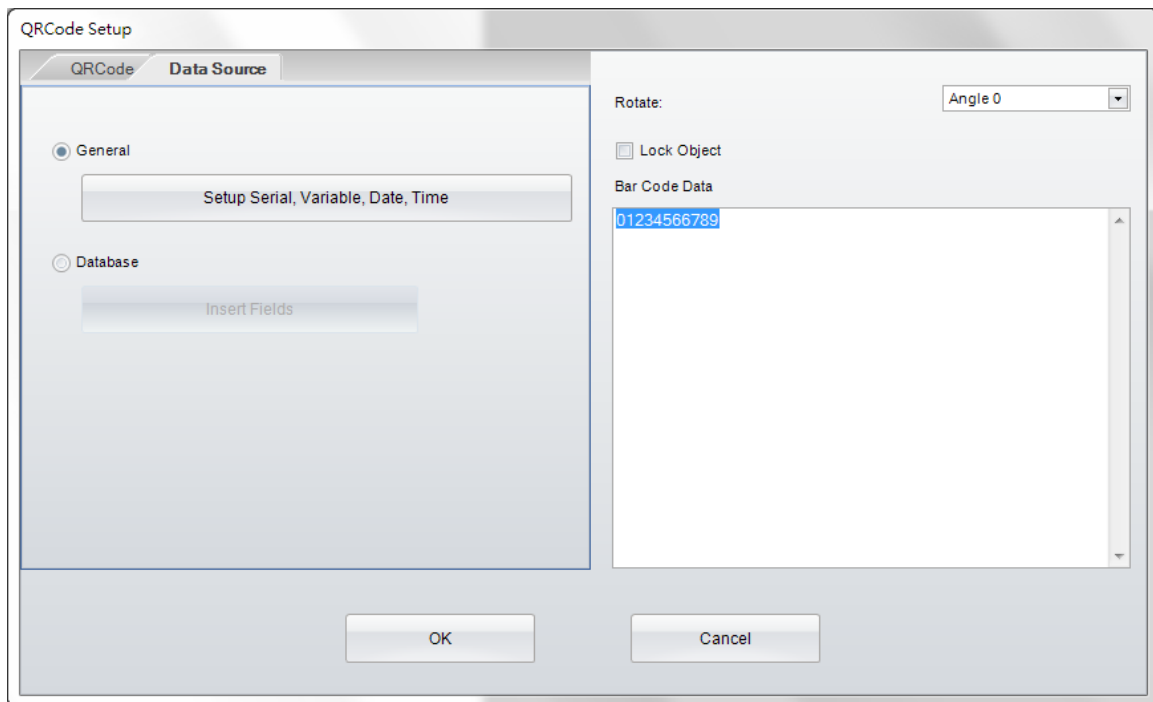


In the sub dialog "Data Source", user can select where the Micro PDF 417 going to come from - "General" or "Database"


- General: it select where the "Data Source" of Micro PDF 417 is coming from, which will pop up a "self-defining table" that user can define the text stream with serial number, variable, data and time.
- Database: There are six databases (SQL, Access, Oracle, Excel, Txt, DBF) can be adopting when user selected database in "Data Source" sub-dialog. In fact, it also can be created by the icon  "Database Query" in "Generic Tool Set".
- The detail of how to define serial number, variable and database, please refer to both paragraphs "Variable and Serial Number" and "Database" in the chapters 5.2 to 5.5




4.9.8 Create Aztec Code




- Select "Barcode" in left side of screen, then click the icon  for Aztec creating
- Move cursor to the location where the Aztec will be creating, and press left key of mouse then
- It will pop up a dialog below, please Key-in and select the parameters of Aztec

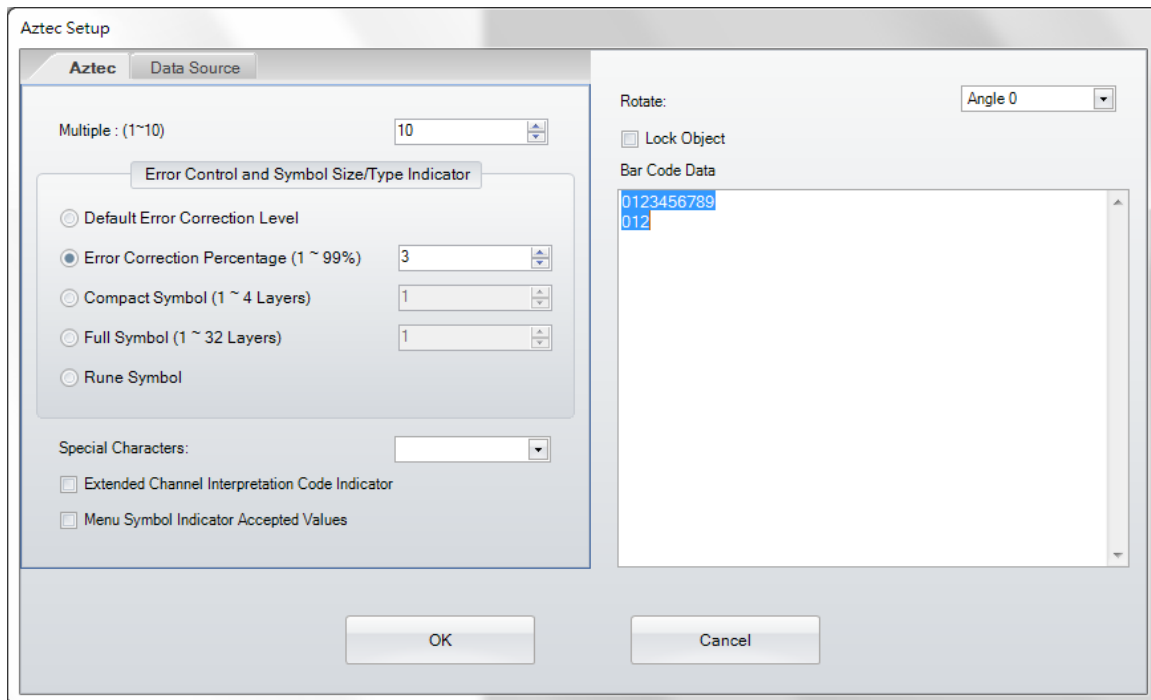The image shows a software dialog box titled "Aztec Setup". It has two tabs: "Aztec" (selected) and "Data Source". The "Aztec" tab contains several settings: "Multiple : (1~10)" with a value of 10; a section titled "Error Control and Symbol Size/Type Indicator" with radio buttons for "Default Error Correction Level", "Error Correction Percentage (1 ~ 99%)" (selected), "Compact Symbol (1 ~ 4 Layers)", "Full Symbol (1 ~ 32 Layers)", and "Rune Symbol"; and "Special Characters:" with a dropdown menu. Below these are checkboxes for "Extended Channel Interpretation Code Indicator" and "Menu Symbol Indicator Accepted Values". The "Data Source" tab is visible on the right, showing "Rotate:" with a dropdown set to "Angle 0", a "Lock Object" checkbox, and a "Bar Code Data" text area containing the text "0123456789" and "012". At the bottom are "OK" and "Cancel" buttons.

In the sub dialog "Data Source", user can select where the Aztec going to come from - "General" or "Database"

- General: it select where the "Data Source" of Aztec is coming from, which will pop up a "self-defining table" that user can define the text stream with serial number, variable, data and time.
- Database: There are six databases (SQL, Access, Oracle, Excel, Txt, DBF) can be adopting when user selected database in "Data Source" sub-dialog. In fact, it also can be created by the icon  "Database Query" in "Generic Tool Set".
- The detail of how to define serial number, variable and database, please refer to both paragraphs "Variable and Serial Number" and "Database" in the chapters 5.2 to 5.5

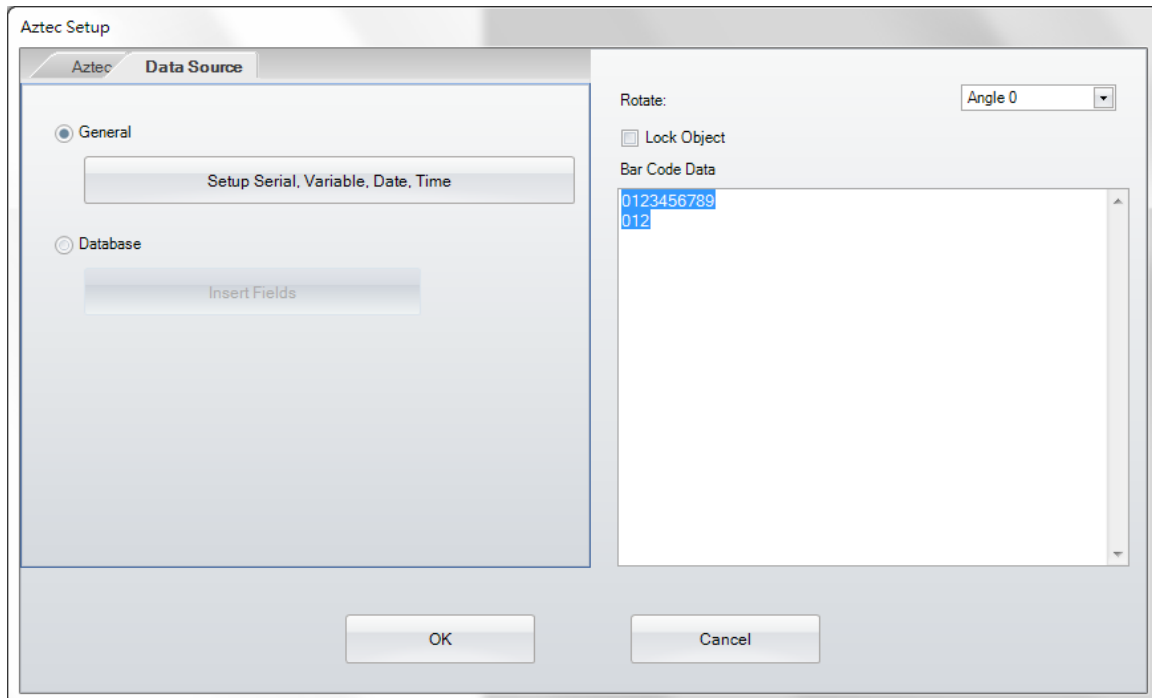


4.9.9 Create Composite Code

1) Symbolology




- Select "Barcode" in the left side of screen, and then click the icon **Composite** of the "Object Too Set", and move cursor to the location that "Composite" will be located and click left key again.
- There are three sub-dialogs in the "Barcode Setup" – Symbolology, Human Readable Style, and Data Source
- In the Symbolology sub-dialog, choose barcode type first and then define its Narrow or Segs/Row. Be sure to design a corrective barcode for scanner reading.
- The barcode also can be rotated from 0, 90, 180- and 270 degree. A field of "Bar Code Data" may key-in by users themselves.
- After the completed of definition the Barcode, please click "Refresh Preview" to preview the designing Barcode, or press "Enter Key" while you key-in the data to the field of "Bar Code Data"
- There are many documents on the web or book story can be reference if someone is no idea how to design the Composite.

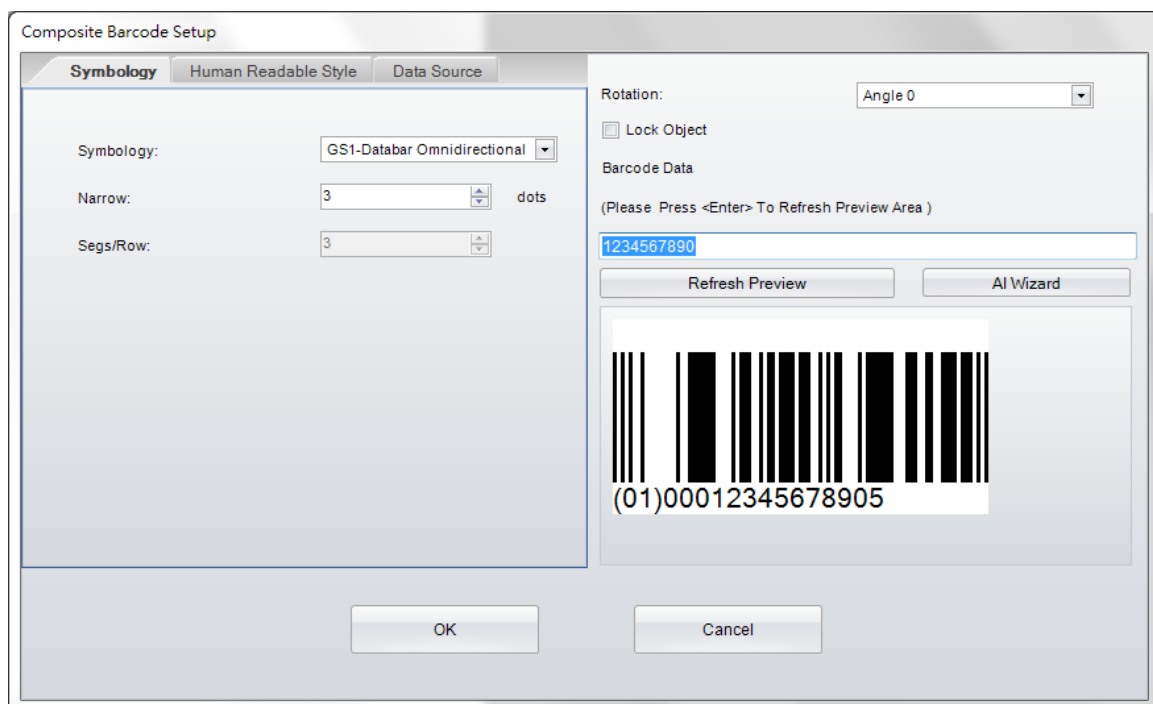


2) Human Readable Style


- Click and enter to sub-dialog "Human Readable Style", to select "Position Alignment" that decides where the position of "TEXT" to be alignment, which also will update the display on "Preview" window.

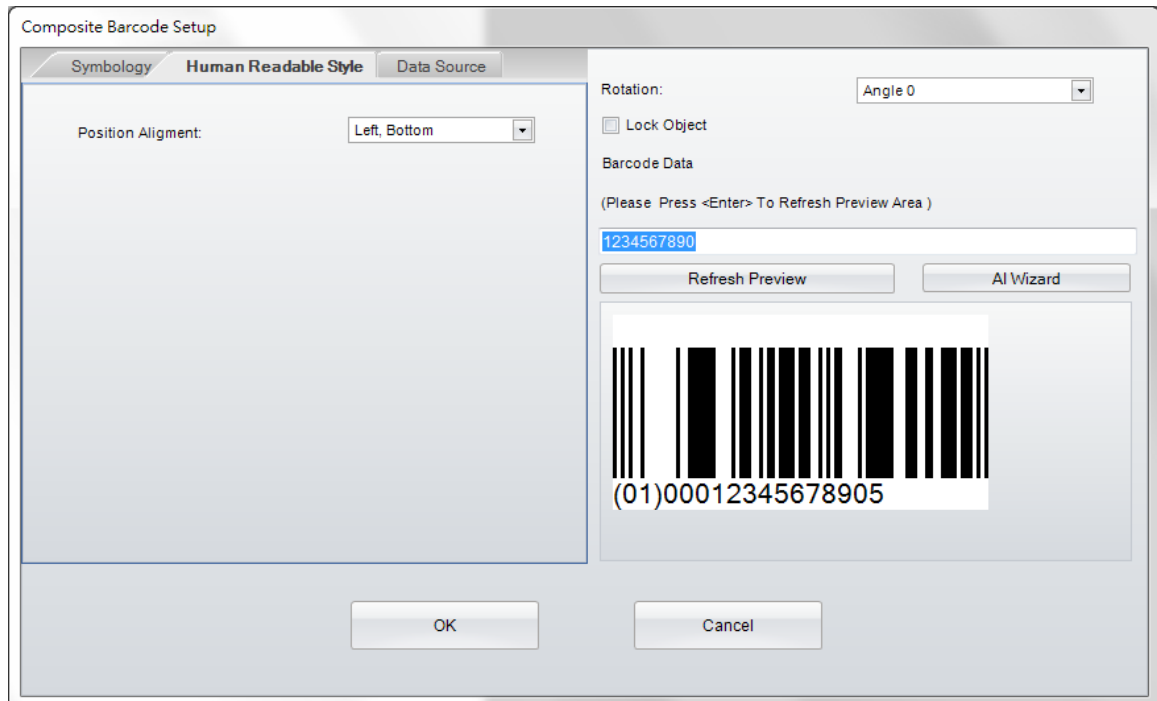

3) Data Source




In the sub dialog "Data Source", user can select where the data source will be linked to Barcode - "General" or "Database"

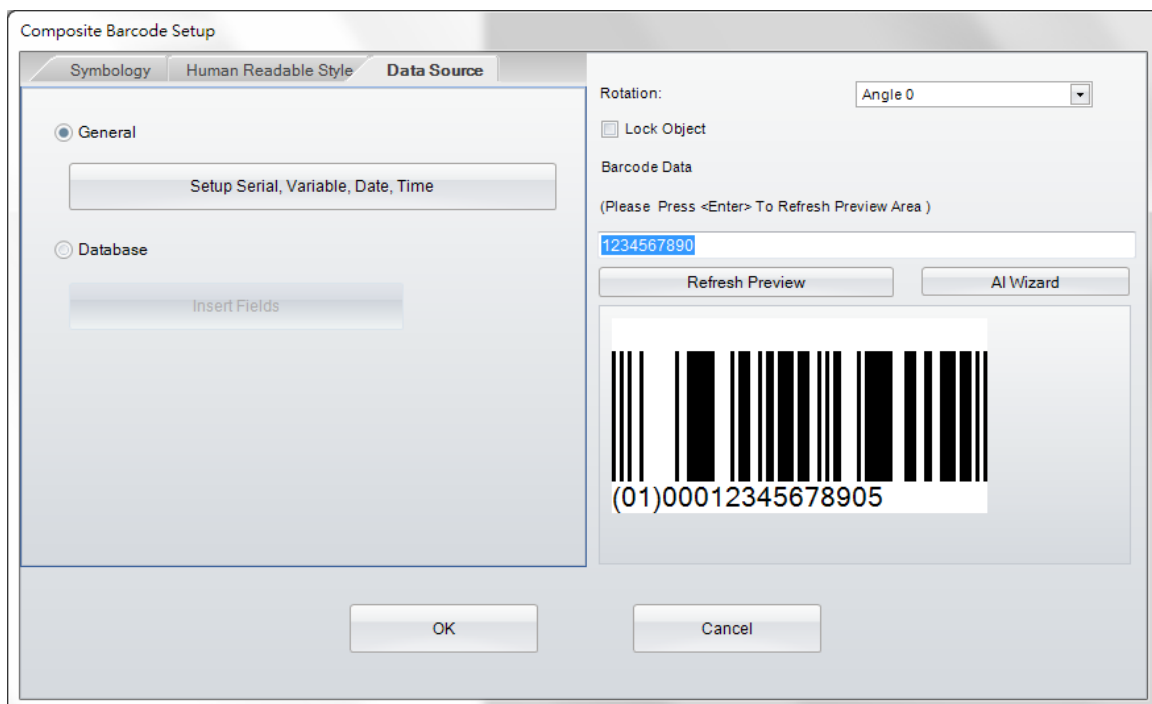
- General: it select where the "Data Source" of Barcode is coming from, which will pop up a "self-defining table" that user can define the text stream with serial number, variable, data and time.
- Database: There are six databases (SQL, Access, Oracle, Excel, Txt, DBF) can be adopting when user selected database in "Data Source" sub-dialog. In fact, it also can be created by the icon  "Database Query" in "Generic Tool Set".
- The detail of how to define serial number, variable and database, please refer to both paragraphs "Variable and Serial Number" and "Database" in the chapters 5.2 to 5.5




4.10 Drawing Line, Rectangle and Circle


4.10.1 Drawing Line (Horizontal Line, Vertical Line and Oblique Line)

- Select "Shape" in left side of screen, and then click either icon of the drawing tool -
Horizontal Line , Vertical Line  or Oblique Line .
- Move cursor to the location where the first point of line will be drawing, press left key of mouse and drag it to end point and release it then.
- The object's location and length are movable and adjustable by mouse with left key dragging while it's being selected.
- Double click to the line that will pop up a "Setup" dialog for the length and thickness editing

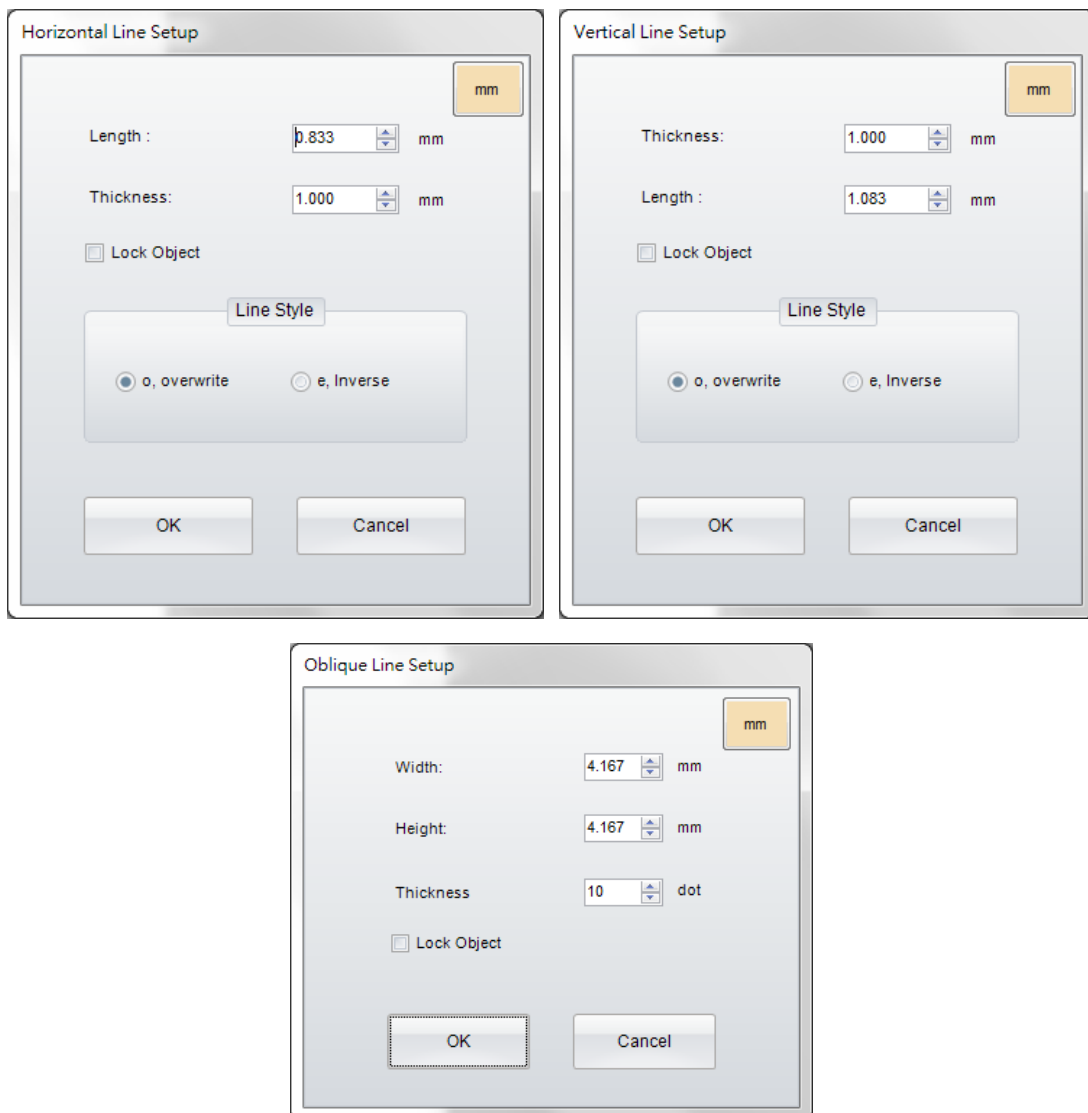


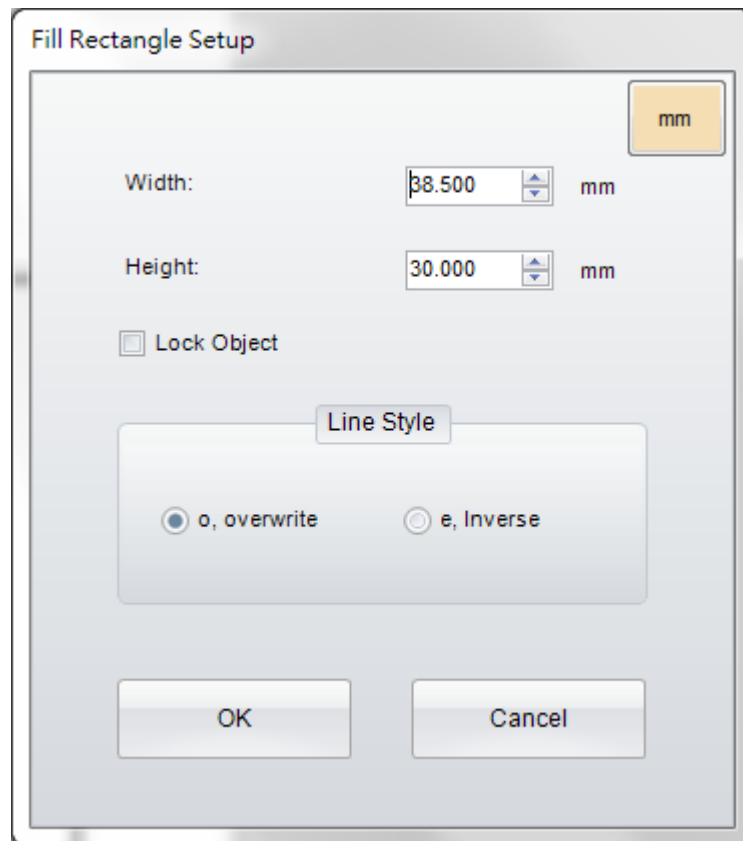
4.10.2 Drawing Box or Rectangle

- Select "Shape" in left side of screen, and then click the icon  for box/rectangle drawing
- Move cursor to the location where the first point of box/rectangle will be drawing, press left key of mouse and drag it to end point and release it then.
- The object's location, width and height are movable and adjustable by mouse with left key dragging while it's being selected.
- Double click to the box/rectangle that will pop up a "Setup" dialog for the width, height and thickness editing

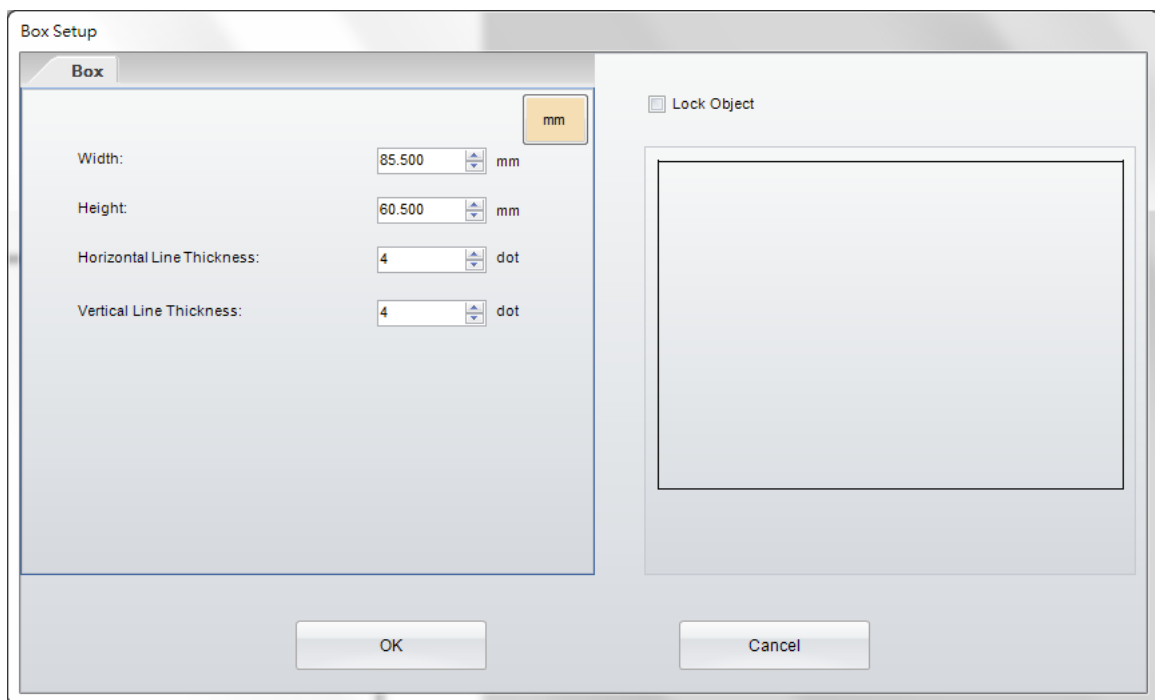


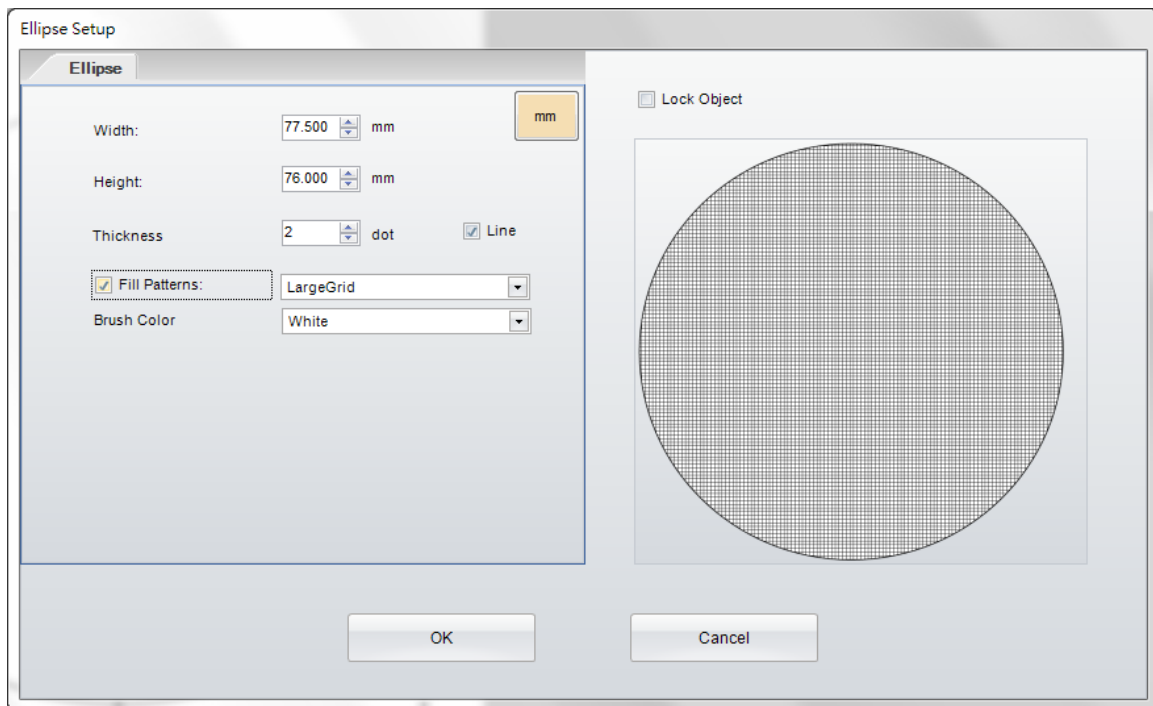
4.10.3 Drawing Filled Rectangle

- Select "Shape" in left side of screen, and then click the icon  for filled rectangle drawing
- Move cursor to the location where the first point of rectangle will be drawing, press left key of mouse and drag it to end point and release it then.
- The object's location, width and height are movable and adjustable by mouse with left key dragging while it's being selected.
- Double click to the rectangle that will pop up a "Setup" dialog for the width and height editing




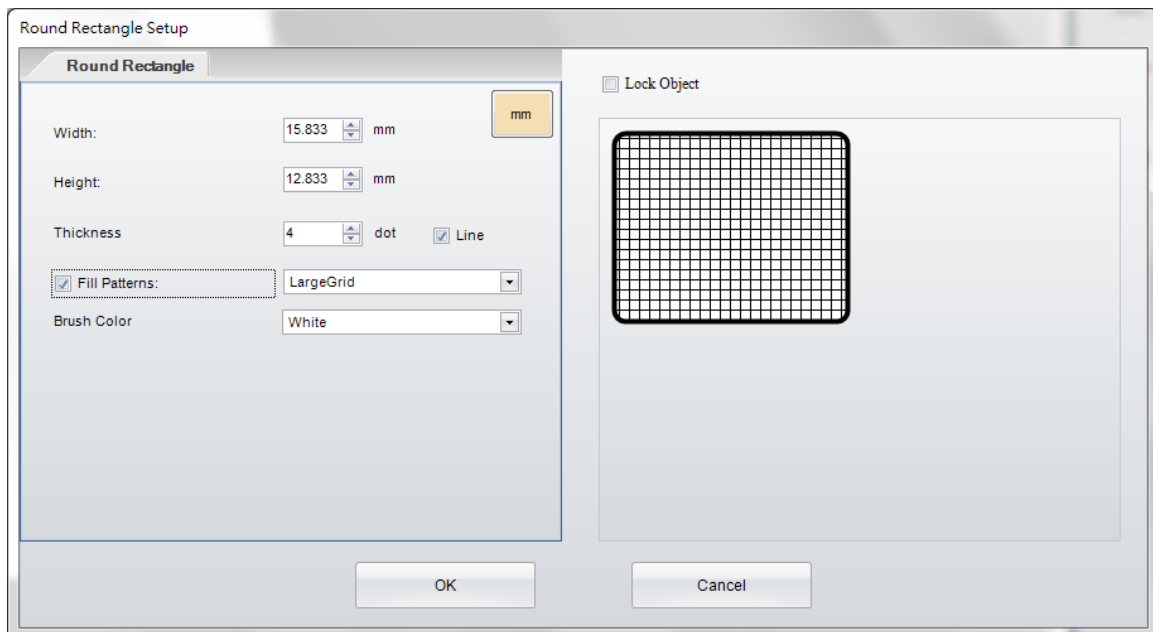
4.10.4 Drawing Circle or Ellipse

- Select "Shape" in left side of screen, and then click the icon  for circle/ellipse drawing
- Move cursor to the location where the first point of circle/ellipse will be drawing, press left key of mouse and drag it to end point and release it then.
- The object's location, width and height are movable and adjustable by the dragging while user presses the left key of mouse on the object when it's being selected.




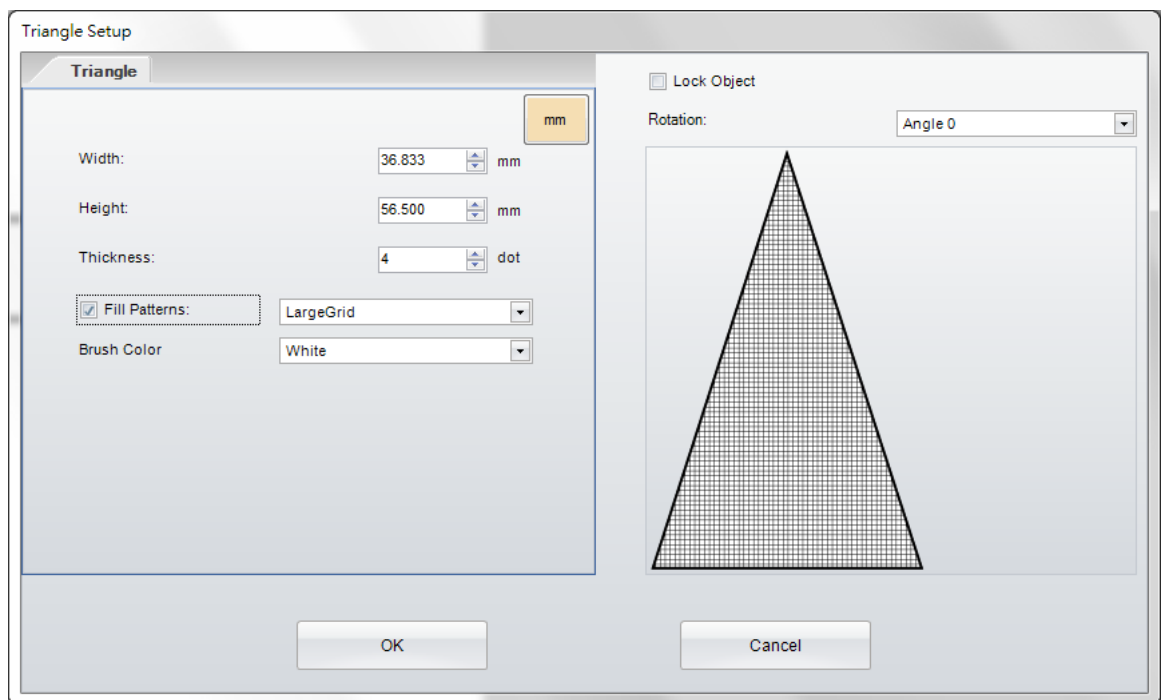
4.10.5 Drawing Rounded Rectangle

- Select "Shape" in left side of screen, and then click the icon  for rounded rectangle drawing
- Move cursor to the location where the first point of rounded rectangle will be drawing, press left key of mouse and drag it to end point and release it then.
- The object's location, width and height are movable and adjustable by mouse with left key dragging while it's being selected.
- Double click to the rounded rectangle that will pop up a "Setup" dialog for the width, height, thickness, fill pattern and brush color editing




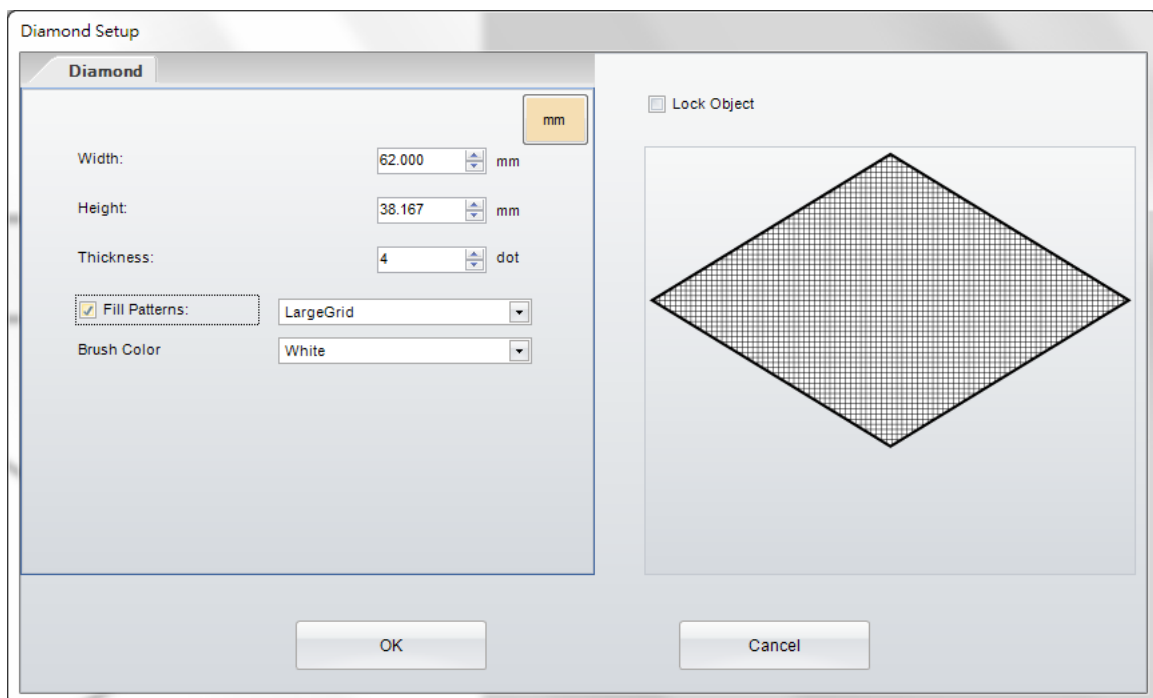
4.10.6 Drawing Triangle

- Select "Shape" in left side of screen, and then click the icon  for Triangle drawing
- Move cursor to the location where the first point of Triangle will be drawing, press left key of mouse and drag it to end point and release it then.
- The object's location, width and height are movable and adjustable by mouse with left key dragging while it's being selected.
- Double click to the Triangle that will pop up a "Setup" dialog for the width, height, thickness, fill pattern and brush color editing




4.10.7 Drawing Diamond

- Select "Shape" in left side of screen, and then click the icon  for Diamond drawing
- Move cursor to the location where the first point of Diamond will be drawing, press left key of mouse and drag it to end point and release it then.
- The object's location, width and height are movable and adjustable by mouse with left key dragging while it's being selected.
- Double click to the Diamond that will pop up a "Setup" dialog for the width, height, thickness, fill pattern and brush color editing



4.11 Create Graphic

- Select "Graphic" in left side of screen, and then click the icon  for Graphic creating
- Move cursor to the location where the "Graphic" will be creating, and press left key of mouse then.
- In the Graphic dialog, select "Graphic Source" will pop up a sub-dialog to load graphic/image from either - file, clipboard or a downloaded graphic.

Select the downloaded graphic in printer, user can choose where the Graphic going to come from - "General" or "Database"

- General: it select "Graphic", user can define the text stream of Graphic with serial number, variable, data and time.
- Database: There are six databases (SQL, Access, Oracle, Excel, Txt, DBF) can be adopting when user selected database in the dialog. In fact, it also can be created by the icon




"Database Query" in "Generic Tool Set".


- The detail of how to define serial number, variable and database, please refer to both paragraphs "Variable and Serial Number" and "Database" in the chapters 5.2 to 5.5
- To remove/delete the printer's saved "Graphic", please go on the "Advance Tool Set",




which has an icon "Delete Printer Object"

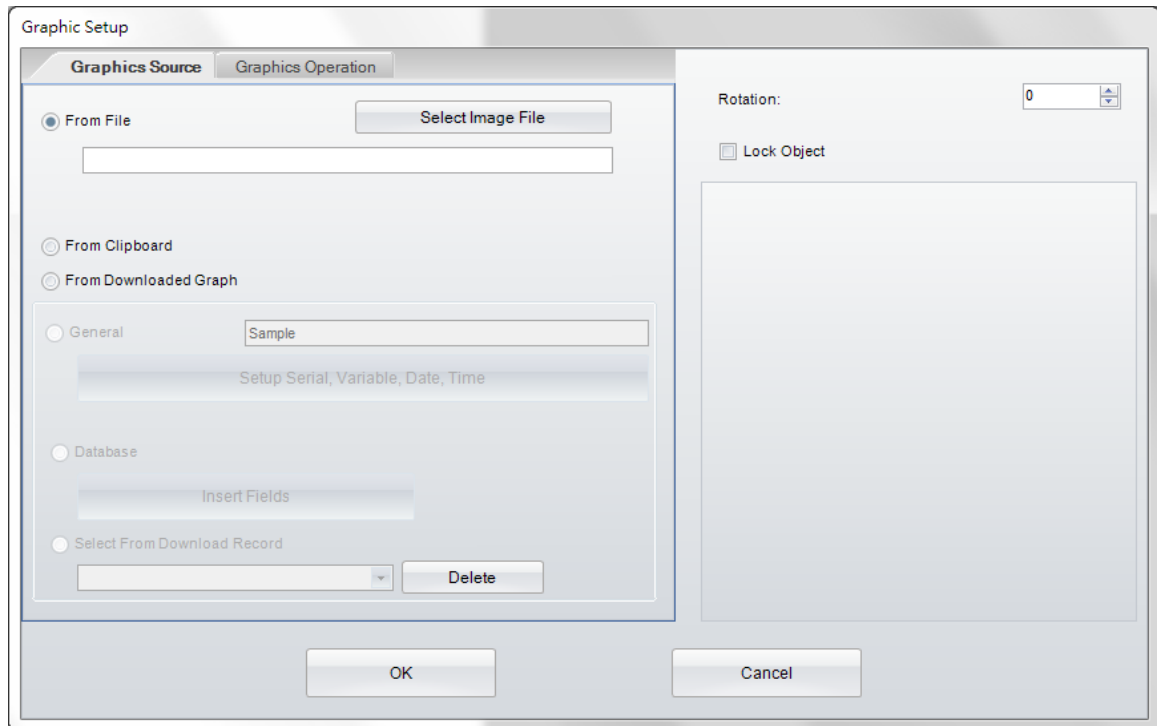

 - In the sub-dialog "Graphic Operation", the graphic can be defining and/or processing with width, height, rotation angle and color.

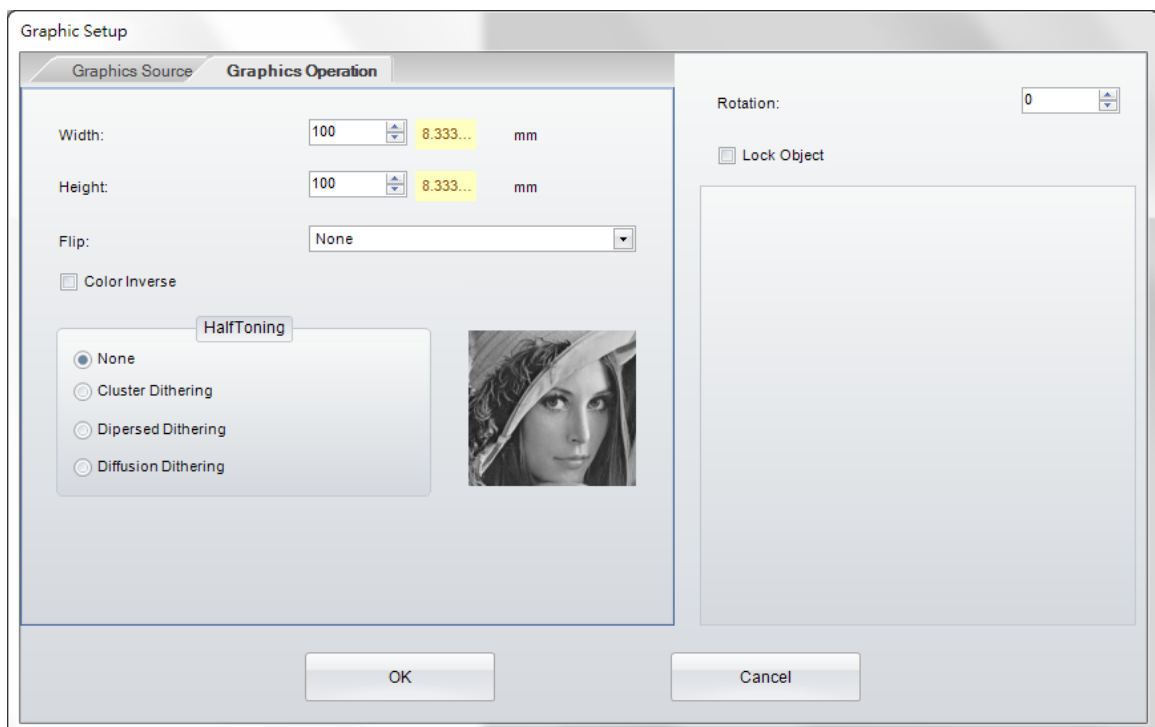






4.12 Lock Object


In entire "Object" dialogs, it has a function called "Lock Object"  that allowed user to lock the object not for move or modify.

- Select "Lock Object" in the dialog to lock object not be moving or modify.
- If user wants removing a "Lock Object", please double click "Object" itself, enter the dialog to deselect "Lock Object" this function and choose "OK" to close, then the Object will be unlock.

5. Advance Operation

5.1 Command Format


- A label has been well created or during the editing; user may click the icon "Export"  in the Command Area, to export/convert the entire parameters and contents in the "Label Design Area" to become "Text/ASCII Commands Format" on the Command Area. Then it can be saved as a pure "TEXT/ASCII" file by the icon , or send it to printer directly by the icon "Send" .
- To retrieve a saved "TEXT/ASCII" file back, please open it by the icon "Open" , and then import it back to the Label Design Area by the icon "Import" .
- The labels exported to the Command Area in "TEXT/ASCII" format and can be editing and saving as a "TEXT/ASCII" file on PC. Thus, in DOS mode, user may work on this file with DOS commands - COPY, PRINT, TYPE, etc. to manipulate this "TEXT/ASCII" file and then send/print it to the printer directly. Besides, the commands in the Command Area are exported direct from the Label Design Area. For certain high level application, GoLabel provides these quickly and convenient of operation tools for SI engineer and software designer.

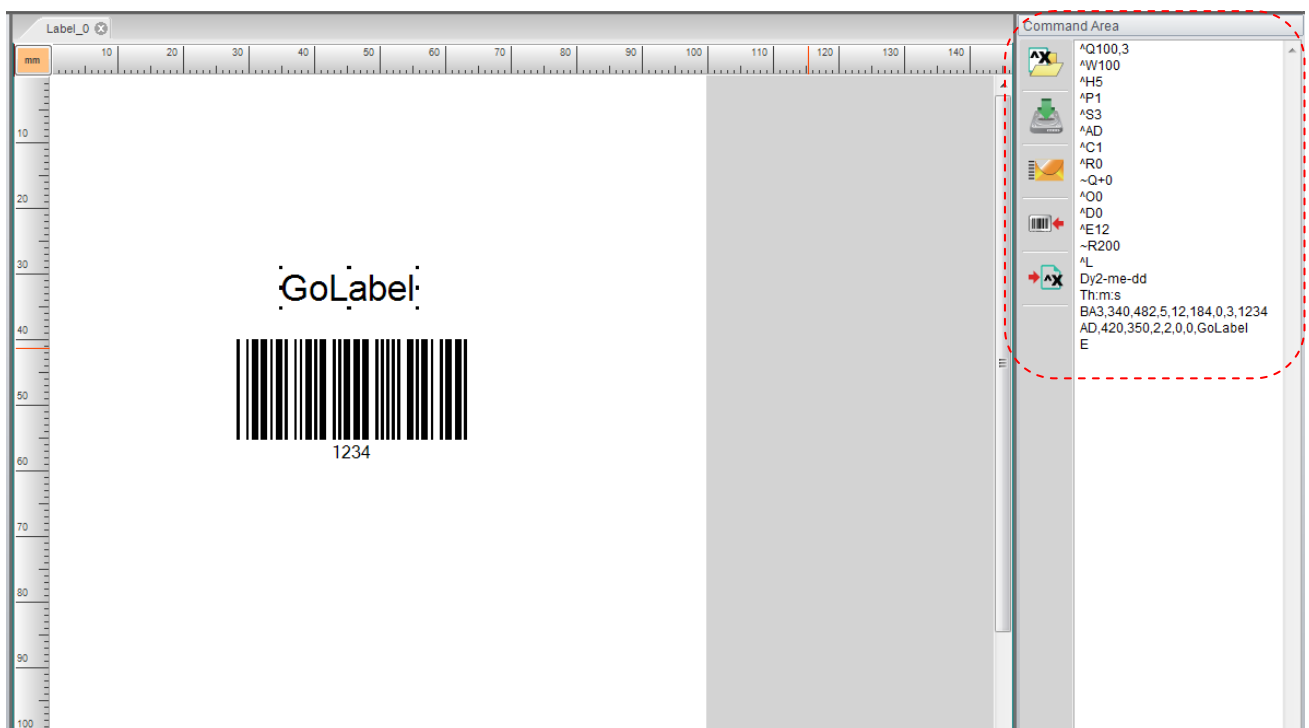


5.2 Using Serial Number

5.2.1 Create Serial Number

In the Barcode, Text, Graphic of the Object Dialogs, It has a sub-dialog “Data Source” or “Graphic Source”, which can choose “General” and then click “Setup Serial, Variable, Date, Time” to open a 3rd level dialog respectively.

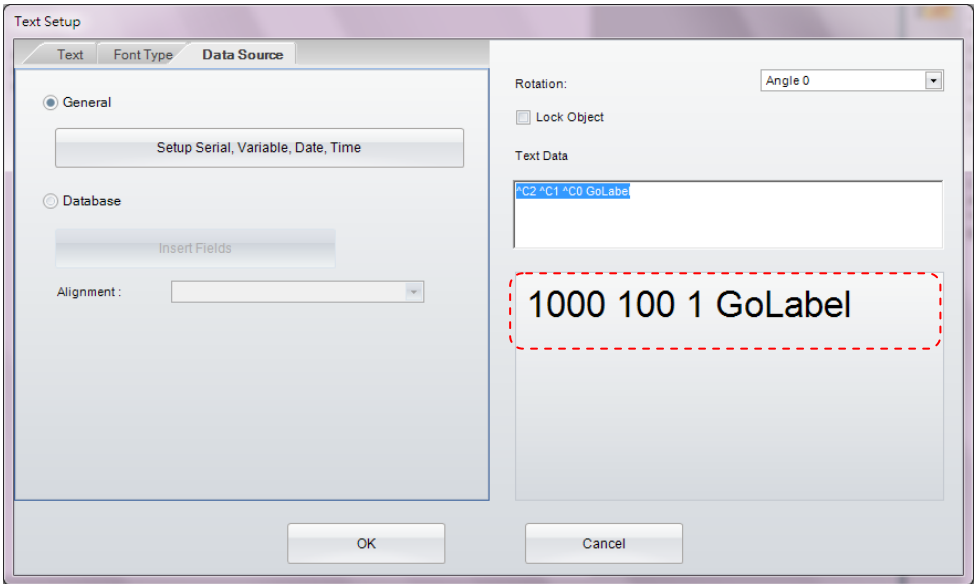

Click “Edit” in the dialog of “Setup Serial, Variable, Date, Time” to open a 4th level dialog “Serial Number Maintain”. After Editing, please select which one and click “Insert” to insert serial number to the Object.

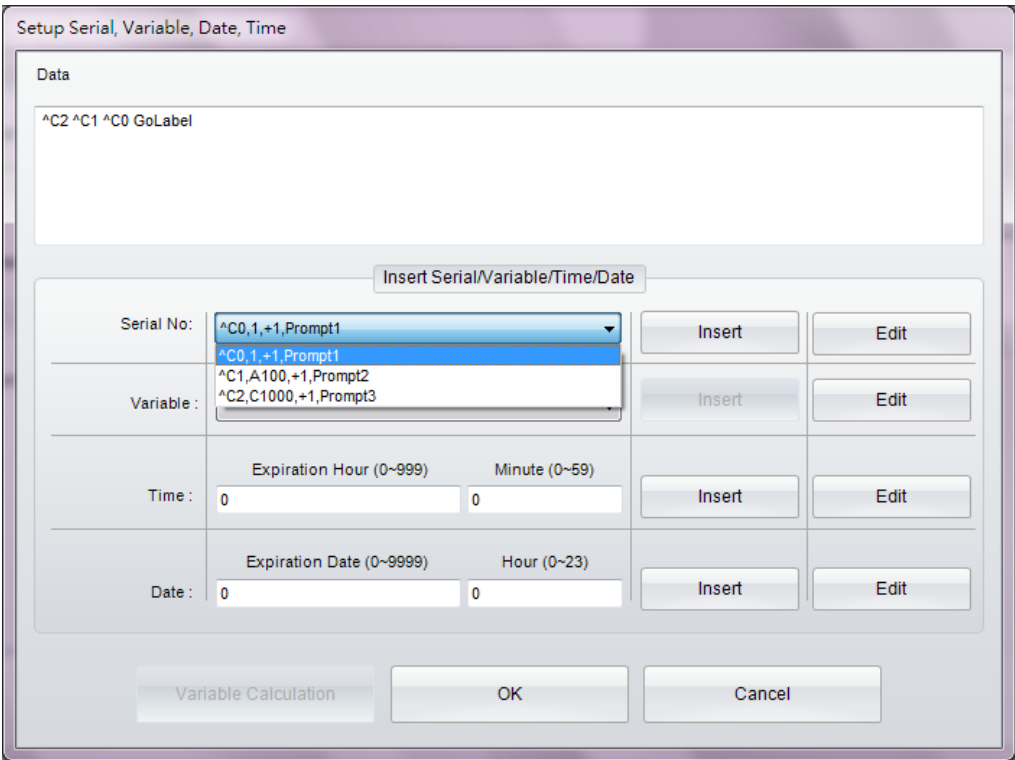

GoLabel On-line Help

- Select the editing column first and click "Add", key-in its "Starting Value" and other parameters, then click "Modified" to confirm. Repeat this editing to the rest columns and until all the columns of serial number are done.
- "Prompt for value before print" is set, printer will stop and display a "Prompt" message on Printer (Standalone Model only) and waiting for user to enter starting value

For Example (make three S/N in a text stream "GoLabel" :

- In column 0: Click "Add" first, Set "Starting Value" to 1 and other parameters, then Click "Modified"
- In column 1: Click "Add" first, Set "Starting Value" to 100 and other parameters, then Click "Modified"
- In column 2: Click "Add" first, Set "Starting Value" to 1000 and other parameters, then Click "Modified" and "OK" to close the dialog back to last dialog - "Setup Serial, Variable, Date, Time"
- Hence, it has 3 serial numbers can be selected by the Object of this designing Label.
- Select which on of Serial Number first and click "Insert", repeat select C0, C1 and C2 then,
- The result is " ^C2 ^C1 ^C0 GoLabel". (A space is manually inserted in between the S/N 0, 1 and2)
- The Print Out is first label "1000 100 1 GoLabel", second "1001 101 2 GoLabel", third "1002 102 3 GoLabel", etc.

Serial Number Maintain

Edit Serial Number

Starting Value: 1000 ☒ Prompt for value before print Prompt

Increment/Decrement: + Radix: Base36 (0~9 A~Z)

Step: 1

Add Clear Clear All

Serial Number Table

	Starting Value	Increment/Decrement	Step	Prompt for value before print	Radix
0*	1	+	1	Prompt	Decimal (0~9)
1*	100	+	1	Prompt	HexaDecimal (0~9 ...
2*	1000	+	1	Prompt	Base36 (0~9 A~Z)
3					
4					
5					
6					

OK Cancel

5.2.2 Editing Serial Number

- Double click the Object that the serial number will be modifying
- The editing procedures are similar to the creating, just select the row that wants to modify and makes the editing directly.
- There are two more icons are reserved for editing. The icon "Clear" – it remove serial number one by one, "Clear All" that deletes all the serial numbers in once.

Serial Number Maintain

Edit Serial Number

Starting Value: 1000 ☒ Prompt for value before print: S/N #3

Increment/Decrement: + Radix: Decimal (0~9)

Step: 1

Add Clear Clear All

Serial Number Table

	Starting Value	Increment/Decrement	Step	Prompt for value before print	Radix
0*	1	+	1	S/N #1	Decimal (0~9)
1*	100	+	1	S/N #2	HexaDecimal (0~9 ...
2*	1000	+	1	S/N #3	Decimal (0~9)
3					
4					
5					
6					

OK Cancel

5.3 Using Variable

Be noted: Variable Create in GoLabel is for the printer that working in "Standalone" mode and operating with "Recall Label" only.

5.3.1 Create Variable

In the Barcode, Text, Graphic of the Object Dialogs, It has a sub-dialog "Data Source" or "Graphic Source", which can choose "General" and then click "Setup Serial, Variable, Date, Time" to open a 3rd level dialog respectively.

Click "Edit" in the dialog of "Setup Serial, Variable, Date, Time" to open a 4th level dialog - "Variable Maintain". After Editing, please select which one and click "Insert" to insert "Variable" to the Object.

- Select the editing column first and click "Add", key-in its "Set Maximum Number of Character" and other parameters, then click "Modified" to confirm. Repeat this editing to the rest columns and until all the columns of Variable is done.
- "Prompt for value before print" is set, printer will stop and display a "Prompt" message on Printer (Standalone Mode only) and waiting for first starting value input and enter (Bug)

For Example (make two variables in a text stream "GoLabel"):

- Select column 0: Click "Add" first, Set "Set Maximum Number of Character" to 3 and other parameters, then Click "Modified"
- Select column 1: Click "Add" first, Set "Set Maximum Number of Character" to 4 and other parameters, then Click "Modified"
- Hence, it has two variables can be selected by the Object of this designing Label.
- Select which one of Variable first and click "Insert", repeat select V00 and V01 then,
- The result is " ^V01 ^V00 GoLabel". (A space is manually inserted in between the variable 0 and 1)
- The Print Out is depended on what variables are input when prompting, first label "VAR1 VAR GoLabel", second "var1 var GoLabel", etc.

GoLabel On-line Help

Setup Serial, Variable, Date, Time

Data

^V00 ^V01 GoLabel

Insert Serial/Variable/Time/Date

Serial No: [Dropdown] [Insert] [Edit]

Variable: ^V01,4,Prompt1,jl8 [Insert] [Edit]

Time: [Expiration Hour (0~9999) 0] [Minute (0~59) 0] [Insert] [Edit]

Date: [Expiration Date (0~9999) 0] [Hour (0~23) 0] [Insert] [Edit]

Variable Calculation [OK] [Cancel]

Variables Maintain

Edit Variable

Set maximum number of characters: 4 Field length: 8 mm

Prompt test for this variable field: Prompt1 Alignment: jl (Left Alignment)

Prompt State When Printing: 0 - Prompt Always

Float Format

☐ Use Float Format ☐ Enable Thousand Format

Numbers after decimal point: 0 Thousand Character: [Text Box]

Carry Mode: N - Round Off Decimal Character: [Text Box]

End Character: [Text Box]

Add Clear Clear All

Variable Table

	Set maximum number of characters	Alignment	Field length	Prompt test for this variable field	Prompt State Printing
0*	3	jl (Left Alignment)	8	Prompt0	0 - Prompt Always
1*	4	jl (Left Alignment)	8	Prompt1	0 - Prompt Always
2					
3					
4					
5					
6					

OK Cancel

5.3.2 Editing Variable

- Double click the Object that the "Variable" will be modifying
- The editing procedures are similar to the creating, just select the row that wants to modify and makes the editing directly.
- There are two more icons are reserved for editing. The icon "Clear" – it removes the selected variable one by one, "Clear All" that deletes all the variables in once.

Variables Maintain

Edit Variable

Set maximum number of characters: Field length: mm

Prompt test for this variable field: Alignment:


Prompt State When Printing:


Variable Table

	Set maximum number of characters	Alignment	Field length	Prompt test for this variable field	Prompt State When Printing
0*	8	jl (Left Alignment)	8	Name	1 - Prompt Once
1*	4	jl (Left Alignment)	8	Prompt1	1 - Prompt Once
2					
3					
4					
5					
6					
7					

5.4 Date Time setting

5.4.1 Setting Date/Time to the RTC of Printer

- Click the Icon "Printer Date Time Setting"  from Advance Tool Set
- Set the date/time in the dialog - "RealTime Clock Setup" and then click "OK"
- Or, Just click "OK" to load PC's date/time to the Printer's RTC

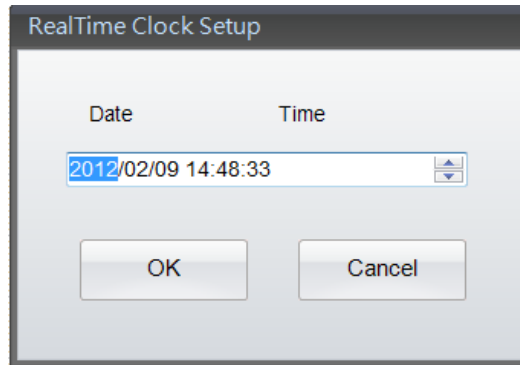

5.4.2 Add Date/Time in Label

In the Barcode, Text, Graphic of the Object Dialogs, It has a sub-dialog "Data Source" or "Graphic Source", which can choose "General" and then click "Setup Serial, Variable, Date, Time" to open a 3rd level dialog respectively.

Click the icon "Edit" in the dialog of "Setup Serial, Variable, Date, Time" to open a 4th level dialog "Date/Time Format Setup". After selection, please click either or both icons "Insert" to insert the RTC's Date/Time to the Object.


Setup Serial, Variable, Date, Time

Data

^D ^T GoLabel

Insert Serial/Variable/Time/Date

Serial No:	<input type="text"/>	Insert	Edit	
Variable :	<input type="text"/>	Insert	Edit	
Time :	Expiration Hour (0~999) <input type="text" value="0"/>	Minute (0~59) <input type="text" value="0"/>	Insert	Edit
Date :	Expiration Date (0~9999) <input type="text" value="0"/>	Hour (0~23) <input type="text" value="0"/>	Insert	Edit



 Variable Calculation

OK Cancel

GoLabel On-line Help

User selects preferring Date/Time format directly, or click icon “More” for comprehensive setup

- After selection, click “OK” and then back to the previous dialog for Date/Time insertion. Select “Expiration Date/Time and click the icon - “Insert” to insert date/time and expiration date/time if necessary
- Please be sure the printer is “Ready” before that sends the commands to the printer

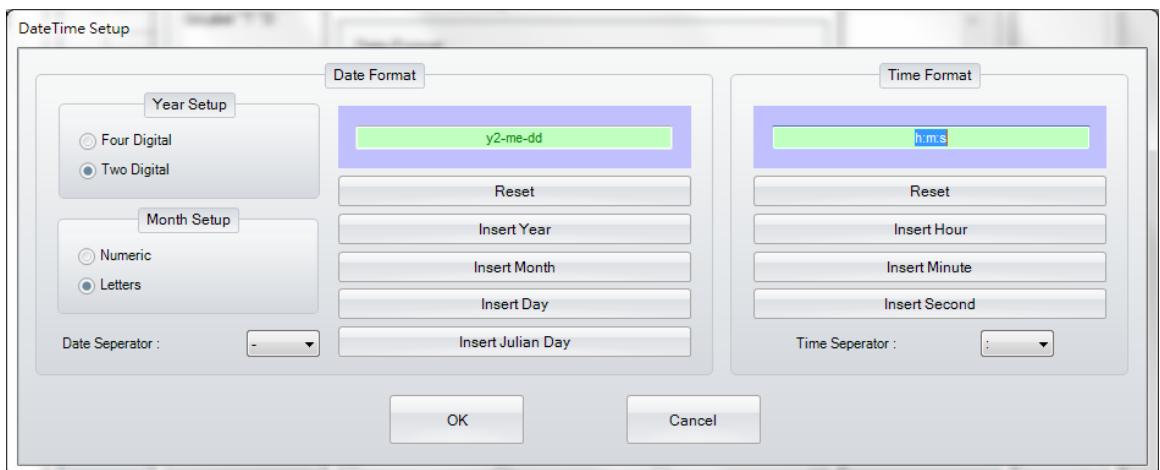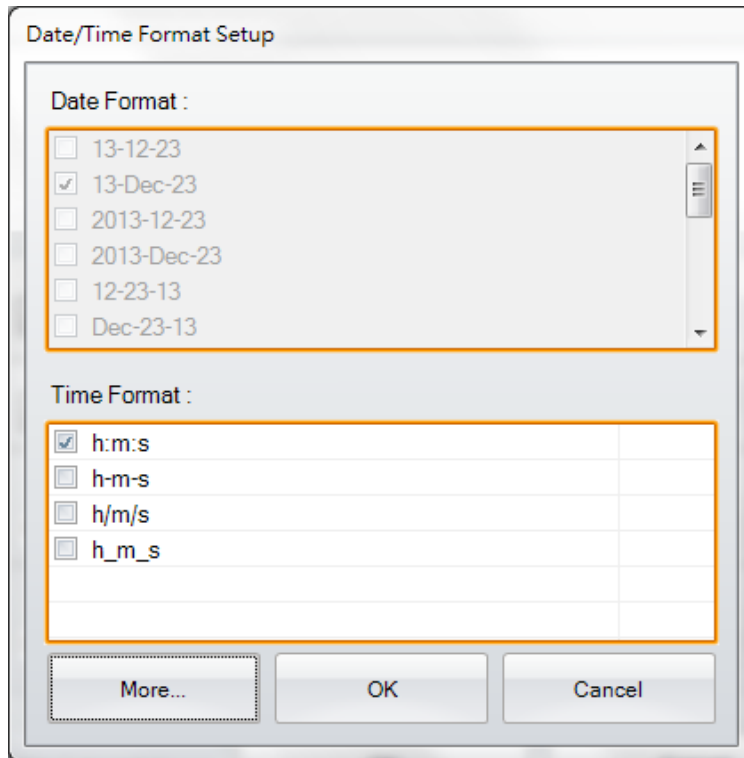


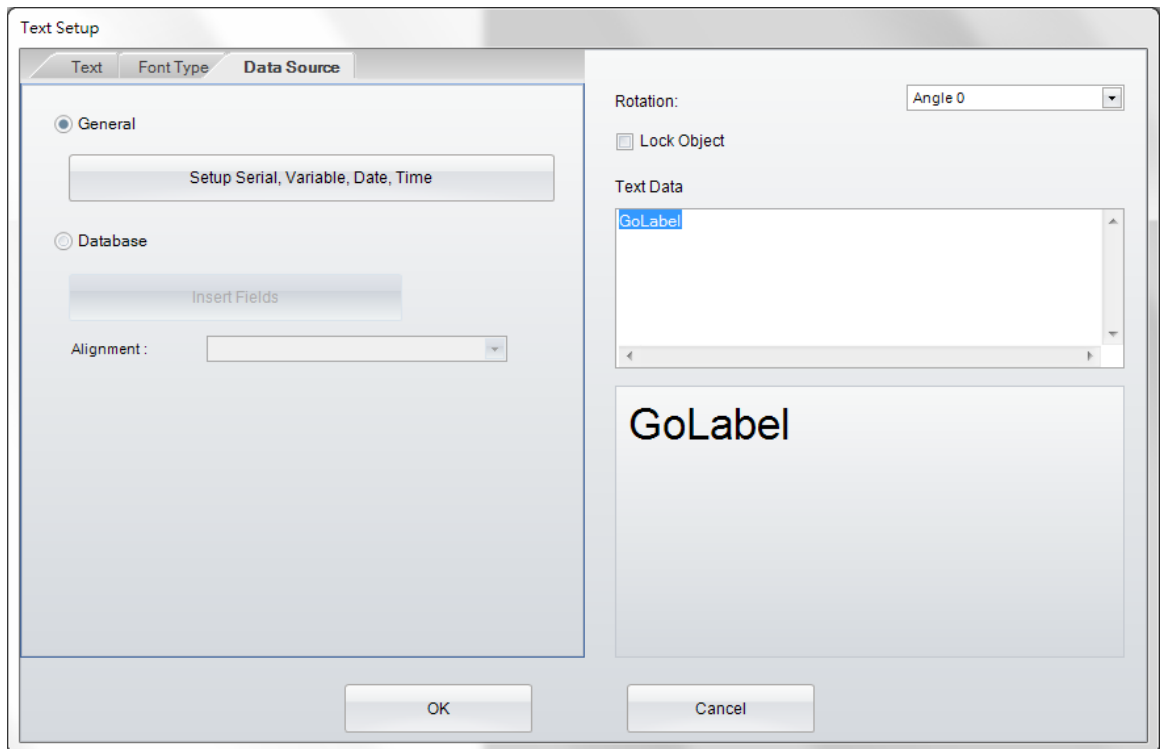
5.5 Database Linkage

Database linkage provides the function for label to link with the database files, such as Excel, Access and dBase.

5.5.1 Connect Database


There are two ways for linkage; both will pop up two dialogs - "Database Query" and then "Connection" for Database selection.

- Click the icon "Database Select"  of Generic Tool Set to make the database linkage.
- Or, in the Barcode, Text, Graphic of the Object Dialogs, It has a sub-dialog "Data Source" or "Graphic Source", which can choose to click the icon "Database".




GoLabel On-line Help

- GoLabel will pop up two overlay dialogs immediately; select which database going to link. For example, an Excel file – “1.xlsx”, click “OK” to close the “Connection” dialog.

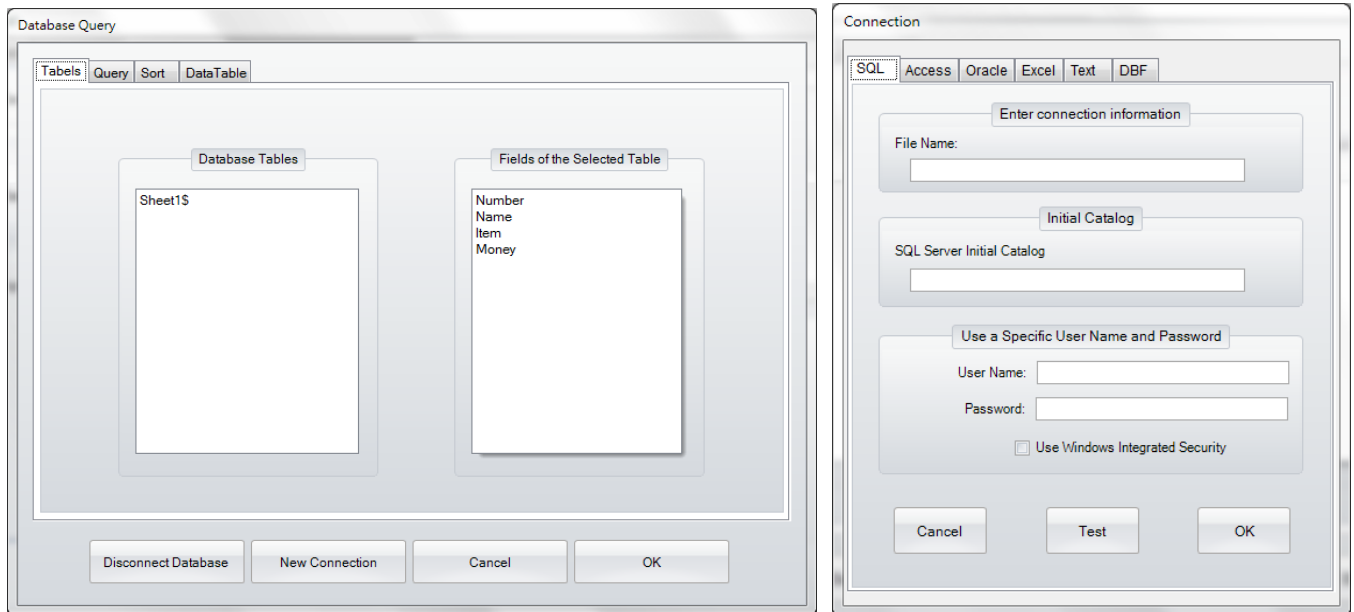

5.5.2 Select Database



- In the dialog of "Database Query", selecting "Data Table" will show the Excel file contents as below.

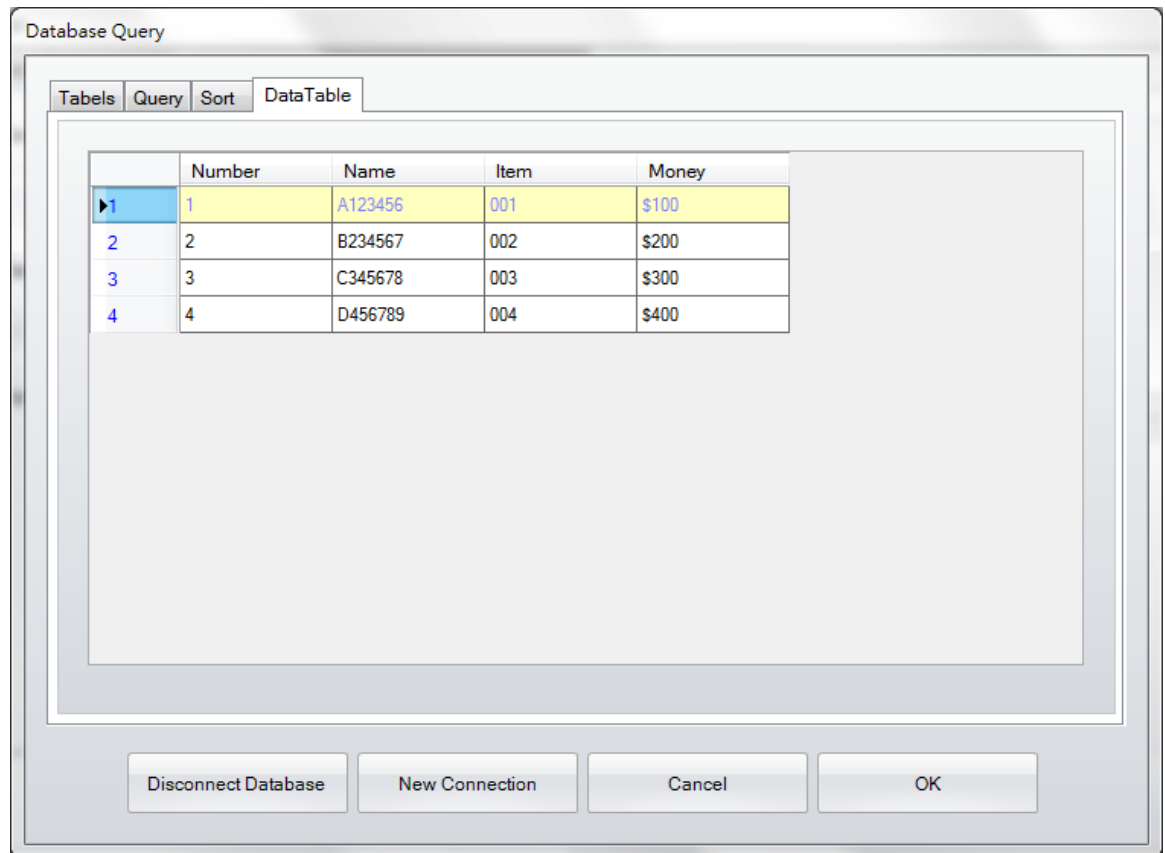

GoLabel On-line Help


For example with "Text Setup" dialog:


- When the database is connected successful, the object dialogs – Barcode, Text and Graphic may link to "Database" by click "Insert Fields" and select which field will be insert to "TEXT"

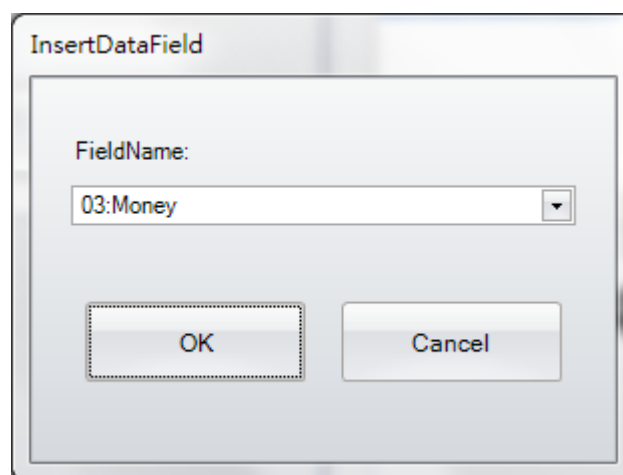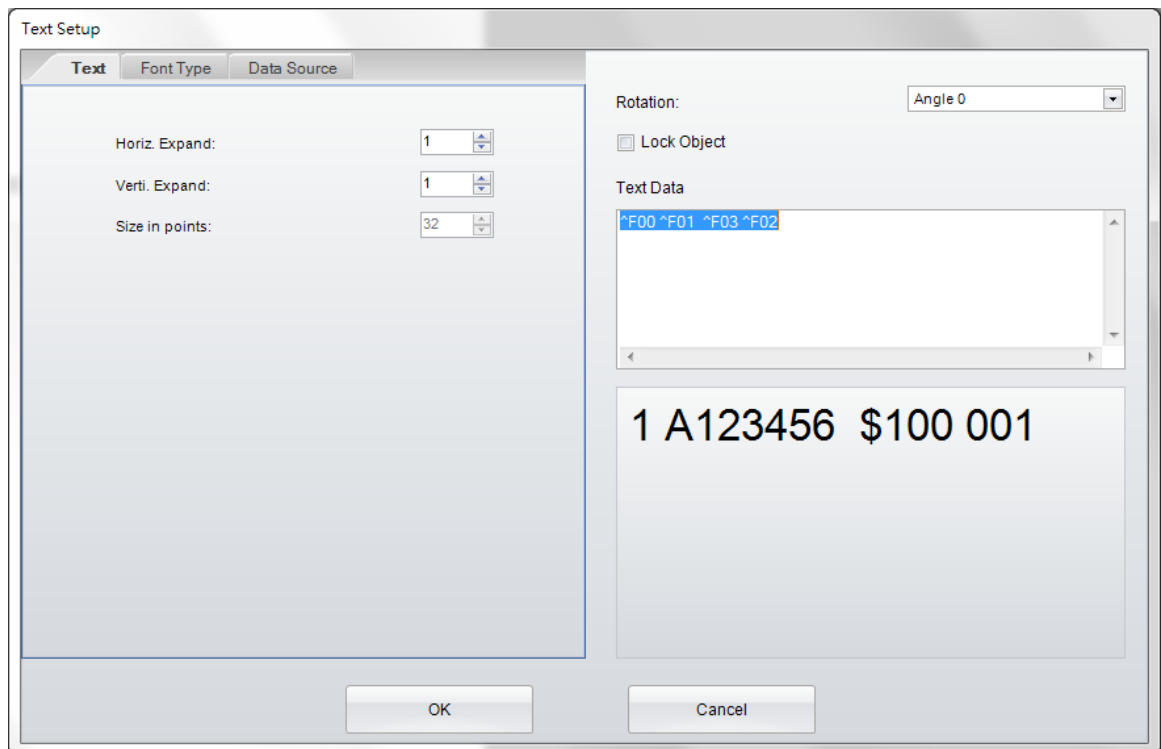


5.6 Printer with LAN Port

5.6.1 Search Printer


- In case the printer is connected by Ethernet LAN port, please click the icon  in "Generic Tool Set"; select "LAN Port" in the dialog of Printer Interface and save then.

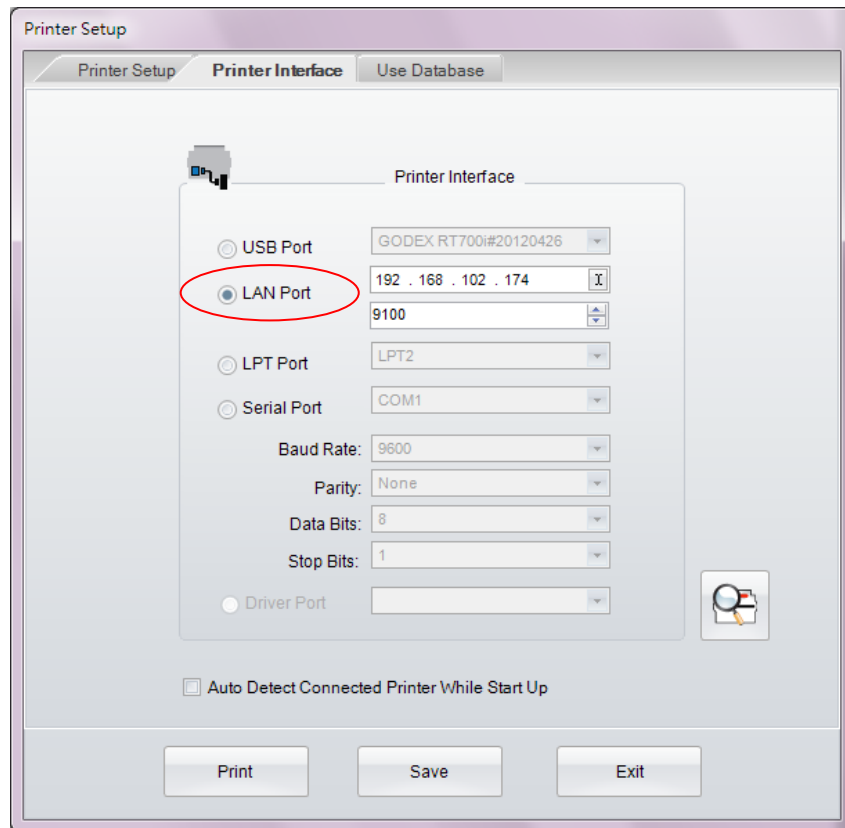


- Next step is to click the icon , which will search to the Ethernet networking and find out where the GoDEX printer is as following dialog.

Alias Name	Serial No.	Mac Address	IP Address	Miscellaneous
Printer				
Godex	000000	00-1D-9A-00-FF-3E	192.168.102.75	9100 BOOT:1.001 F/W: B-LV4-G G1.0G (Dec 18 2013 10.2... PCB: 297000
Godex	000000	00-1D-9A-00-0D-99	192.168.102.76	9100 BOOT:1.0000 F/W: ZX1200i V2.001 (Dec 10 2013 09.5... PCB: 271010
GoLabel				
BettyTsou		C8-60-00-8D-8D-22	192.168.102.31	Version: 1.0.5099.29682 Build Date:2013/12/17
TerryChou		AC-22-0B-8B-93-6E	192.168.102.74	Version: 1.0.5085.30068 Build Date:2013/12/13

5.6.2 Setting IP Address

Click the icon , the IP address will be get from DHCP Server automatically, or select "Static IP" to key in it by user manually.

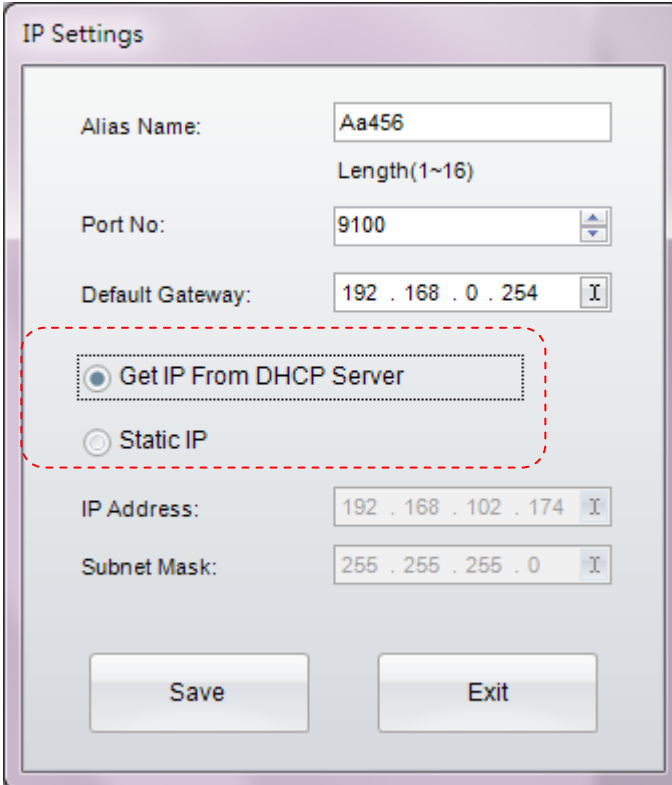




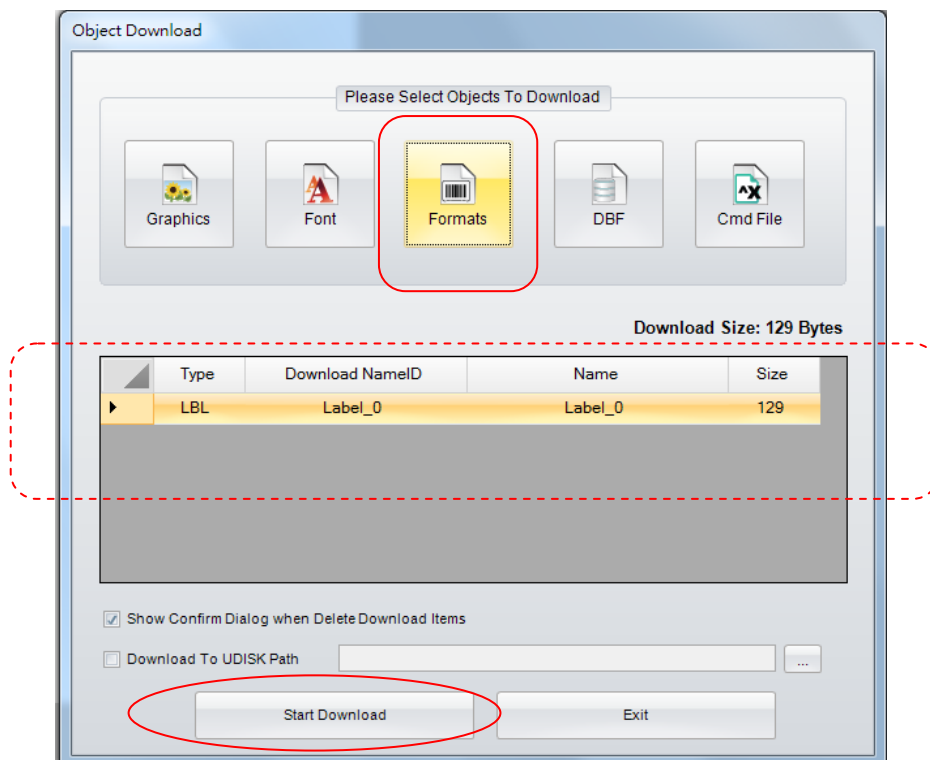
The image shows a dialog box titled "IP Settings". It contains several input fields and two radio buttons. The "Alias Name" field is set to "Aa456" with a note "Length(1~16)". The "Port No." field is set to "9100". The "Default Gateway" field is set to "192 . 168 . 0 . 254". There are two radio buttons: "Get IP From DHCP Server" (which is selected and highlighted with a red dashed box) and "Static IP". Below the radio buttons, the "IP Address" field is set to "192 . 168 . 102 . 174" and the "Subnet Mask" field is set to "255 . 255 . 255 . 0". At the bottom, there are "Save" and "Exit" buttons.


Alias Name:	Aa456
Length(1~16)	
Port No:	9100
Default Gateway:	192 . 168 . 0 . 254
<input checked="" type="radio"/> Get IP From DHCP Server	
<input type="radio"/> Static IP	
IP Address:	192 . 168 . 102 . 174
Subnet Mask:	255 . 255 . 255 . 0
Save Exit	

5.7 Download Graphic/Font/Label/DBF/Cmd


5.7.1 Download Font


- Click the icon  then entering to the dialog "Object Download". Click the icon  and then select "Font" to download.
- Select Font, type, size and others in the Windows dialog, then click "OK" to download. The Font ID can be selected from VA to VZ in the dialog of "Please Select a Font ID" or use the default ID name in the sub-dialog.
- In some advance models (RT200i, RT700i, EZ2250i), they all have an USB Host port that can plug-in "USB Memory Stick" for Graphic, Font, Label, DBF and Cmd download.
- Click the icon "Printer Control"  in "Advance Tool Set" and select "Switch the Memory" to either "Flash", or "Extended Memory" (this function only for the model it has an "External USB Memory Stick"). While all the fonts are selected, click "Start Download" to download fonts to either – "Flash Memory" in printer, or "USB Memory Stick" if it plug-in.
- When user plug-in "USB Memory Stick" to the advance "I" model printer. The printer will switch the "User Memory" from internal "Flash" to external "Extended Memory" immediately unless remove the USB Memory Stick out or user reselect back to "Flash" by the menu "Switches the Memory" at the icon of "Printer Control".
- Detail operation of the icon of "Printer Control", please refer to chapter 7.1



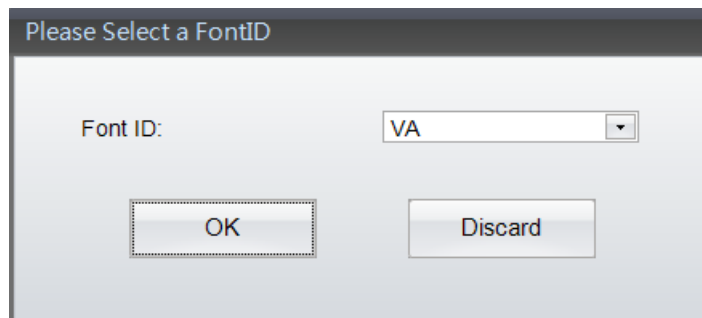

5.7.2 Check Download files in Flash or Extended Memory

- User can check the status of download file by click the icon "Synchronize Printer and GoLabel Object Record"  in "Advance Tool Set"
- The dialog below shows that both (one Bitmap Font and one Label) are downloaded to the memory either - Flash or Extended Memory which is selected by default or by GoLabel manually.


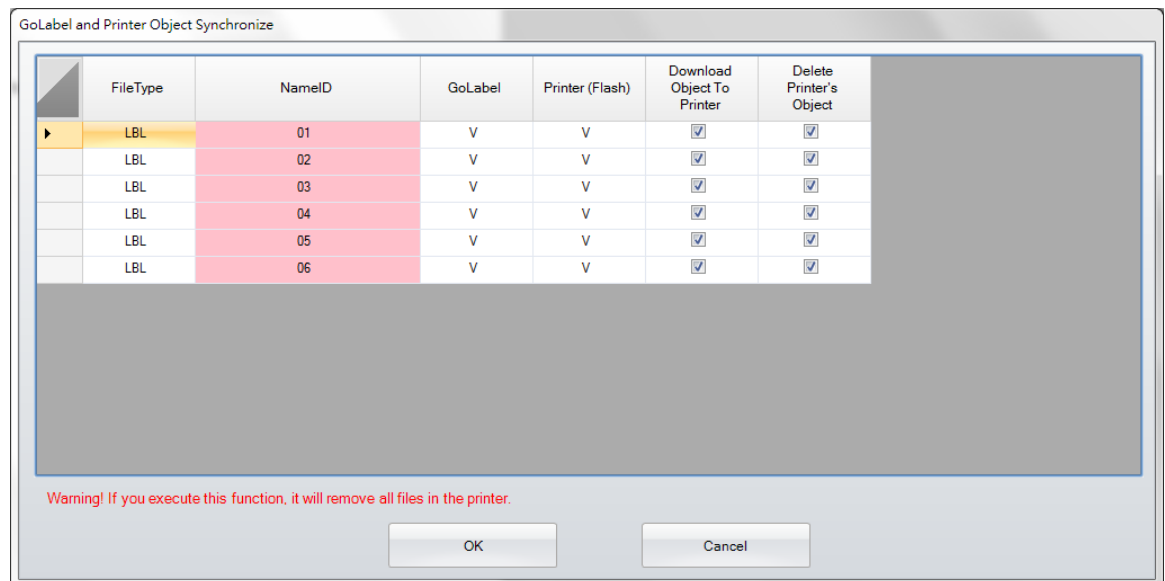


5.7.3 Download Label Format

- Click the icon  in the "Advance Tool Set" and entering to the dialog "Object Download".




Click the icon "Label Formats", it will select current "Label Source" and asking the name in the sub-dialog, then click "Start Download" to download "Label Format" to the User Flash of the printer.

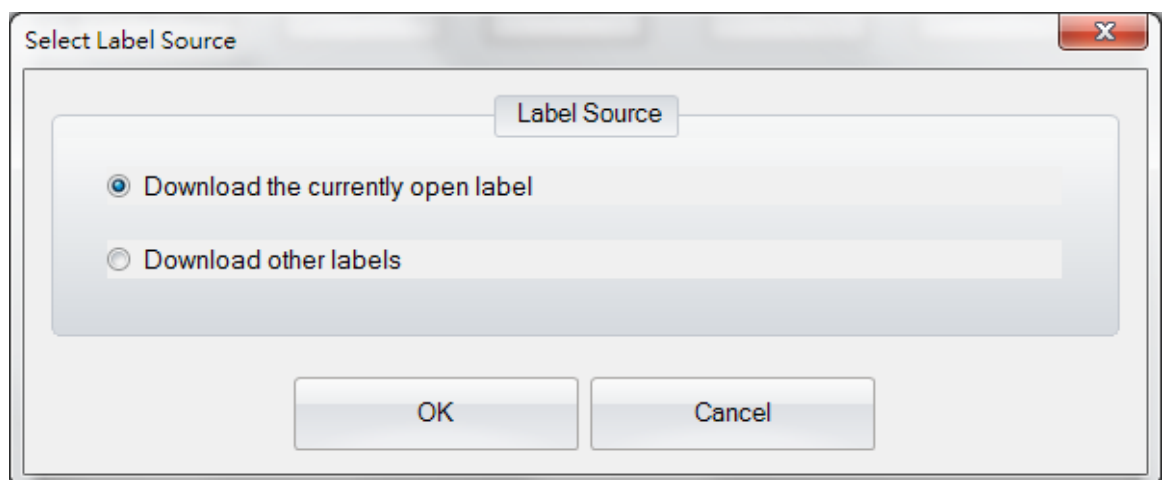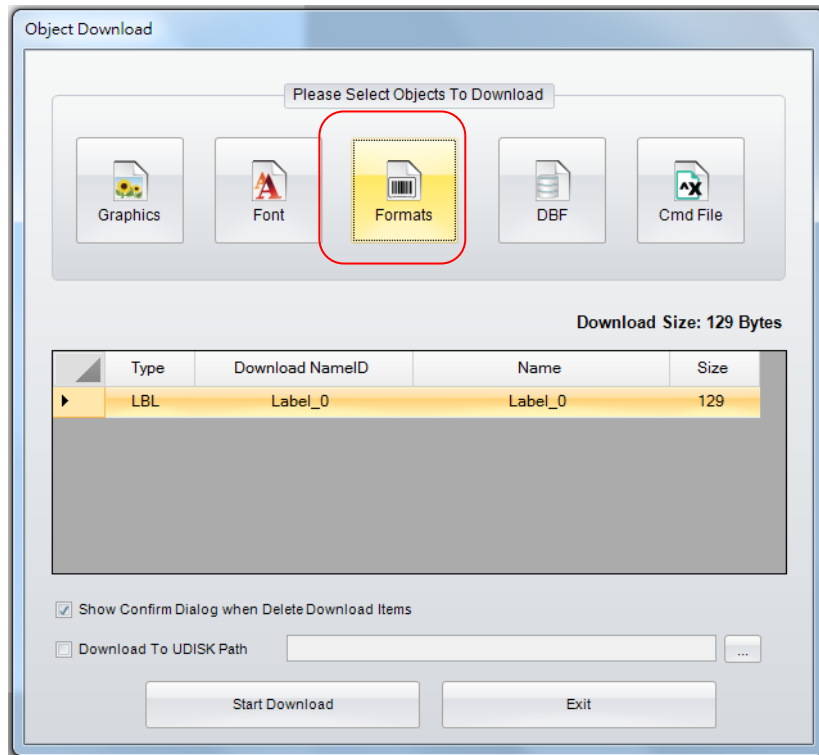


5.7.4 Other Object

- The download procedures of other objects (Graphic, DBF and Cmd) are all similar to the Font and Label of above; they are all downloaded to the available space of either "Flash" or "Extended Memory" that selects by printer default or by user at GoLabel in manually.


5.7.5 Delete Printer Object


- Click the icon "Delete Printer Object"  and select which objects want to delete by right key of mouse and click "Delete" to remove them.
- Only Graphic and Label are able to preview in the Window of "Object Thumbnail" while cursor move to the object which user wants to preview.

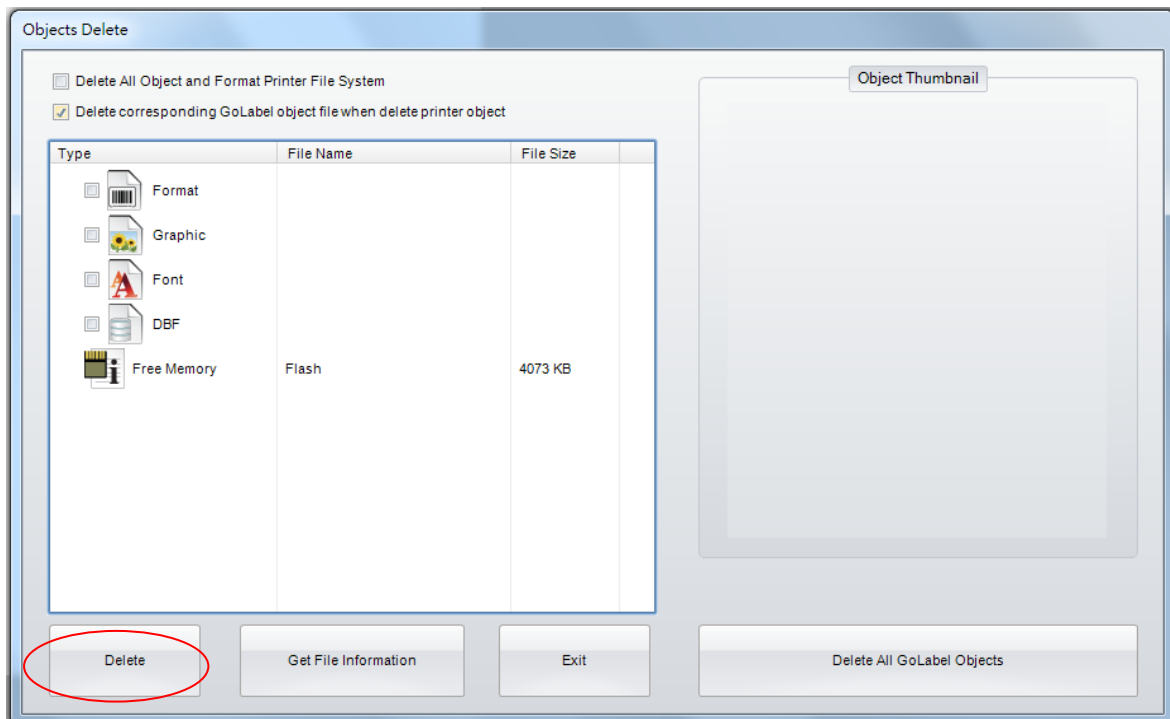

5.7.6 Synchronize GoLabel Objects with Printer

This Function will synchronize the downloaded objects in GoLabel to the connecting printer.


- Click the icon "Synchronize Printer and GoLabel Object Record"  in "Advance Tool Set", entering into the dialog "GoLabel and Printer Object Synchronize" which will display what object is existed in the connecting printer and GoLabel itself.

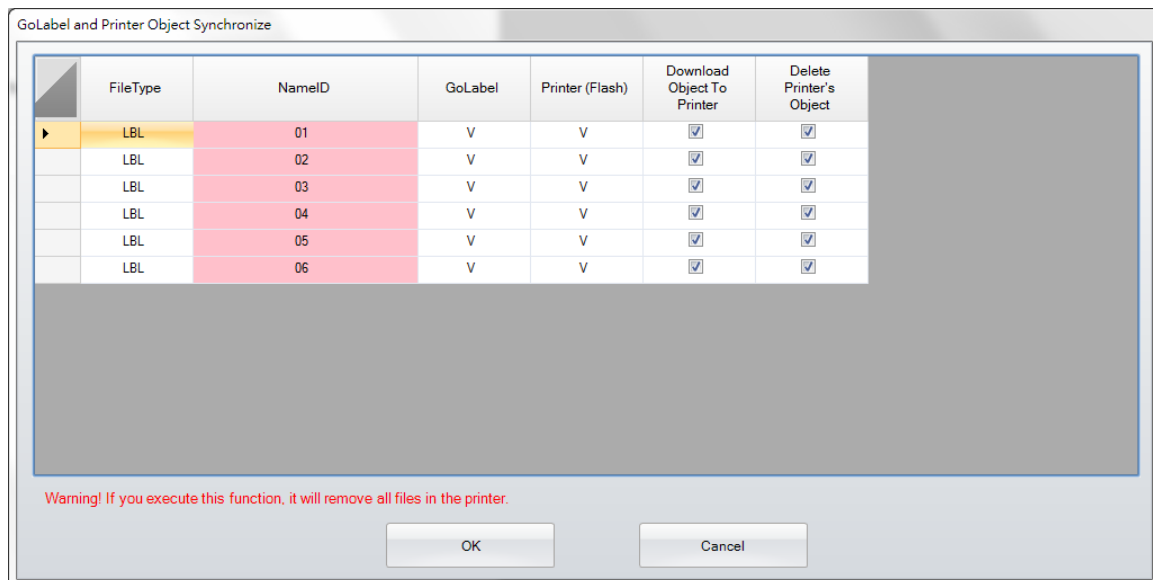


5.8 USB Disk Access Function

5.8.1 Main Display Screen


- Click right button of mouse and select "USB Disk Access".

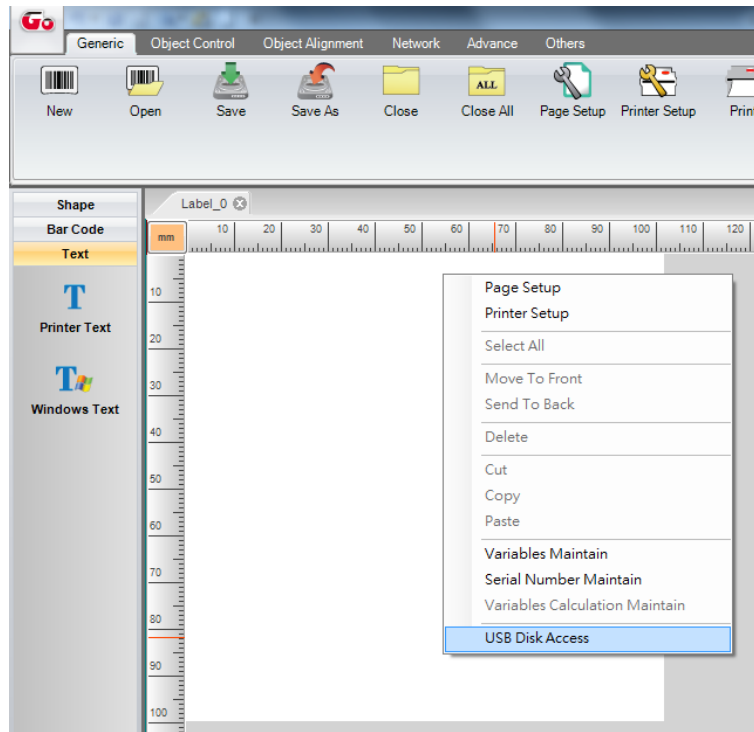


- File type which can be downloaded are Labels, Graphics, Fonts, TTF, TTF Table and DBF. Setup "USB Disk Path" where you are going to save the files. Select file type which would like to download.

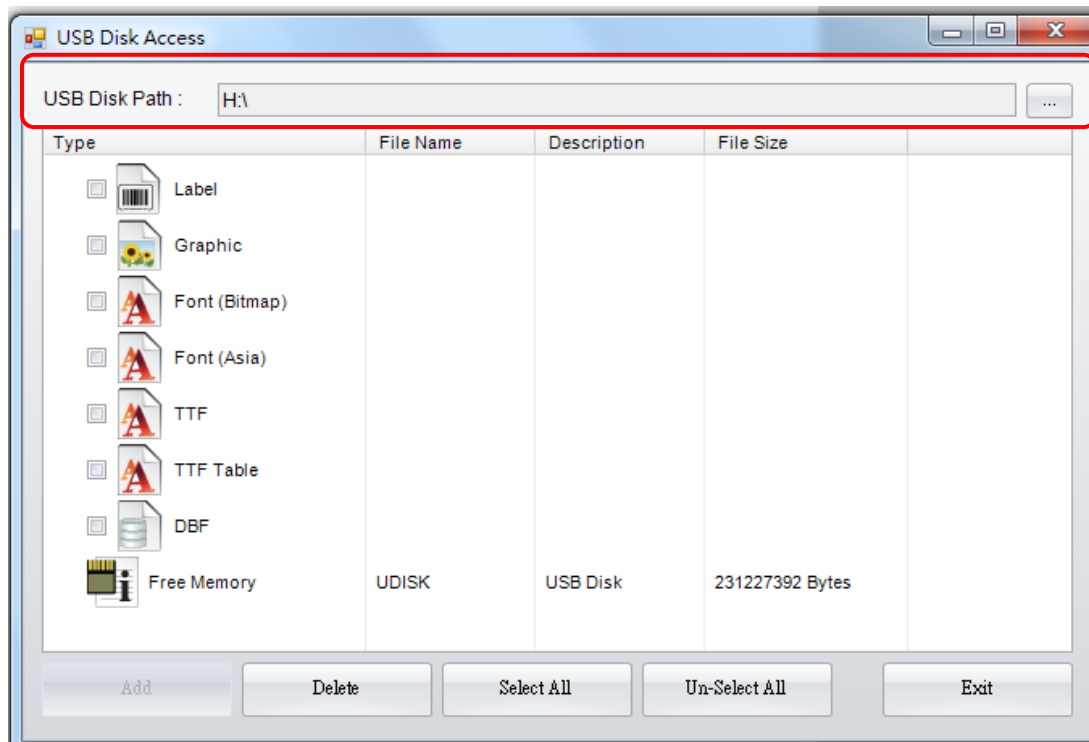


- Input relevant settings and click OK.

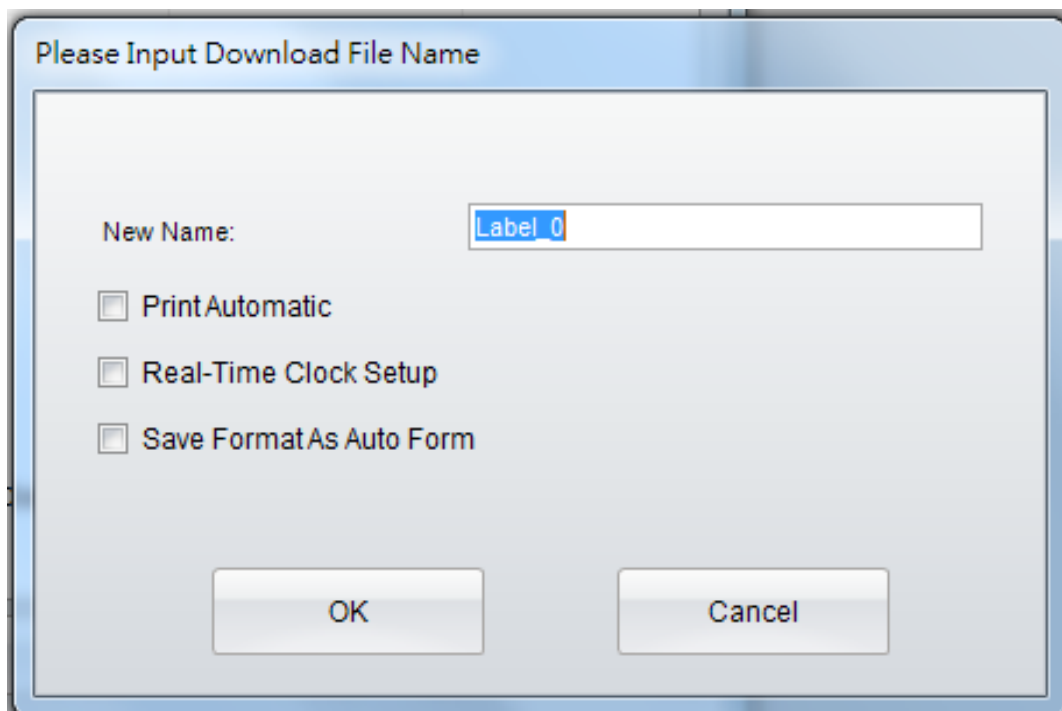

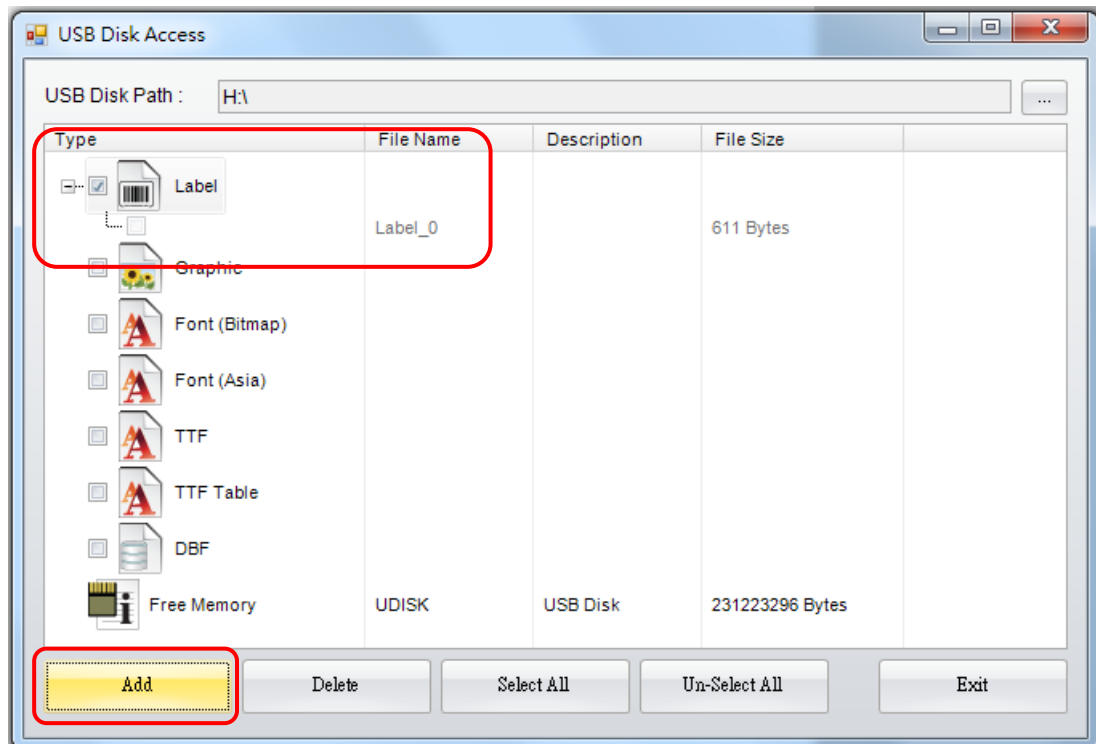


- LABELDIR folder will be created automatically. Downloaded file will be saved in the subdirectory. (for example: H:/LABELDIR/LBL)

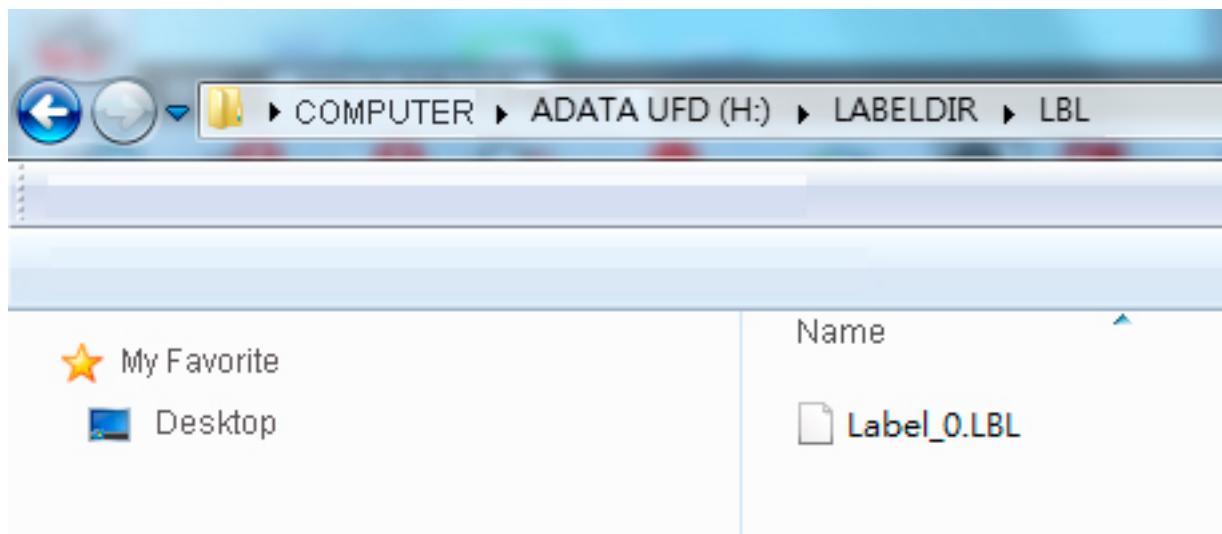


- Put the USB disk onto printer. Printer can recall label file and carry out standalone operation.

5.8.2 Text Setup


- Click Printer Text of Object tool set on the left side and select "Font Type" tape. Check "Download Font To UDisk (USB Disk)" and setup UDisk Path.

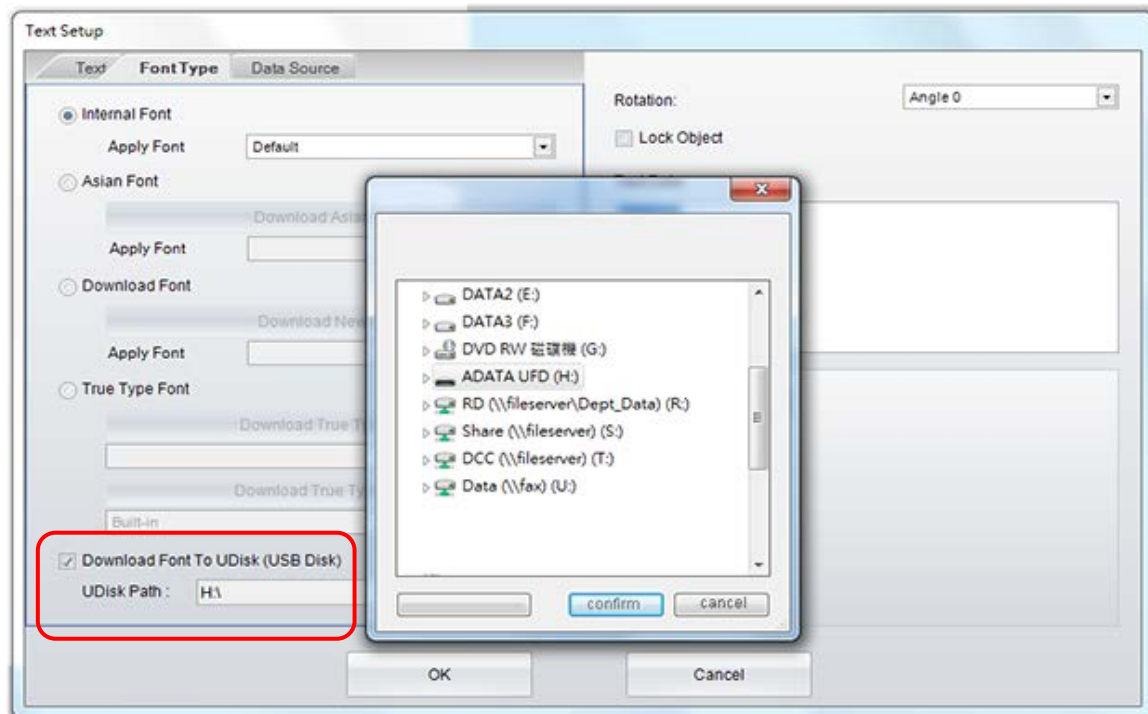


- Select to font type you are doing to download.

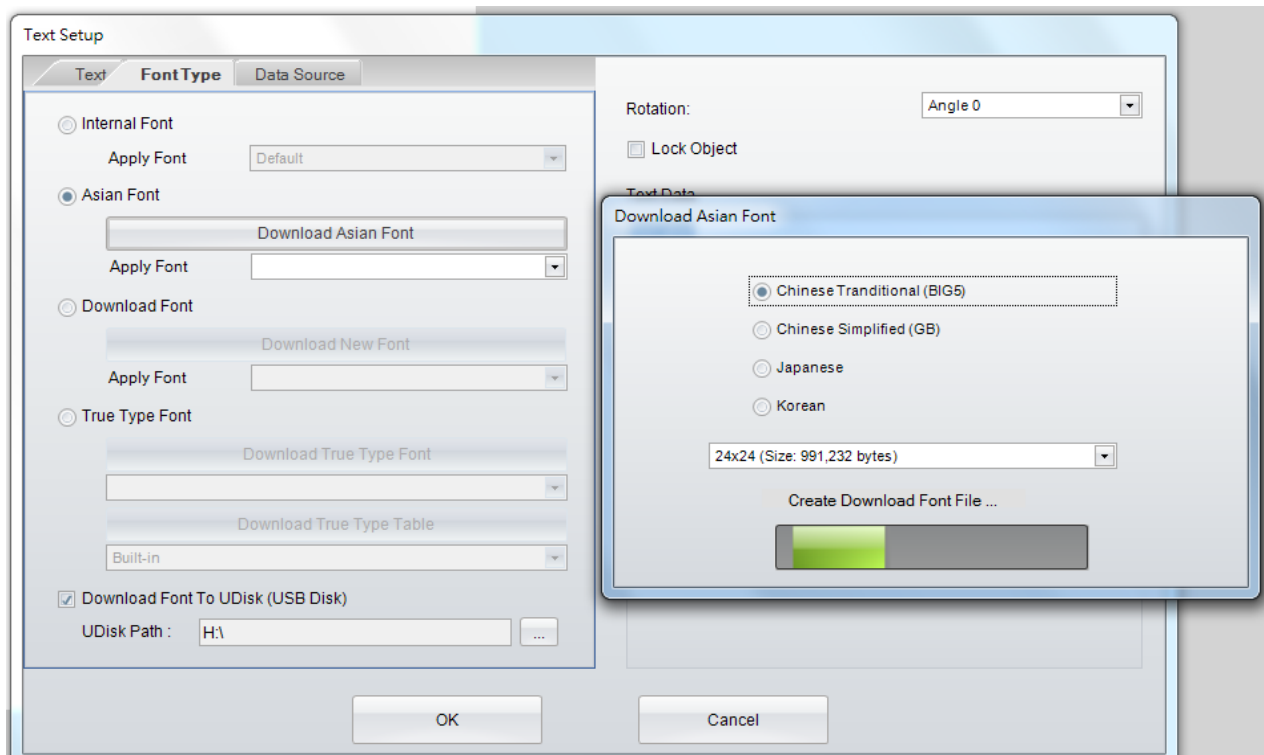


- Font downloaded.

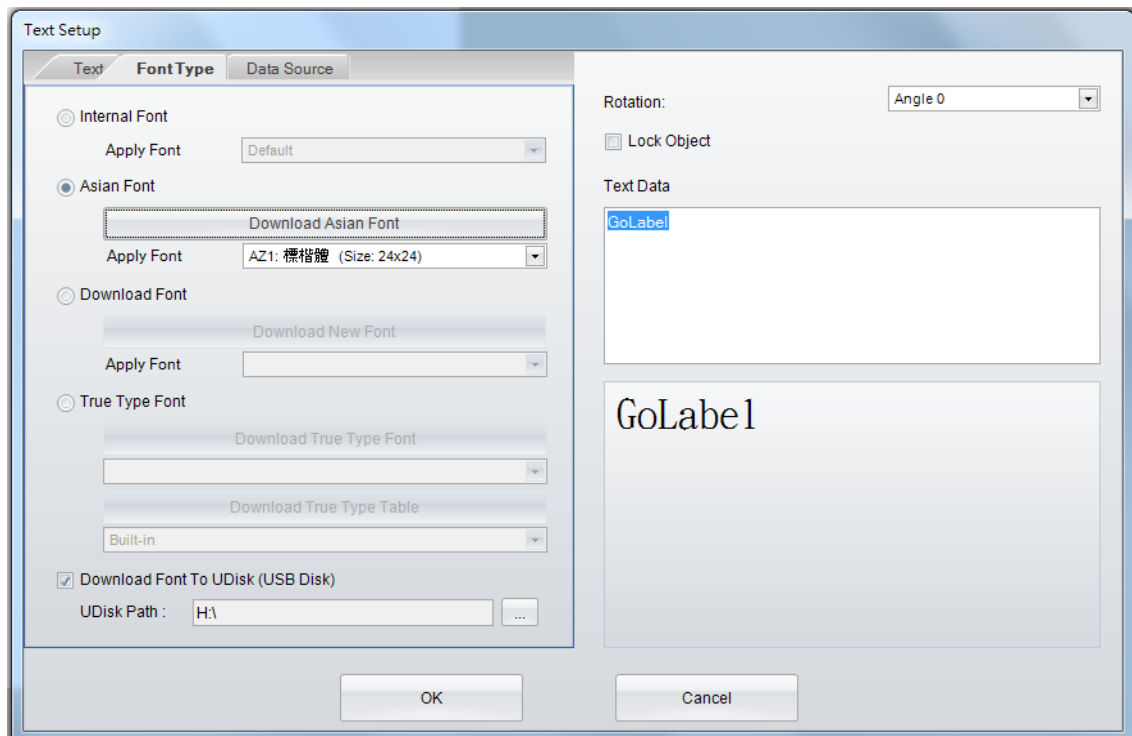


- LABELDIR folder will be created automatically. Downloaded file will be saved in the subdirectory.
(for example: H:/LABELDIR/ ASIAFONT)

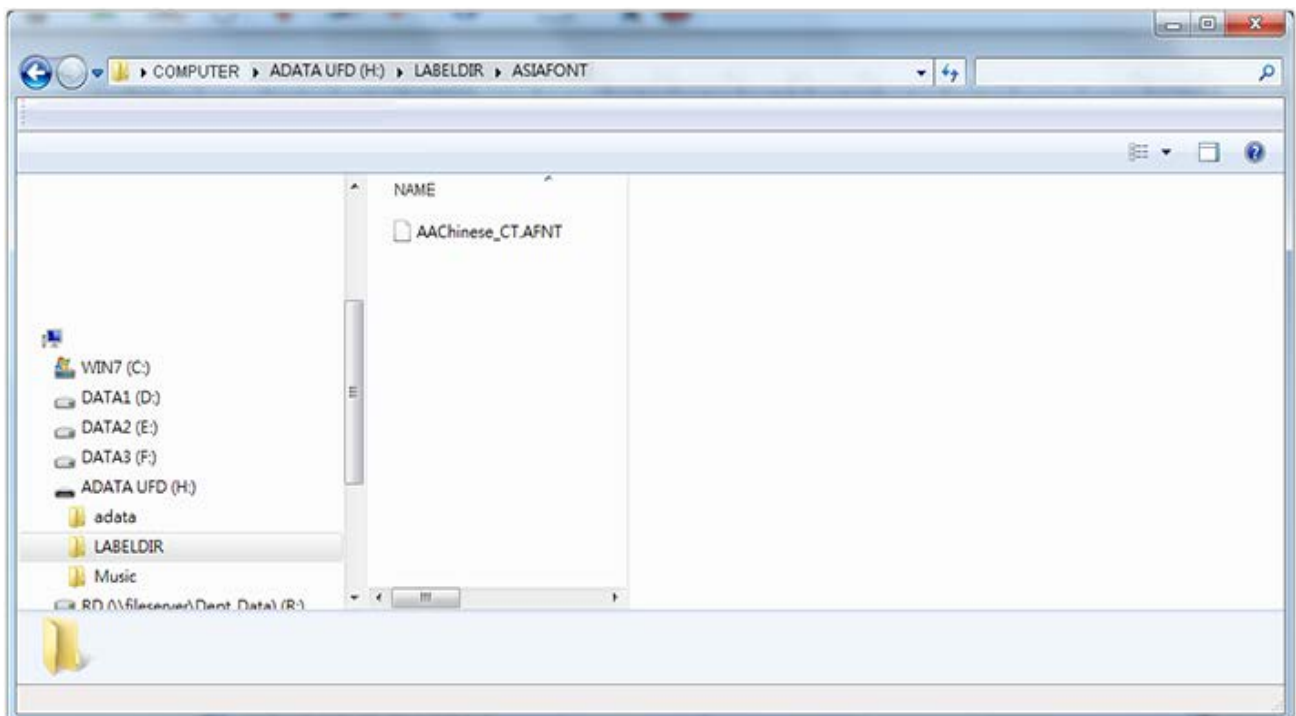


5.8.3 Download Objects to Printer

- Click  on the Advance tool set. Check the box and setup the Download To UDisk Path. Select the objects you are going to download then click "Start to Download" button.

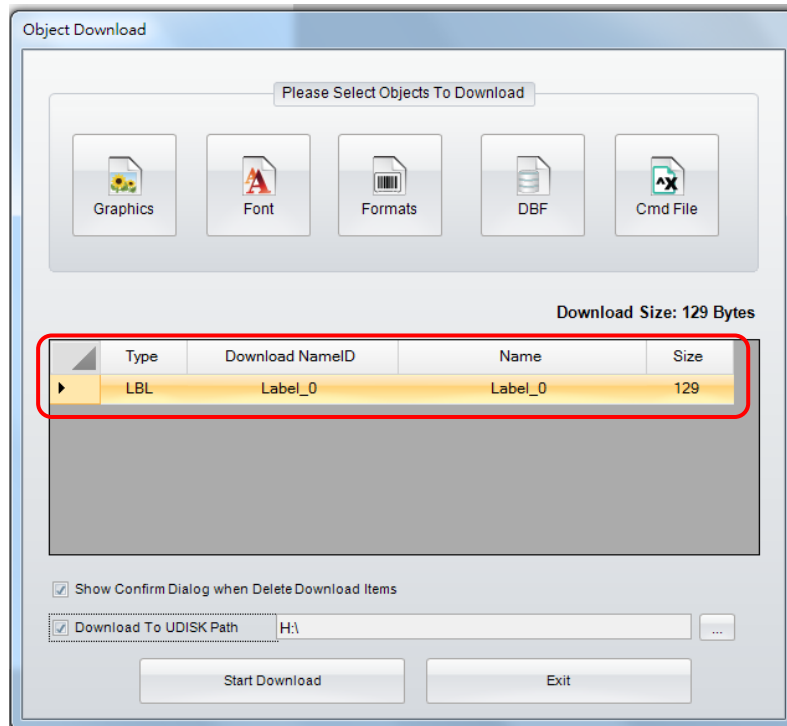

Check the downloaded file in the USB disk. LABELDIR folder will be created automatically. Downloaded file will be saved in the subdirectory. (for example: H:/LABELDIR/LBL)

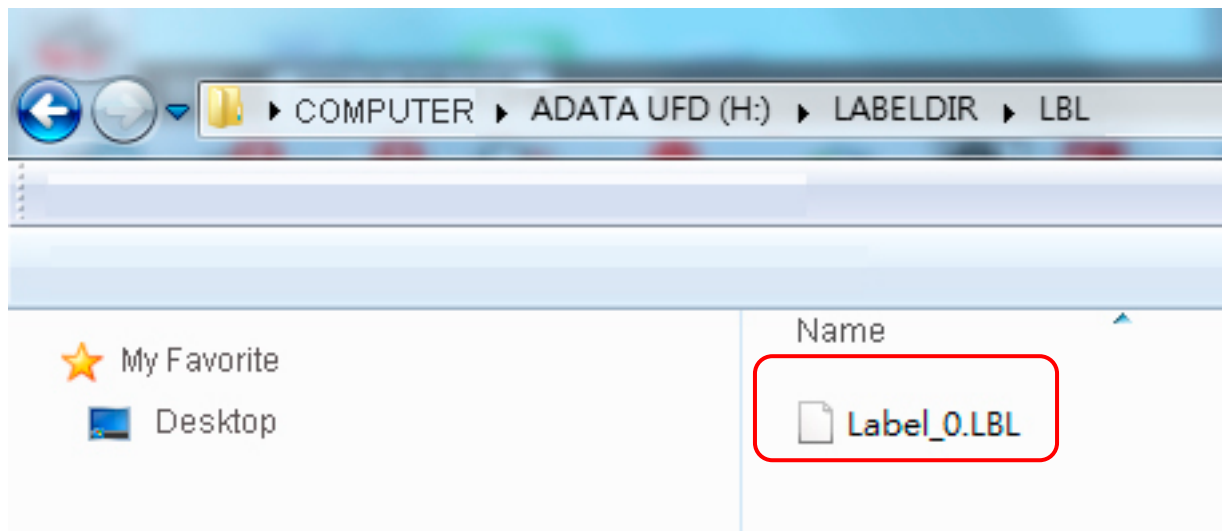

6. Barcode Application

6.1 EAN-128 / GS1 Databar with AI

6.1.1 Application Identifiers

GoLabel supports the data format of Application Identifiers (AI) for EAN-128. The data format of AI is consisting by 2 to 4 digits of AI leading code that defines the significant and format of the following subsequence data. For instance, (11) in AI definition is representing the production date; the format is n2+n6. The n2 is meant that AI code is consisted by two digits; following n6 is comprised by 6 digits of the format (YYMMDD) of production date. The detail of how to define AI data format, please refer to the relevant documents of AI definition standard.

In the field of "Bar Code Data" of EAN-128, the data being key-in, GoLabel will display it on the preview window. For example, user key-in "11090227" in the field, it met to n2+n6 AI standard, (11) with production data "090227", then it will convert to "(11)090227" and display in the preview window below.




6.1.2 AI Wizard

1) EAN-128


- GoLabel provides a function "AI Wizard" for user to checking the AI rule of data. If necessary, user may click "AI Wizard" to enter to the dialog that assists user defining the AI code and also helpful to check the corrective of AI rule then.
- In the left side of dialog, it has AI codes for selection and will display a sample format on the top of field for user reference when selected it, such as (11)090423.
- It can be either: input the data (110090227) to the field of "Check Data" by user himself; or, double click the AI code (e.g., 11 Production Data (YY/MM/DD) in the left side of dialog, then it will auto fill-in AI code to the right side of dialog, and input date (090207) to the "DATA" field also.
- Click the "check 1", AI Wizard will check the corrective of input data. If the data is corrected, the dialog will allow user to input next data in following row.
- Repeat the procedure 2nd to 3rd for further data input until finish, i.e., (12) Due Date (YY/MM/DD) and 110526 in second row; and click "Combine" that will integrate all the data together on the field of "Check Data". Please click "OK" that back to main screen and an EAN-128 barcode will be created as follow.



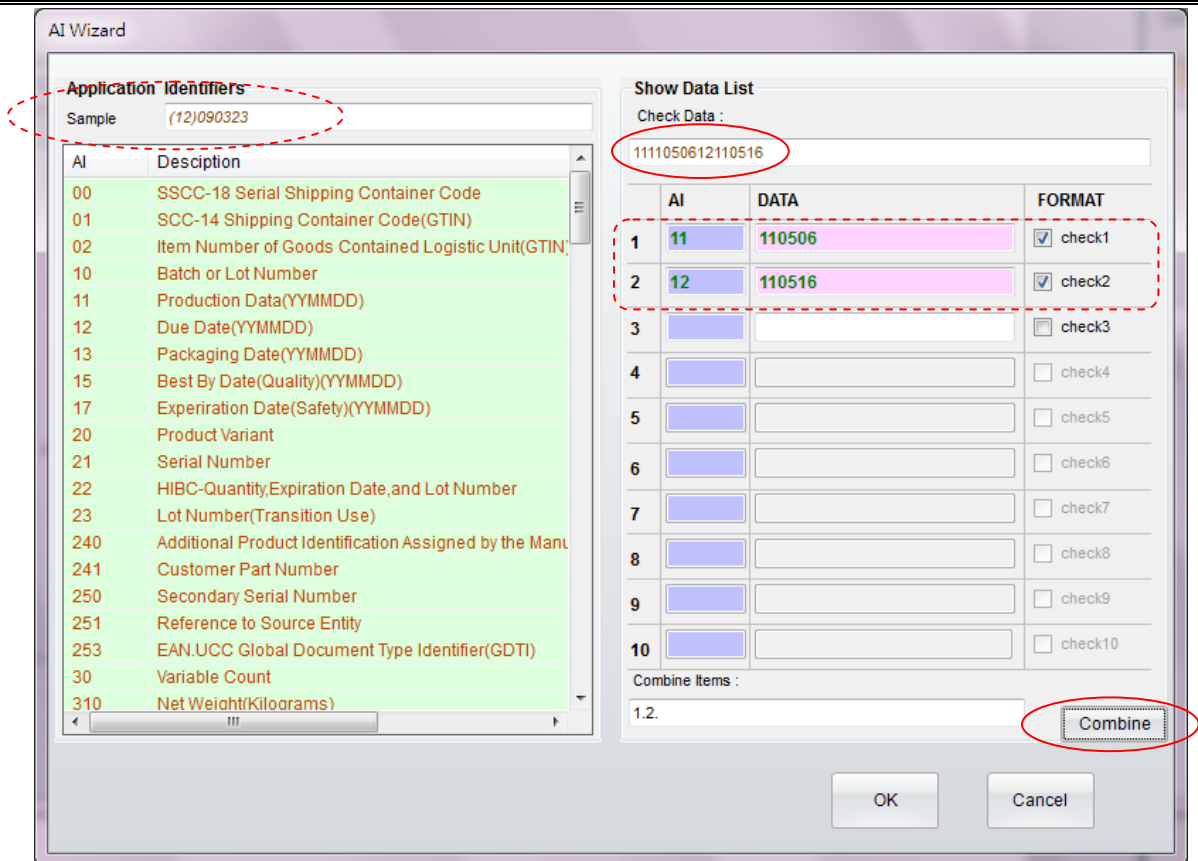


2) GS1 Databar


- Not just AI Wizard in EAN-128 of 1D barcode, the GS1 Databar Expanded and GS1 Databar Expanded Stacked also provide AI Wizard in their dialog of GS1 DataBar Setup as below.
- Select Symbology and click Expanded or Expanded Stacked. An icon of AI Wizard in the subdialog can be clicked to assist user defining the AI code and also helpful to check the corrective of AI rule then.
- The Detail, please referring "AI Wizard" in previous chapter.

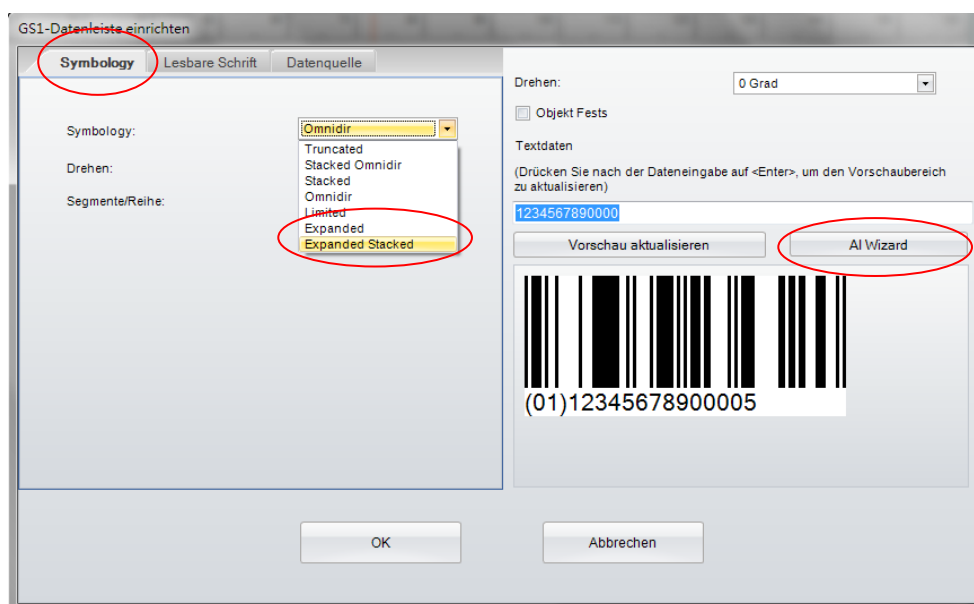



7.1 Printer Control

The icon "Printer Control"  can be clicked to provides 10 functions for printer control and status display as follow:

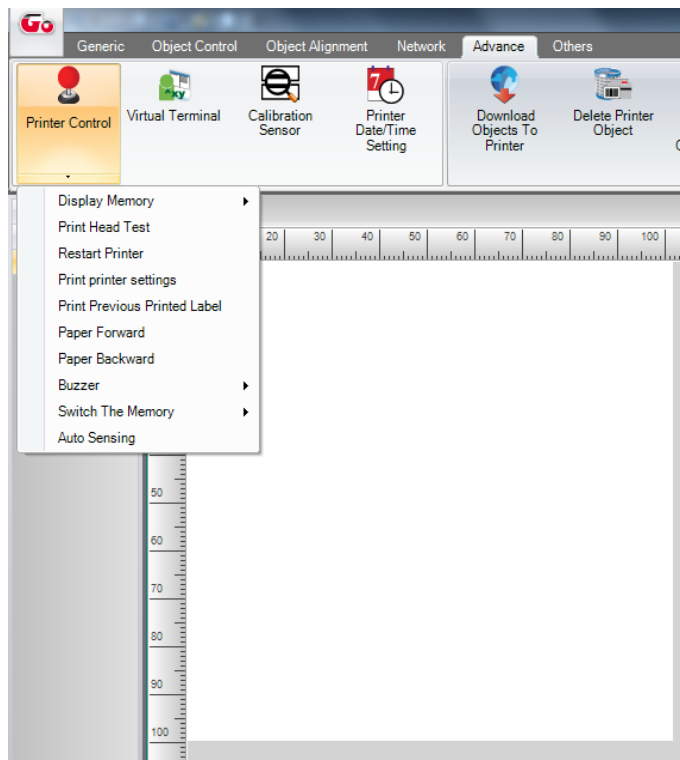- **Display Memory** : it will print the entire file name of either - Label Format, Graphic, Font, Asian Font and free space of the internal and external USB memory on label by selection
- **Print Head Test** : Make a print head testing and print a net pattern on a label of the printer
- **Reset Printer** : Warm start up the printer that clears and resets the DRAM memory
- **Print printer settings** : it will print the model name, F/W version, system configuration and parameters out on the labels .
- **Print Previous Printed Label**: A last printed label will be reprinted again
- **Paper Forward** : Directly move the printer forward by user selecting mm
- **Paper Backward** : Directly move the printer backward by user selecting mm
- **Buzzer** : Set the buzzer of printer to On or Off
- **Switch the Memory** : Switch memory to either – internal Flash or Extended USB Memory stick
- **Auto Sensing** : Auto sensing and detecting the specification of media



7.2 Virtual Terminal

- 1) Click the icon "Language"  to set the preferring language for user that up to 19.
- 2) Click the icon "Style Settings"  to set the preferring color to GoLabel operation screen, such as Office 2007, Office 2010 or Windows 7 °

